

The  
**STRAINRITE**  
Companies | World Class  
Filtration

**PROCESS  
FILTRATION  
2020  
MASTER  
CATALOG**



# Mem-PLEAT E & Pur-MAXX E

Pleated Polyethersulfone Membrane

▶ LIQUID CLARIFICATION  
▶ GENERAL-USE  
WATER FILTRATION

▶ CHEMICAL FILTRATION  
▶ DEIONIZED  
WATER SYSTEMS

Strainrite's [Pleated Polyethersulfone Membrane Cartridges](#) were developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.

Hydrophilic asymmetric polyethersulfone membrane ensures excellent flow rates, broad chemical compatibility, low protein binding, low extractability, high mechanical strength, and temperature resistance in a variety of applications for the biopharmaceutical, microelectronics, chemical, food and beverage industries.

These cartridges meet USP Biological Reactivity Test, in vivo for class VI-121°C plastics. Sterilizable using industry recognized and accepted methods.

The Pur-MAXX E now offers a Special Pleat option, which provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.

- ▶ HIGH SURFACE AREA MEMBRANE OFFERS EXCELLENT LIFE AND FLUX RATES, WHILE PROVIDING ABSOLUTE-RATED FILTRATION
- ▶ ABSOLUTE-RATED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY
- ▶ LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME
- ▶ INTEGRITY TESTED
- ▶ THERMALLY BONDED CONSTRUCTION WITHOUT THE USE OF ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES
- ▶ HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI-AUTOClave CYCLES
- ▶ ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21, PHARMACEUTICAL GRADES ARE BIO-SAFE IN ACCORDANCE WITH USP CLASS VI
- ▶ NON FIBER-SHEDDING POLYESTER AND POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION
- ▶ PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER ELEMENT
- ▶ PHARMACEUTICAL GRADE ELEMENTS ARE 100% INTEGRITY TESTED

## SPECIAL PLEAT OPTION:

- ▶ OPTIMIZED PLEAT GEOMETRY
- ▶ EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%



## ORDER GUIDE



## ABSOLUTE RATED RETENTION

0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1.2

## MAXIMUM DIFFERENTIAL PRESSURE

Forward:  
75 psid (5.1 bar) @ 75°F (24°C)  
40 psid (2.8 bar) @ 180°F (82°C)

Reverse:  
50 psid (3.4 bar) @ 75°F (24°C)

## MAXIMUM OPERATING TEMPERATURE

180°F (82°C) Continuous Duty Polypropylene

275°F (135°C) Continuous Duty Polyester

## TOXICITY

Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact

## STERILIZATION

Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C)  
Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

Polyethersulfone

## END CAPS

Polypropylene  
Polyester

## PLEAT SUPPORT MATERIAL

Polypropylene  
Polyester

## CAGE/CORE

Polypropylene  
Polyester

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

Thermal Bond

## OUTSIDE DIAMETER

MPE: 2.55" (6.48cm) | PRMXE: 2.7" (6.87cm)



## APPROXIMATE SURFACE AREA

6.8 square feet per 10" equivalent

## LENGTHS

5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)

## PERFORMANCE CHARACTERISTICS

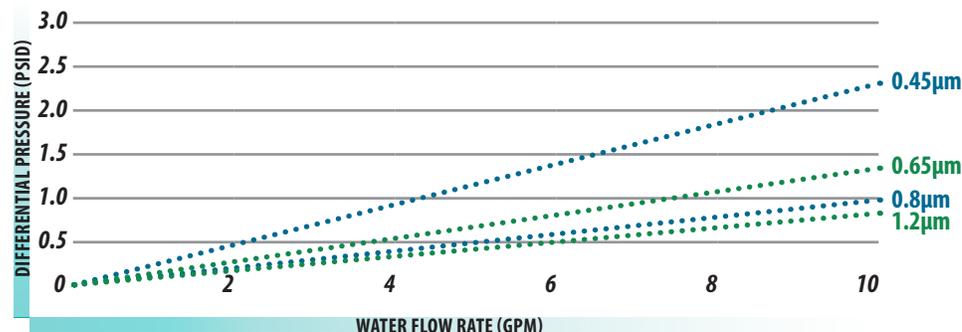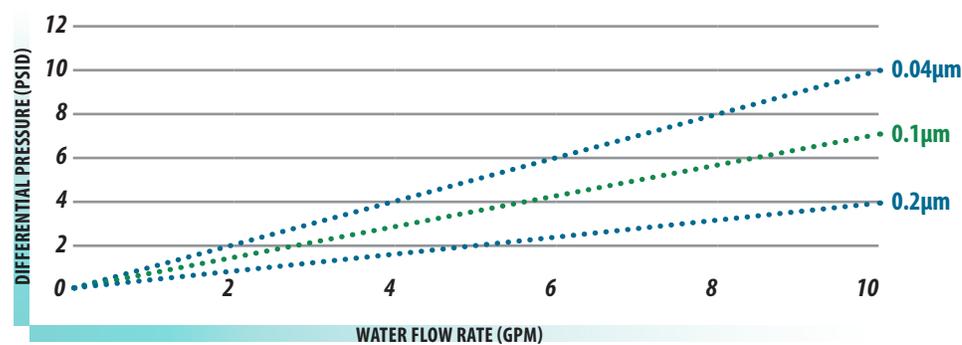

## ORDER OPTIONS

CARTRIDGE	
MPE PRMXE	Mem-Pleat E (2.55") Pur-MAXX E (2.7")
MICRON RATINGS	
0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1.2	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
5	Water
CARTRIDGE OPTIONS	
I DIF APH	316 SS Insert DI Flush All Polyester Hardware
SPECIAL PLEAT OPTION	
SP	Special Pleat (PRMXE only)

# Mem-PLEAT S & Pur-MAXX S

Pleated Polysulfone Membrane

▶ INK JET INKS  
▶ DEIONIZED WATER  
POINT OF USE

▶ HIGH PURITY  
AQUEOUS CHEMICALS  
▶ DEIONIZED WATER  
PRE AND POST FILTER

Strainrite's **Pleated Polysulfone Membrane Cartridges** were developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.

Hydrophilic asymmetric polysulfone membrane ensures excellent flow rates, broad chemical compatibility, low protein binding, low extractability, high mechanical strength, and temperature resistance in a variety of applications for the biopharmaceutical, microelectronics, chemical, food and beverage industries.

These cartridges meet USP Biological Reactivity Test, in vivo for class VI-121°C plastics. Sterilizable using industry recognized and accepted methods.

The Pur-MAXX S now offers a Special Pleat option, which provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.

- ▶ **HIGHLY TAPERED ASYMMETRIC PORE STRUCTURE WHICH OFFERS EXCELLENT FLOW RATES AND HIGH SOLIDS LOADING CHARACTERISTICS**
- ▶ **ABSOLUTE-RATED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY**
- ▶ **NON-FIBER SHEDDING POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION**
- ▶ **MAXIMUM PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER ELEMENT**
- ▶ **ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21, PHARMACEUTICAL GRADES ARE BIO-SAFE IN ACCORDANCE WITH USP CLASS VI**
- ▶ **THERMALLY BONDED CONSTRUCTION WITHOUT THE USE OF ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES**

## **SPECIAL PLEAT OPTION:**

- ▶ **OPTIMIZED PLEAT GEOMETRY**
- ▶ **EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%**



## ORDER GUIDE

MPS  
PRMXS0.45  
MICRON  
RATING

-

10  
CARTRIDGE  
LENGTHC1  
END CAP  
CONFIGURATIONS  
GASKET / O-RING  
MATERIALS2  
CARTRIDGE  
GRADEDIF  
CARTRIDGE  
OPTIONS

MPS0.45-10C1S2DIF

## ABSOLUTE RATED RETENTION

0.03, 0.05, 0.1, 0.2, 0.45, 0.65

## MAXIMUM DIFFERENTIAL PRESSURE

Forward:  
75 psid (5.1 bar) @ 75°F (24°C)  
40 psid (2.8 bar) @ 180°F (82°C)Reverse:  
50 psid (3.4 bar) @ 75°F (24°C)

## MAXIMUM OPERATING TEMPERATURE

180°F (82°C) Continuous Duty

## TOXICITY

Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact

## STERILIZATION

Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C)  
Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

Polysulfone

## END CAPS

Polypropylene

## PLEAT SUPPORT MATERIAL

Polypropylene

## CAGE/CORE

Polypropylene

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

Thermal Bond

## OUTSIDE DIAMETER

MPS: 2.55" (6.48cm) | PRMXS: 2.7" (6.87cm)



## APPROXIMATE SURFACE AREA

6.8 square feet per 10" equivalent

## LENGTHS

5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)

## PERFORMANCE CHARACTERISTICS

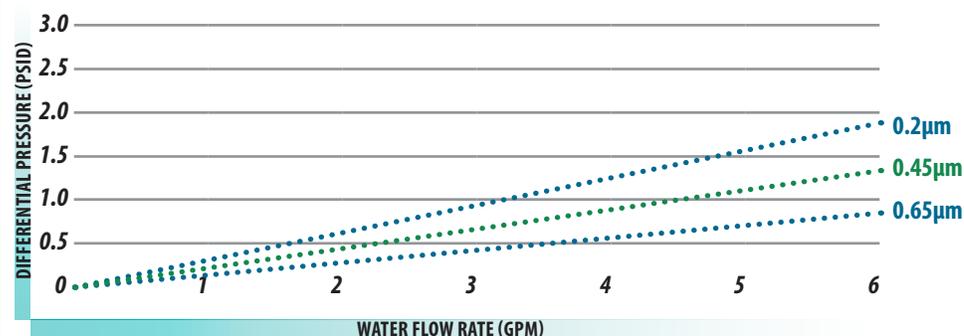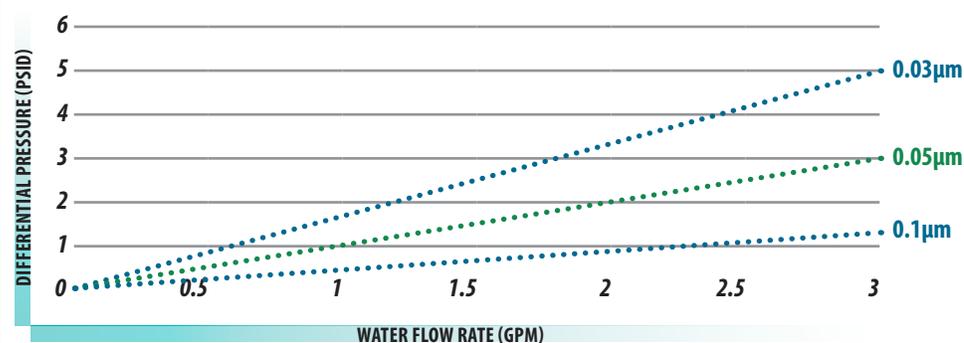

## ORDER OPTIONS

CARTRIDGE	
MPS PRMXS	Mem-Pleat S (2.55") Pur-MAXX S (2.7")
MICRON RATINGS	
0.03, 0.05, 0.1, 0.2, 0.45, 0.65	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
5	Water
CARTRIDGE OPTIONS	
I DIF	316 SS Insert DI Flush
SPECIAL PLEAT OPTION	
SP	Special Pleat (PRMXS only)

# Mem-PLEAT N & Pur-MAXX N

Pleated Nylon 6,6 Membrane

▶ API CHEMICALS  
▶ REAGENT-GRADE  
CHEMICALS

▶ FINE CHEMICALS  
▶ BIOLOGICAL  
FLUIDS

Strainrite's [Pleated Nylon Membrane Cartridges](#) are highly retentive, naturally hydrophilic nylon membrane filters that are specially designed for critical filtration requirements of aqueous fluids.

The Nylon 6,6 membrane, in an all-polypropylene construction\*, provides excellent wet-out characteristics and superior flow performance per surface area as compared to other membrane cartridges. No additives, resins, surfactants or binders are used in the manufacturing process, which dramatically reduces rinse up time, extractables and downtime.

These cartridges are perfectly suited for critical applications where superior flow, and particle removal efficiency between 0.1 and 1.2 micron is required.

The Pur-MAXX N now offers a Special Pleat option, which provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.

*\*Filter medium is cast on a polyester support.*

- ▶ **100% HYDROPHILIC MATERIALS OF CONSTRUCTION THAT ARE FDA LISTED AS SUITABLE FOR CONTACT WITH FOOD AND BEVERAGE**
- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY**
- ▶ **NO ADHESIVES, BINDERS, RESIN OR SURFACTANTS ARE USED DURING MANUFACTURING, RESULTING IN SUPERIOR DOWNSTREAM CLEANLINESS**
- ▶ **LOWER FILTER EXTRACTABLES THAN OTHER HYDROPHILIC MEMBRANES**
- ▶ **HIGH SURFACE AREA, YIELDING LOWER PRESSURE DROPS AND LONGER FILTER LIFE**
- ▶ **NON FIBER-SHEDDING POLYESTER AND POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION**
- ▶ **PHARMACEUTICAL GRADE ELEMENTS ARE 100% INTEGRITY TESTED**
- ▶ **IPA PRE-WETTING NOT REQUIRED**
- ▶ **INTEGRITY TESTABLE**

## **SPECIAL PLEAT OPTION:**

- ▶ **OPTIMIZED PLEAT GEOMETRY**
- ▶ **EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%**



## ORDER GUIDE



## ABSOLUTE RATED RETENTION

0.1, 0.2, 0.45, 0.65, 0.8, 1.2

## MAXIMUM DIFFERENTIAL PRESSURE

Forward:  
75 psid (5.1 bar) @ 75°F (24°C)  
40 psid (2.8 bar) @ 180°F (82°C)

Reverse:  
50 psid (3.4 bar) @ 75°F (24°C)

## MAXIMUM OPERATING TEMPERATURE

180°F (82°C) Continuous Duty Polypropylene

275°F (135°C) Continuous Duty Polyester

## TOXICITY

Cartridge materials meet CFR 21 for food and beverage contact

## STERILIZATION

Cartridge can be sterilized via steam or Autoclave  
Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

Nylon 6,6 cast on Polyester

## END CAPS

Polypropylene  
Polyester

## PLEAT SUPPORT MATERIAL

Polypropylene  
Polyester

## CAGE/CORE

Polypropylene  
Polyester

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

Thermal Bond

## OUTSIDE DIAMETER

MPN: 2.55" (6.48cm) | PRMXN: 2.7" (6.87cm)



## APPROXIMATE SURFACE AREA

6.8 square feet per 10" equivalent

## LENGTHS

5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)

## PERFORMANCE CHARACTERISTICS

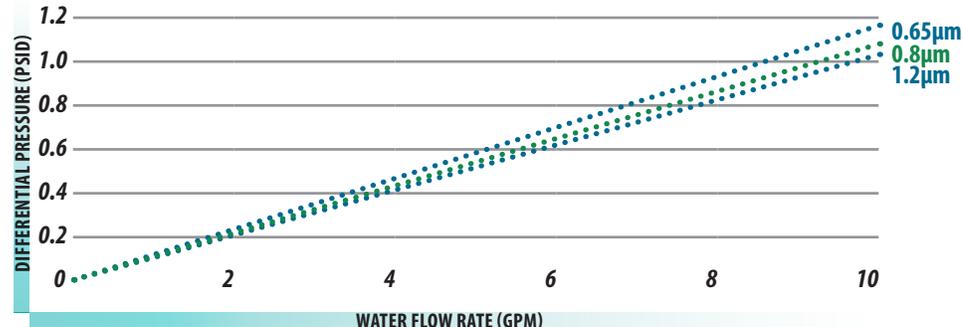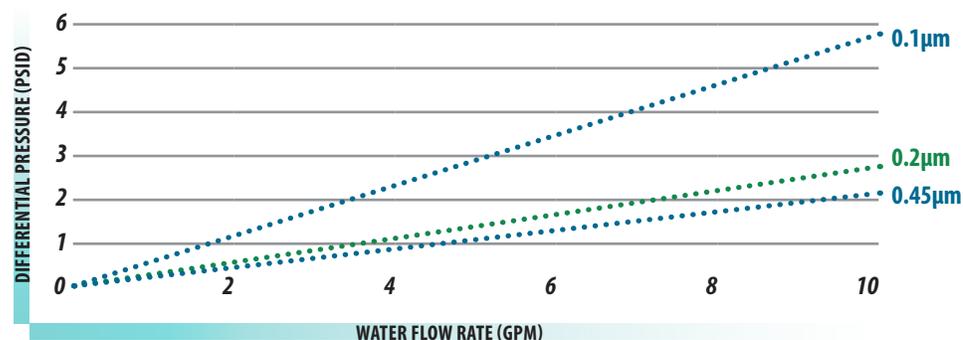

## ORDER OPTIONS

CARTRIDGE	
MPN PRMXN	Mem-Pleat N (2.55") Pur-MAXX N (2.7")
MICRON RATINGS	
0.1, 0.2, 0.45, 0.65, 0.8, 1.2	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
5	Water
CARTRIDGE OPTIONS	
I DIF APH	316 SS Insert DI Flush All Polyester Hardware
SPECIAL PLEAT OPTION	
SP	Special Pleat (PRMXN only)

# Mem-PLEAT CN & Pur-MAXX CN

Pleated Charged Nylon 6,6 Membrane

- ▶ API CHEMICALS
- ▶ REAGENT-GRADE CHEMICALS
- ▶ ENDOTOXIN REMOVAL
- ▶ FINE CHEMICALS
- ▶ BIOLOGICAL FLUIDS
- ▶ SILICA REMOVAL

Strainrite's [Pleated Charged Nylon Membrane Cartridges](#) are manufactured with highly retentive, naturally hydrophilic, Nylon membranes that have an added cationic, positively charged, functional group. The positive surface charge or positive zeta potential, provides enhanced retention of smaller negatively charged particles such as endotoxins by electrokinetic mechanisms.

These cartridges provide absolute particle retention by size exclusion while having the added benefit of removing significantly smaller, negatively charged particles. The charged Nylon 6,6 membrane provides excellent wet-out characteristics and superior flow performance per surface area in an all-polypropylene construction, as compared to other membrane cartridges. These cartridges are perfectly suited for critical applications where superior flow and particle removal efficiency between 0.04 and 1.2 micron is required.

The Pur-MAXX CN now offers a Special Pleat option, which provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.




- ▶ MEETS USP BIOLOGICAL TESTS FOR USP CLASS VI – 1210C PLASTICS, IN VIVO AND CYTOTOXICITY TESTS, IN VITRO
- ▶ 100% HYDROPHILIC MATERIALS OF CONSTRUCTION THAT ARE FDA LISTED AS SUITABLE FOR CONTACT WITH FOOD AND BEVERAGE
- ▶ PHARMACEUTICAL GRADE ELEMENTS ARE 100% INTEGRITY TESTED
- ▶ ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY
- ▶ HIGH SURFACE AREA, YIELDING LOWER PRESSURE DROPS AND LONGER FILTER LIFE
- ▶ POSITIVE ZETA POTENTIAL FOR REMOVAL OF PARTICLES SMALLER THAN ABSOLUTE RATING OF FILTER
- ▶ NON-FIBER SHEDDING POLYESTER AND POLYPROPYLENE SUPPORT MATERIALS ELIMINATES FIBER MIGRATION
- ▶ LOWER FILTER EXTRACTABLES THAN OTHER HYDROPHILIC MEMBRANES
- ▶ IPA PRE-WETTING NOT REQUIRED
- ▶ INTEGRITY TESTABLE


## SPECIAL PLEAT OPTION:

- ▶ OPTIMIZED PLEAT GEOMETRY
- ▶ EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%

# ORDER GUIDE

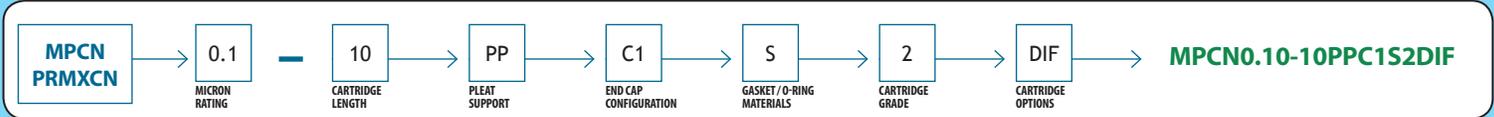

ABSOLUTE RATED RETENTION			
0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1.2			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		Reverse: 50 psid (3.4 bar) @ 75°F (24°C)	
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty Polypropylene		275°F (135°C) Continuous Duty Polyester	
TOXICITY			
Cartridge materials meet CFR 21 for food and beverage contact			
STERILIZATION			
Cartridge can be sterilized via steam or Autoclave Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Charged Nylon 6,6 cast on Polyester	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA	
MPCN: 2.55" (6.48cm)   PRMXCN: 2.7" (6.87cm)		6.8 square feet per 10" equivalent	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
PERFORMANCE CHARACTERISTICS			

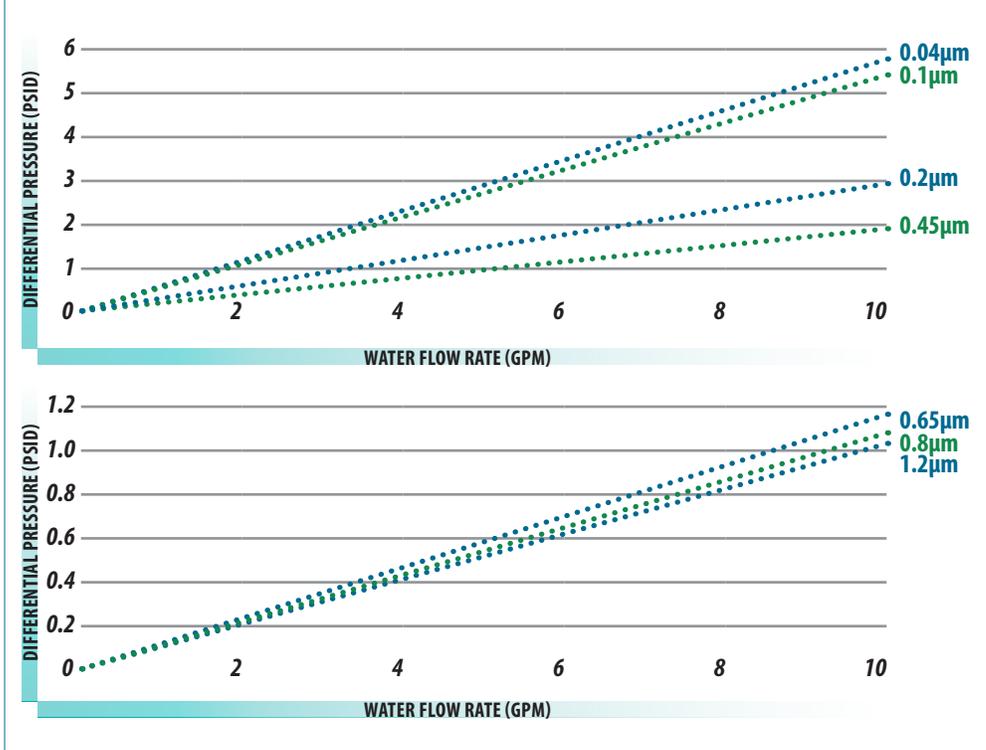

## ORDER OPTIONS

CARTRIDGE	
MPCN PRMXCN	Mem-Pleat CN (2.55") Pur-MAXX CN (2.7")
MICRON RATINGS	
0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1.2	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
5	Water
CARTRIDGE OPTIONS	
I DIF APH	316 SS Insert DI Flush All Polyester Hardware
SPECIAL PLEAT OPTION	
SP	Special Pleat (PRMXCN only)

# Mem-PLEAT T & Pur-MAXX T

Pleated PTFE Membrane

▶ PHOTORESISTS  
▶ ELECTRONIC GRADE  
SOLVENTS

▶ PHARMACEUTICAL  
SOLVENTS  
▶ HOT DEIONIZED WATER

Strainrite's [Pleated PTFE Membrane Cartridges](#) were developed for critical filtration applications where PTFE and polypropylene materials are compatible.

Utilizing a proprietary PTFE membrane casting method we are able to achieve a pore configuration that optimizes cartridge flow rates with absolute and reliable particle and microorganism retention. This unique combination of features positions them as one of the most reliable and economical PTFE membranes in the market.

These cartridges are manufactured and tested in our 3rd party certified clean room with components that meet USP Class VI Biological Reactivity Test resulting in extremely low extractables. These high purity elements are perfect for biopharmaceutical, microelectronics and high purity chemical applications.

The Pur-MAXX T now offers a Special Pleat option, which provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.



- ▶ PHARMACEUTICAL GRADE ELEMENTS ARE 100% INTEGRITY TESTED
- ▶ HIGH FLOW RATES
- ▶ LOW EXTRACTABLES
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ FDA LISTED MATERIALS PER CFR 21
- ▶ MANUFACTURED IN CERTIFIED CLEAN ROOMS

## **SPECIAL PLEAT OPTION:**


- ▶ OPTIMIZED PLEAT GEOMETRY
- ▶ EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%

## ORDER GUIDE



<b>ABSOLUTE RATED RETENTION</b>			
0.1, 0.2, 1, 3			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward:		Reverse:	
75 psid (5.1 bar) @ 75°F (24°C)		50 psid (3.4 bar) @ 75°F (24°C)	
40 psid (2.8 bar) @ 180°F (82°C)			
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
PTFE	Polypropylene	Polypropylene	Polypropylene
<b>SEALS</b>			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>OUTSIDE DIAMETER</b>		<b>APPROXIMATE SURFACE AREA</b>	
MPT: 2.55" (6.48cm)   PRMXT: 2.7" (6.87cm)		6.8 square feet per 10" equivalent	
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			

## PERFORMANCE CHARACTERISTICS

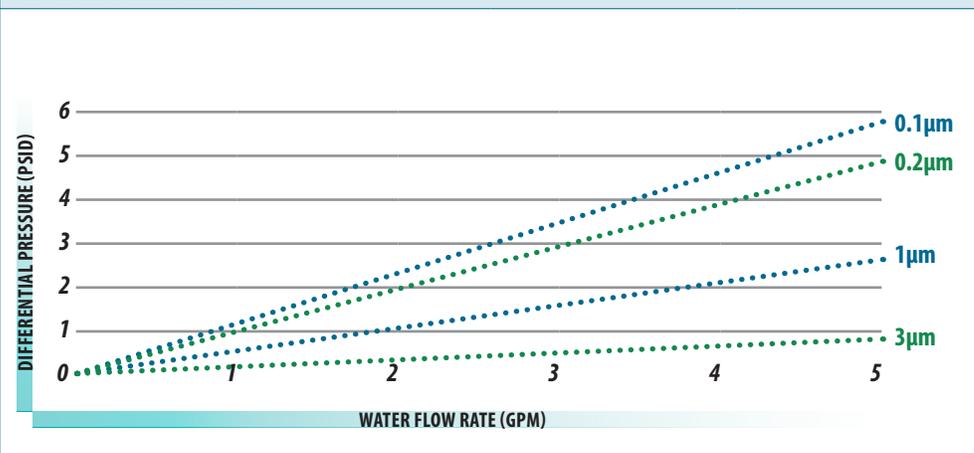

## ORDER OPTIONS

<b>CARTRIDGE</b>	
MPT PRMXT	Mem-Pleat T (2.55") Pur-MAXX T (2.7")
<b>MICRON RATINGS</b>	
0.1, 0.2, 1, 3	
<b>CARTRIDGE LENGTH</b>	
5, 10, 20, 30, 40	
<b>END CAP CONFIGURATIONS</b>	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
<b>GASKET/O-RING MATERIAL</b>	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
<b>CARTRIDGE GRADE</b>	
- 2	General Pharmaceutical
<b>CARTRIDGE OPTIONS</b>	
I DIF	316 SS Insert DI Flush
<b>SPECIAL PLEAT OPTION</b>	
SP	Special Pleat (PRMXT only)

# Mem-PLEAT C & Pur-MAXX C

Pleated Cellulose Acetate Membrane

▶ PROTEIN FILTRATION  
▶ BIOLOGICAL FLUID  
STERILIZATION

▶ ENZYME FILTRATION  
▶ TISSUE CULTURE MEDIA  
STERILIZATION

Strainrite's [Pleated Cellulose Acetate Membrane Cartridges](#) were developed for the filtration of fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization. Our cellulose acetate membrane is manufactured under a proprietary manufacturing process that meets rigorous quality standards throughout every step of production. This process generates consistent lot-to-lot filtration properties among the membranes to ensure product uniformity.

These filter cartridges use highly asymmetric cellulose acetate supported membrane that is hydrophilic, which ensures excellent flow rates, quick wet out and rinse up characteristics. These cartridges are naturally low binding, which is excellent for applications where maximum recovery of protein is critical.

The Pur-MAXX C now offers a Special Pleat option, which provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.


- ▶ HIGH SURFACE AREA ELEMENTS OFFERS EXCELLENT LIFE AND FLUX RATES WHILE PROVIDING ABSOLUTE FILTRATION
- ▶ ABSOLUTE-RATED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY
- ▶ NON-FIBER SHEDDING POLYESTER AND POLYPROPYLENE SUPPORT MATERIALS ELIMINATE POTENTIAL FOR FIBER MIGRATION
- ▶ ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21, PHARMACEUTICAL GRADES ARE BIO-SAFE IN ACCORDANCE WITH USP CLASS VI
- ▶ 100% THERMALLY BONDED CONSTRUCTION
- ▶ LOW EXTRACTABLES, WHICH ENSURES FILTRATE WILL BE CLEAN WITH CONSISTENT RESULTS
- ▶ HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI-AUTOCCLAVE CYCLES
- ▶ PHARMACEUTICAL GRADE ELEMENTS ARE 100% INTEGRITY TESTED
- ▶ LOW PROTEIN BINDING
- ▶ INTEGRITY TESTED

## SPECIAL PLEAT OPTION:



- ▶ OPTIMIZED PLEAT GEOMETRY
- ▶ EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%



## ORDER GUIDE

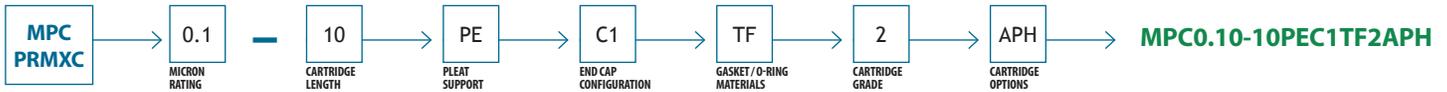

<b>ABSOLUTE RATED RETENTION</b>			
0.1, 0.2, 0.45, 0.65, 0.8, 1.2			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		Reverse: 50 psid (3.4 bar) @ 75°F (24°C)	
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty Polypropylene		275°F (135°C) Continuous Duty Polyester	
<b>TOXICITY</b>			
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact			
<b>STERILIZATION</b>			
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
Cellulose Acetate	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
<b>SEALS</b>			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>OUTSIDE DIAMETER</b>		<b>APPROXIMATE SURFACE AREA</b>	
MPC: 2.55" (6.48cm)   PRMXC: 2.7" (6.87cm)		6.8 square feet per 10" equivalent	
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
<b>PERFORMANCE CHARACTERISTICS</b>			

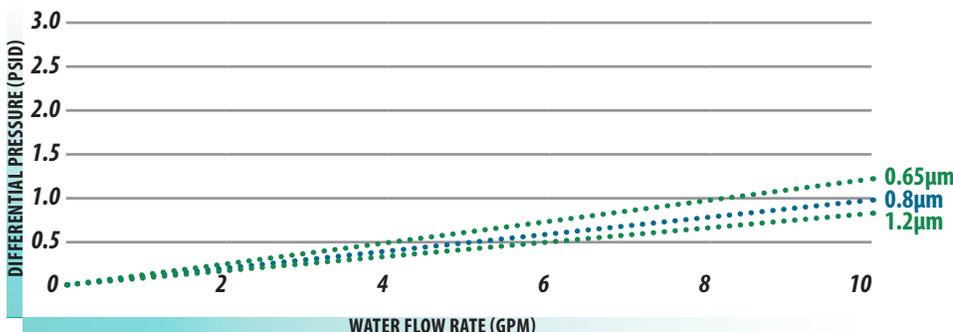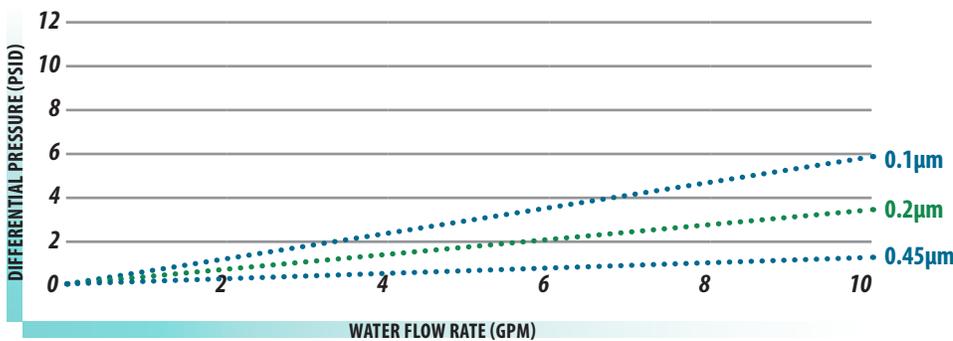

## ORDER OPTIONS

<b>CARTRIDGE</b>	
MPE PRMXE	Mem-Pleat E (2.55") Pur-MAXX E (2.7")
<b>MICRON RATINGS</b>	
0.1, 0.2, 0.45, 0.65, 0.8, 1.2	
<b>CARTRIDGE LENGTH</b>	
5, 10, 20, 30, 40	
<b>PLEAT SUPPORT</b>	
PP PE	Polypropylene Polyester
<b>END CAP CONFIGURATIONS</b>	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
<b>GASKET/O-RING MATERIAL</b>	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
<b>CARTRIDGE GRADE</b>	
-	General
1	FDA Grade
2	Pharmaceutical
<b>CARTRIDGE OPTIONS</b>	
I DIF APH	316 SS Insert DI Flush All Polyester Hardware
<b>SPECIAL PLEAT OPTION</b>	
SP	Special Pleat (PRMXC only)

# Duo-PLEAT & Duo-MAXX

Dual Pleated Cartridges

- ▶ BIOPHARMACEUTICAL
- ▶ VISCOUS FLUIDS
- ▶ PRE-FINAL  
ULTRA PURE WATER

- ▶ BIOBURDEN REDUCTION
- ▶ VISCOUS POLYMERS
- ▶ PRE-FINAL  
HIGH PURITY CHEMICALS


Designed as a “Pre-Final” filter, Strainrite’s [Depth Over Membrane Cartridges](#) were created to protect final filters saving money and extending the life of your final filters. These filters incorporate a synchronized media design. This design utilizes a prefiltration layer up-stream over a final membrane layer in the same cartridge. These filters are a pre-filter and a final filter in one.

These filters are available in multiple micron ranges and combinations to meet the requirements of your process. They are available in two prefiltration materials: polypropylene microfiber and borosilicate microglass. The final filtration layer is available in Nylon, polysulfone, cellulose acetate, and Strainrite’s asymmetric polyethersulfone membrane.



- ▶ RELIABLE NON FIBER RELEASING MEDIA
- ▶ SYNCHRONIZED MEDIA
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ NO ADDITIVES OR GLUE
- ▶ ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21
- ▶ THERMALLY BONDED CONSTRUCTION WITHOUT ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES
- ▶ HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI-AUTOClave CYCLES

## ORDER GUIDE

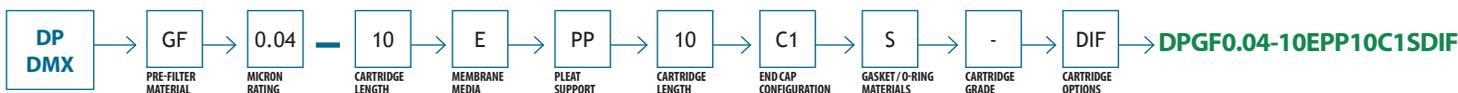

ABSOLUTE RATED RETENTION					
Polyethersulfone: 0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1, 1.2, 2 Polysulfone: 0.2, 0.45, 0.65 Nylon: 0.1, 0.2, 0.45, 0.65, 0.8, 1.2					
MAXIMUM DIFFERENTIAL PRESSURE					
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			Reverse: 50 psid (3.4 bar) @ 75°F (24°C)		
MAXIMUM OPERATING TEMPERATURE					
180°F (82°C) Continuous Duty					
TOXICITY					
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact					
STERILIZATION					
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility					
PACKAGING ECONOMY					
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton					
PRE-FILTER MEDIA	FILTER MEDIA	PLEAT SUPPORT MATERIAL	END CAPS	CAGE/CORE	CONSTRUCTION METHOD
Borosilicate Microglass Polypro. Microfiber	Polyethersulfone Nylon Polysulfone	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester	Thermal Bond
SEALS					
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard					
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA			
DP: 2.55" (6.48cm)   DMX: 2.7" (6.87cm)		Polypropylene Microfiber: 6 square feet per 10" equivalent		Borosilicate Microglass: 5 square feet per 10" equivalent	
LENGTHS					
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)					
PERFORMANCE CHARACTERISTICS - POLYETHERSULFONE MEMBRANE ONLY					

## ORDER OPTIONS

CARTRIDGE	
DP DMX	Duo-Pleat (2.55") Duo-MAXX (2.7")
PRE-FILTER MATERIAL	
GF MF	Borosilicate Microglass Polypropylene Microfiber
MICRON RATINGS	
E: 0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1, 1.2, 2 N: 0.1, 0.2, 0.45, 0.65, 0.8, 1.2 S: 0.2, 0.45, 0.65	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
MEMBRANE	
E N S	Polyethersulfone Nylon Polysulfone
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1 C2 C3 C4 C5 C6 C7 C8	Double Open Ends 213/Recessed Cup Flat/222 Single Open End/Flat Recessed Cup/222 Flat/226 Fin/226 Fin/222
GASKET/O-RING MATERIAL	
S B V E TF TH TV TS	Silicone Buna N Fluorocarbon EPDM PTFE Foam PTFE Hard Encapsulated Fluorocarbon Encapsulated Silicone
CARTRIDGE GRADE	
- 1 2	General FDA Grade Pharmaceutical
CARTRIDGE OPTIONS	
I DIF	316 SS Insert DI Flush

# Pur-PLEAT & Poly-MAXX

Absolute-Rated Polypropylene Depth

- ▶ RECIRCULATING LIQUIDS
- ▶ DI/RO PREFILTRATION
- ▶ WASTE WATER
- ▶ GENERAL WATER FILTRATION
- ▶ REAGENT GRADE CHEMICALS

Strainrite's [Absolute-Rated Polypropylene Depth Cartridges](#) are designed to optimize throughput while achieving absolute and repeatable effluent quality. Our filter media is constructed on the latest continuous microfiber blowing equipment that accurately controls fiber diameter and integrity.

Utilizing state-of-the-art, on-line monitoring equipment, Strainrite delivers the industry's most uniform media, ensuring unparalleled product consistency. Our 100% polypropylene construction provides an expansive chemical compatibility range for your most demanding applications. All materials of construction meet USP Class VI and CFR 21 requirements for food and beverage contact.

The Poly-MAXX now offers a Special Pleat option in micron ratings of 1, 1.5, 2.5. This option provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.



- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION**
- ▶ **MAXIMIZED PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **100% POLYPROPYLENE CONSTRUCTION OFFERS A WIDE RANGE OF CHEMICAL COMPATIBILITY**
- ▶ **FDA, CFR 21 AND USP CLASS VI COMPLIANT**
- ▶ **THERMALLY BONDED CONSTRUCTION ELIMINATES PARTICLE BYPASS**

## **SPECIAL PLEAT OPTION:**

- ▶ **OPTIMIZED PLEAT GEOMETRY**
- ▶ **EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%**

## ORDER GUIDE



PP1-10C1S1DIF

## ASTM F795-88 RETENTION RATING

1, 1.5, 2.5, 5, 10, 15, 20, 40, 70

## MAXIMUM DIFFERENTIAL PRESSURE

## MAXIMUM OPERATING TEMPERATURE

Forward:  
75 psid (5.1 bar) @ 75°F (24°C)  
40 psid (2.8 bar) @ 180°F (82°C)

180°F (82°C) Continuous Duty

## TOXICITY

All components meet all relevant USP XXII Class VI test for biological safety  
and FDA requirements for contact with food and beverage per 21CFR177.1520

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

Polypropylene Microfiber

## END CAPS

Polypropylene

## PLEAT SUPPORT MATERIAL

Polypropylene

## CAGE/CORE

Polypropylene

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

Thermal Bond

## OUTSIDE DIAMETER

PP: 2.55" (6.48cm) | PMX: 2.7" (6.87cm)

## LENGTHS

5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)


## EFFICIENCY

PP1/PMX1 — 99.98% @ 1µm  
PP1.5/PMX1.5 — 99.98% @ 1.5µm  
PP2.5/PMX2.5 — 99.98% @ 2.5µm

PP5/PMX5 — 99.98% @ 5µm  
PP10/PMX10 — 99.98% @ 10µm  
PP15/PMX15 — 99.98% @ 15µm

PP20/PMX20 — 99.98% @ 20µm  
PP40/PMX40 — 99.98% @ 40µm  
PP70/PMX70 — 99.98% @ 70µm

## PERFORMANCE CHARACTERISTICS

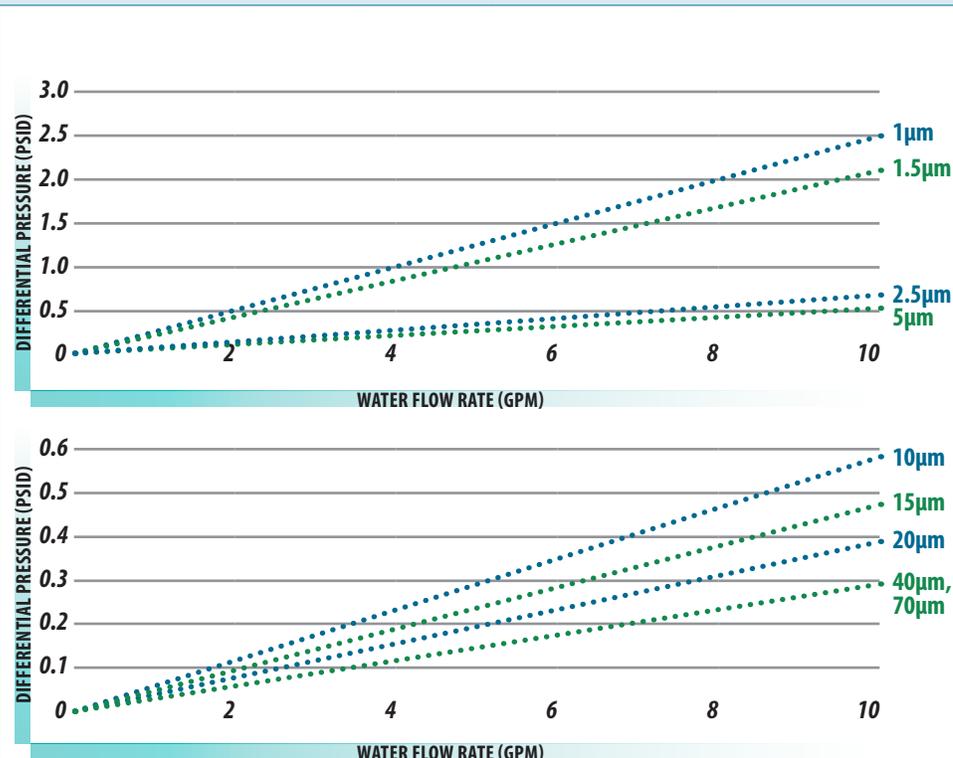

## ORDER OPTIONS

CARTRIDGE	
PP PMX	Pur-Pleat (2.55") Poly-MAXX (2.7")
MICRON RATINGS	
1, 1.5, 2.5, 5, 10, 15, 20, 40, 70	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
CARTRIDGE OPTIONS	
I DIF	316 SS Insert DI Flush
SPECIAL PLEAT OPTION	
SP	Special Pleat (PMX 1, 1.5, 2.5 only)

# Pur-PLEAT G & Poly-MAXX G

Nominally Rated Polypropylene Depth

- ▶ WATER FILTRATION
- ▶ LIQUEFIED SUGAR
- ▶ WASTE WATER

- ▶ SOLVENT FILTRATION
- ▶ DI/RO PREFILTRATION
- ▶ WINE CLARIFICATION

Strainrite's [Nominally Rated Polypropylene Depth Cartridges](#) are designed to reduce overall filtration costs when compared to spunbonded, stringwound, and nominally-rated pleated cartridges. This polypropylene media is designed and manufactured on state-of-the-art meltblowing equipment to Strainrite's strict specifications for high solids-loading requirements for a variety of prefiltration applications.

These filters are constructed using the latest high-speed thermal bonding equipment in a clean environment to ensure superior product cleanliness and thermal and chemical compatibility. All of these depth cartridges are manufactured using 100% virgin polypropylene materials that comply with FDA Title 21 of The Code of Federal Regulations for food and beverage contact.

The Poly-MAXX G now offers a Special Pleat option in micron ratings of 0.25, 0.5, 1. This option provides expected surface area improvements of as much as 25%. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.



- ▶ **MAXIMIZED PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **FDA TITLE 21 COMPLIANT FOR FOOD AND BEVERAGE CONTACT**
- ▶ **LOWER PRESSURE DROPS, WHICH YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **100% POLYPROPYLENE CONSTRUCTION OFFERS A WIDE RANGE OF CHEMICAL COMPATIBILITY**
- ▶ **THERMALLY BONDED CONSTRUCTION ENSURES A CLEANER FILTRATE**

## **SPECIAL PLEAT OPTION:**

- ▶ **OPTIMIZED PLEAT GEOMETRY**
- ▶ **EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%**

## ORDER GUIDE



## RETENTION RATING

0.25, 0.5, 1, 2.5, 5, 8, 12, 20, 30, 50

## MAXIMUM DIFFERENTIAL PRESSURE

## MAXIMUM OPERATING TEMPERATURE

Forward:  
75 psid (5.1 bar) @ 75°F (24°C)  
40 psid (2.8 bar) @ 180°F (82°C)

180°F (82°C) Continuous Duty

## TOXICITY

All components meet all relevant USP XXII Class VI test for biological safety  
and FDA requirements for contact with food and beverage per 21CFR177.1520

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

Polypropylene Microfiber

## END CAPS

Polypropylene

## PLEAT SUPPORT MATERIAL

Polypropylene

## CAGE/CORE

Polypropylene

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

Thermal Bond

## OUTSIDE DIAMETER

PPG: 2.55" (6.48cm) | PMXG: 2.7" (6.87cm)

## LENGTHS



5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)

## EFFICIENCY

PPG0.25/PMXG0.25 — BETA5000 @ 0.25µm  
PPG0.5/PMXG0.5 — BETA5000 @ 0.5µm  
PPG1/PMX1 — BETA5000 @ 1µm  
PPG2.5/PMXG2.5 — BETA5000 @ 2.5µm  
PPG5/PMXG5 — BETA5000 @ 5µm

PPG8.0/PMXG8 — BETA5000 @ 8µm  
PPG12/PMXG12 — BETA5000 @ 12µm  
PPG20/PMXG20 — BETA5000 @ 20µm  
PPG30/PMXG30 — BETA5000 @ 30µm  
PPG50/PMXG50 — BETA5000 @ 50µm

## PERFORMANCE CHARACTERISTICS

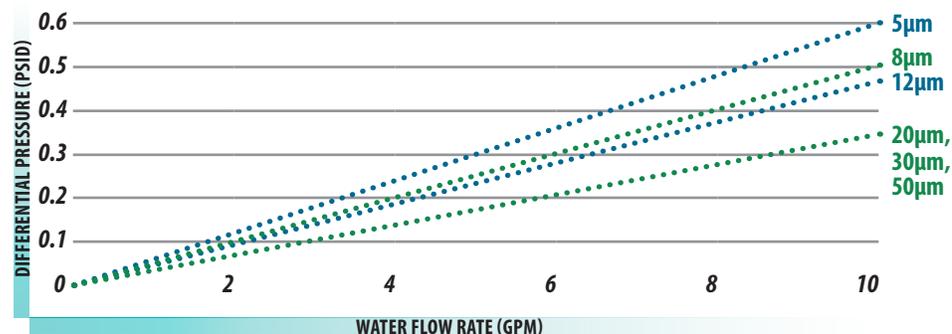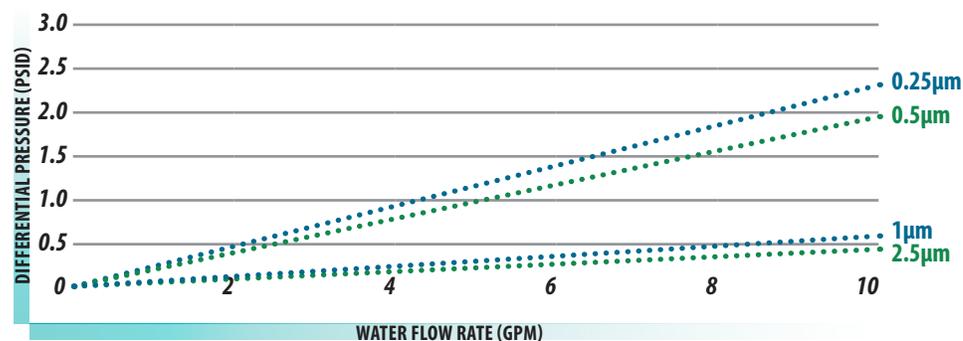

## ORDER OPTIONS

CARTRIDGE	
PPG PMXG	Pur-Pleat G (2.55") Poly-MAXX G (2.7")
MICRON RATINGS	
0.25, 0.5, 1, 2.5, 5, 8, 12, 20, 30, 50	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
CARTRIDGE OPTIONS	
1 DIF	316 SS Insert DI Flush
SPECIAL PLEAT OPTION	
SP	Special Pleat (PMXG 0.25, 0.5, 1 only)

# Pur-PLEAT Select & Poly-MAXX Select

Gradient Density Polypropylene Depth

- ▶ WATER FILTRATION
- ▶ LIQUEFIED SUGAR
- ▶ WASTE WATER

- ▶ SOLVENT FILTRATION
- ▶ DI/RO PREFILTRATION
- ▶ WINE CLARIFICATION
- ▶ BLEACH

Strainrite's [Select \(High Solids Loading\) Polypropylene Depth Cartridges](#) offer a unique, absolute rated, gradient density, polypropylene depth filter that utilizes the revolutionary HSL technology in combination with our high efficiency micro-fiber meltblown media.

This filter combines high solids loading with absolute filtration to create one of the longest lasting, absolute-rated, pleated polypropylene filters on the market. All Select filters are manufactured without binders or resins, resulting in an extremely clean non-media migration filter.

Select gradient density depth media is outstanding for removing gels as compared to other pleated polypropylene filters. Our 100% polypropylene construction provides an excellent range of chemical compatibility for your most demanding applications. All polypropylene construction materials are CFR 21 listed for direct food contact, which makes this filter ideal for a broad range of applications.



- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **100% POLYPROPYLENE, FDA COMPLIANT WITH CFR 21**
- ▶ **THERMALLY BONDED CONSTRUCTION ELIMINATES PARTICLE BYPASS WHILE MINIMIZING EXTRACTABLES**

## ORDER GUIDE



## ASTM F795-88 RETENTION RATING

1, 1.5, 3, 5, 10, 15, 20, 40, 70, 90

## MAXIMUM DIFFERENTIAL PRESSURE

## MAXIMUM OPERATING TEMPERATURE

Forward:  
75 psid (5.1 bar) @ 75°F (24°C)  
40 psid (2.8 bar) @ 180°F (82°C)

180°F (82°C) Continuous Duty

## TOXICITY

All components meet all relevant USP XXII Class VI test for biological safety  
and FDA requirements for contact with food and beverage per 21CFR177.1520

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

Polypropylene  
Microfiber Composite

## END CAPS

Polypropylene

## PLEAT SUPPORT MATERIAL

Polypropylene

## CAGE/CORE

Polypropylene

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

Thermal Bond

## OUTSIDE DIAMETER

SPP: 2.55" (6.48cm) | SPMX: 2.7" (6.87cm)

## LENGTHS



5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)

## EFFICIENCY

SPP1/SPMX1 — 99.98% @ 1µm  
SPP1.5/SPMX1.5 — 99.98% @ 1.5µm  
SPP3/SPMX3 — 99.98% @ 3µm  
SPP5/SPMX5 — 99.98% @ 5µm  
SPP10/SPMX10 — 99.98% @ 10µm

SPP15/SPMX15 — 99.98% @ 15µm  
SPP20/SPMX20 — 99.98% @ 20µm  
SPP40/SPMX40 — 99.98% @ 40µm  
SPP70/SPMX70 — 99.98% @ 70µm  
SPP90/SPMX90 — 99.98% @ 90µm

## PERFORMANCE CHARACTERISTICS

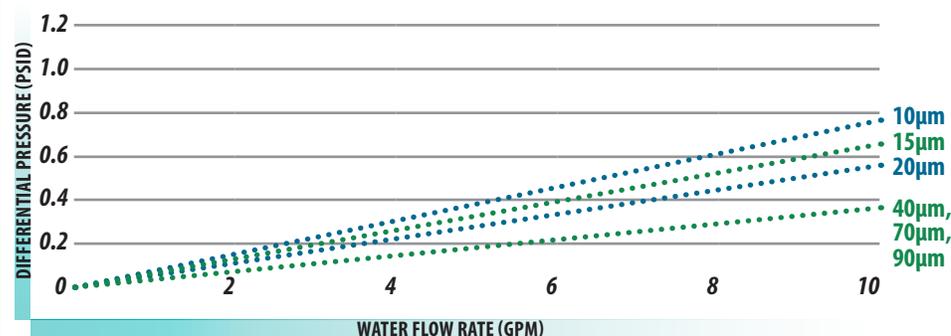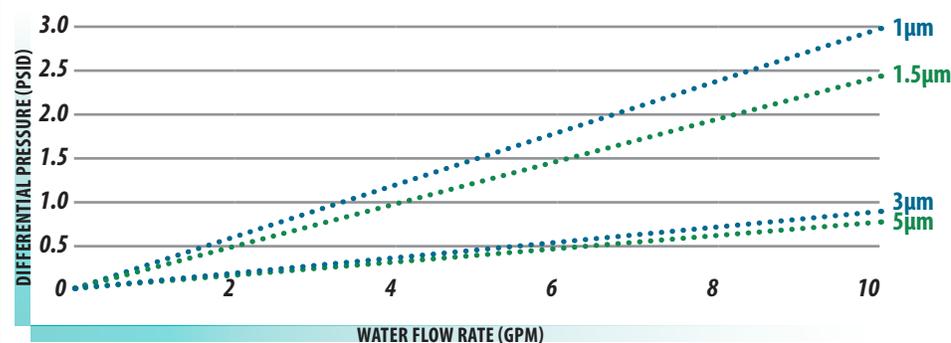

## ORDER OPTIONS

CARTRIDGE	
SPP SPMX	Pur-Pleat Select (2.55") Poly-MAXX Select (2.7")
MICRON RATINGS	
1, 1.5, 3, 5, 10, 15, 20, 40, 70, 90	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
CARTRIDGE OPTIONS	
I DIF	316 SS Insert DI Flush

# Glass-PLEAT & Fiber-MAXX

Absolute-Rated Microglass Depth

- ▶ INKS AND COATINGS
- ▶ PLATING SOLUTIONS
- ▶ SOLVENT FILTRATION
- ▶ WASTE WATER

- ▶ CHEMICAL PROCESSING
- ▶ PHOTOGRAPHIC FILMS
- ▶ OIL AND GAS PRODUCTION

Strainrite's [Absolute-Rated Microglass Cartridges](#) utilize a high surface area and high void volume media, incorporating microglass fibers in a uniform matrix that optimizes element flow rate and service life unattainable by other microfiber technologies. This revolutionary microfiber matrix optimizes pore size geometry required to offer absolute-rated filtration performance. Strainrite's non-calendared microglass cartridges exhibit significantly reduced resistance to flow when compared to similarly rated microfiber technologies. These cartridges are an excellent choice for filtering beverages such as beer and wine, as they do not remove flavor enhancing proteins.

Our materials of construction meet or exceed the requirements of the CFR 21 for Food and Beverage contact. Strainrite offers elements that utilize an epoxy binder providing these microglass depth cartridges with an increased range of applications where chemical compatibility is critical.

The Fiber-MAXX now offers a Special Pleat option which provides expected surface area improvements of as much as 45% in General and Pharmaceutical grades. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.



- ▶ **ABSOLUTE-RATED MEDIA**
- ▶ **NON-FIBER RELEASING MATERIALS WITH MINIMAL EXTRACTABLES PROVIDE HIGH PURITY FILTRATE**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **MAXIMIZED PLEAT DESIGN COUPLED WITH NON-CALENDARED MICROGLASS MATRIX OFFERS GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, LESS DOWNTIME AND REDUCED COSTS**
- ▶ **INDUSTRIAL GRADE USES AN EPOXY BINDER, FDA GRADE USES AN ACRYLIC BINDER**

## **SPECIAL PLEAT OPTION:**

- ▶ **OPTIMIZED PLEAT GEOMETRY**
- ▶ **EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 25%**



## ORDER GUIDE



GP0.8-10PPC3B1APH

ASTM F795-88 RETENTION RATING			
0.8, 0.9, 1, 2, 3, 5, 10, 15			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty Polypropylene		275°F (135°C) Continuous Duty Polyester	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Borosilicate Microglass	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD		OUTSIDE DIAMETER	
Thermal Bond		GP: 2.55" (6.48cm)   FMX: 2.7" (6.87cm)	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
GP0.8/FMX0.8 — 99.98% @ 0.8µm   90.00% @ 0.25µm GP0.9/FMX0.9 — 99.98% @ 0.9µm   90.00% @ 0.45µm GP1/FMX1 — 99.98% @ 1µm   90.00% @ 0.65µm GP2/FMX2 — 99.98% @ 2µm   90.00% @ 1µm		GP3/FMX3 — 99.98% @ 3µm   90.00% @ 1.5µm GP5/FMX5 — 99.98% @ 5µm   90.00% @ 2.5µm GP10/FMX10 — 99.98% @ 10µm   90.00% @ 5µm GP15/FMX15 — 99.98% @ 15µm   90.00% @ 10µm	

## PERFORMANCE CHARACTERISTICS

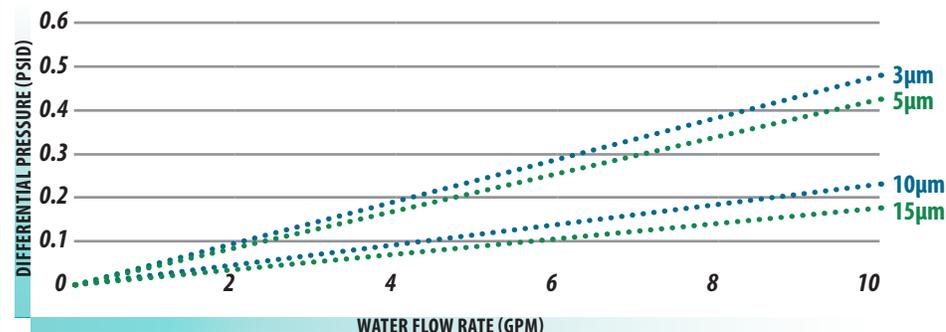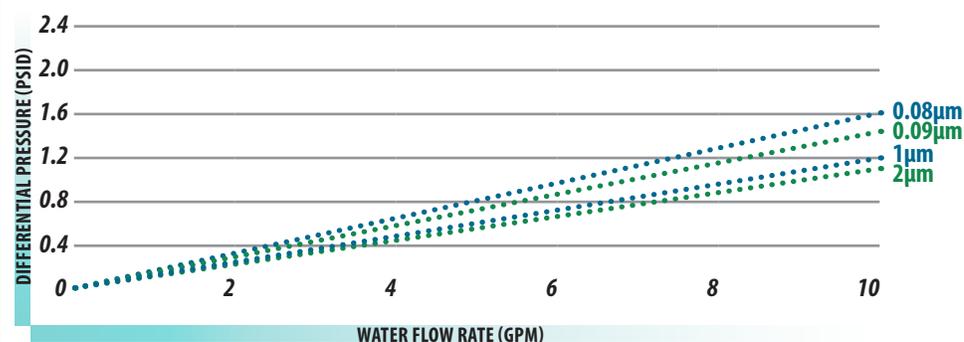

## ORDER OPTIONS

CARTRIDGE	
GP FMX	Glass-Pleat (2.55") Fiber-MAXX (2.7")
MICRON RATINGS	
0.8*, 0.9, 1*, 2, 3*, 5*, 10*, 15	
<i>*Available in FDA grade</i>	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
CARTRIDGE OPTIONS	
I DIF APH	316 SS Insert DI Flush All Polyester Hardware
SPECIAL PLEAT OPTION	
SP	Special Pleat (FMX only) Not available in FDA grade

# Glass-PLEAT G & Fiber-MAXX G

Nominally Rated Microglass Depth

- ▶ INKS AND COATINGS
- ▶ PLATING SOLUTIONS
- ▶ SOLVENT FILTRATION
- ▶ WASTE WATER

- ▶ CHEMICAL PROCESSING
- ▶ PHOTOGRAPHIC FILMS
- ▶ OIL AND GAS PRODUCTION

Strainrite's [Nominally Rated Microglass Depth Filter Cartridges](#) utilize a high surface area and high void volume media, incorporating microglass fibers in a uniform matrix that optimizes element flow rate and service life unattainable by other traditional microfiber technologies. This revolutionary microfiber matrix optimizes pore size geometry required to offer beta rated filtration performance.

Strainrite's non-calendared microglass cartridges exhibit significantly reduced resistance to flow when compared to similarly rated microfiber technologies. These cartridges are an excellent choice for filtering beverages such as beer and wine, as they do not remove flavor-enhancing proteins.

Our FDA grade cartridges meet or exceed the requirements of the 21 CFR 177 for food and beverage contact. Strainrite also offers elements that utilize an epoxy binder providing an increased range of applications where chemical compatibility is critical.

The Fiber-MAXX G now offers a Special Pleat option which provides expected surface area improvements of as much as 45% in General and Pharmaceutical grades. This optimized pleat geometry option was developed for the filtration of process fluids that require a high degree of particle retention and/or constant bacterial barrier for effective sterilization.



- ▶ **BETA-RATED MEDIA PROVIDE RELIABLE PORE SIZE CONTROL RESULTING IN REPEATABLE FILTRATION PERFORMANCE**
- ▶ **NON-FIBER RELEASING MATERIALS WITH MINIMAL EXTRACTABLES PROVIDE HIGH PURITY FILTRATE**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **MAXIMIZED PLEAT DESIGN COUPLED WITH NON-CALENDARED MICRO-GLASS MATRIX OFFERS GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, LESS DOWNTIME AND REDUCED COSTS**
- ▶ **INDUSTRIAL GRADE UTILIZES AN EPOXY BINDER, FDA GRADE UTILIZES AN ACRYLIC BINDER**
- ▶ **THERMALLY BONDED CONSTRUCTION ELIMINATES PARTICLE BYPASS**

## **SPECIAL PLEAT OPTION:**


- ▶ **OPTIMIZED PLEAT GEOMETRY**
- ▶ **EXPECTED SURFACE AREA IMPROVEMENTS OF AS MUCH AS 45% IN GENERAL AND PHARMACEUTICAL GRADES**

## ORDER GUIDE



RETENTION RATING			
0.2, 0.45, 0.65, 1, 5, 10			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty Polypropylene		275°F (135°C) Continuous Duty Polyester	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Borosilicate Microglass	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD		OUTSIDE DIAMETER	
Thermal Bond		GPG: 2.55" (6.48cm)   FMXG: 2.7" (6.87cm)	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
GPG0.2/FMXG0.2 — BETA5000 @ 0.2µm GPG0.45/FMXG0.45 — BETA5000 @ 0.45µm GPG0.65/FMXG0.65 — BETA5000 @ 0.65µm		GPG1/FMXG1 — BETA5000 @ 1µm GPG5/FMXG5 — BETA5000 @ 5µm GPG10/FMXG10 — BETA5000 @ 10µm	

## PERFORMANCE CHARACTERISTICS

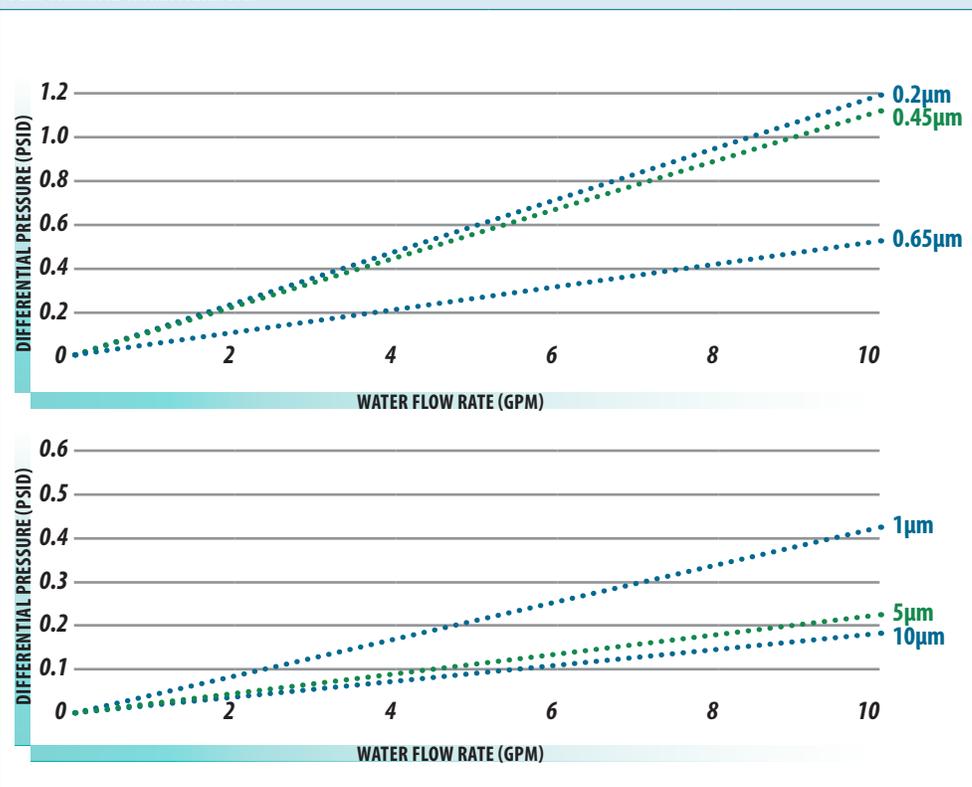

## ORDER OPTIONS

CARTRIDGE	
GPG FMXG	Glass-Pleat (2.55") Fiber-MAXX (2.7")
MICRON RATINGS	
0.2, 0.45, 0.65, 1, 5, 10	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
2	Pharmaceutical
CARTRIDGE OPTIONS	
I DIF APH	316 SS Insert DI Flush All Polyester Hardware
SPECIAL PLEAT OPTION	
SP	Special Pleat (FMXG only) Not available in FDA grade

# CPP - Continuous Pleat-Rite

Continuous Pleat Polypropylene Depth

- ▶ GENERAL CHEMICAL
- ▶ LIQUEFIED SUGAR
- ▶ WASTE WATER
- ▶ BLEACH

- ▶ SOLVENT FILTRATION
- ▶ DI/RO PREFILTRATION
- ▶ GENERAL WATER FILTRATION

Strainrite's [Continuous Pleat All-Polypropylene Filter Cartridges](#) optimize throughput while achieving consistent and repeatable effluent quality.

Our filter media is constructed on the latest continuous microfiber blowing equipment that precisely control fiber diameter and integrity across the entire web.

Utilizing state-of-the-art on-line monitoring equipment, we are able to deliver the industry's most uniform and consistent media ensuring unparalleled product consistency.

These filters are manufactured in continuous lengths without binders or resins resulting in an extremely clean non-fiber releasing filter. All construction materials comply with FDA Title 21 of The Code of Federal Regulations for food and beverage contact.




- ▶ CPP ELEMENTS HAVE BETWEEN 4-6 FT<sup>2</sup> OF SURFACE AREA PER 10" EQUIVALENT
- ▶ WATER GRADE ELEMENTS HAVE BETWEEN 3-4.5 FT<sup>2</sup> OF SURFACE AREA PER 10" EQUIVALENT
- ▶ HIGH EFFICIENCY MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION RESULTS
- ▶ HIGH SURFACE AREA PLEAT DESIGN FOR GREATER SURFACE AREA ENSURES LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER CARTRIDGE
- ▶ FDA TITLE 21 COMPLIANT FOR FOOD AND BEVERAGE CONTACT
- ▶ 100% POLYPROPYLENE CONSTRUCTION OFFERS A WIDE RANGE OF CHEMICAL COMPATIBILITY
- ▶ THERMALLY BONDED CONSTRUCTION ENSURES A CLEANER FILTRATE

## ORDER GUIDE



RETENTION RATING			
0.1, 0.2, 0.5, 1, 2.5, 5, 10, 15, 20, 40, 70			
MAXIMUM DIFFERENTIAL PRESSURE		MAXIMUM OPERATING TEMPERATURE	
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		180°F (82°C) Continuous Duty	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Single packaging available. Bulk packaging in case quantities to reduce material disposal: 10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Polypropylene Microfiber	Polypropylene	Polypropylene	Polypropylene
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA PER 10"	
EXTRUDED CAGE: 2.55" (6.48cm)   MOLDED CAGE: 2.68" (6.81cm)		GENERAL GRADE: 4-6 SQUARE FEET   WATER GRADE: 3-4.5 SQUARE FEET	
LENGTHS			
10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
CPP0.1 — BETA100 @ 0.1µm CPP0.2 — BETA100 @ 0.2µm CPP0.5 — BETA100 @ 0.5µm CPP1 — BETA100 @ 1µm	CPP2.5 — BETA100 @ 2.5µm CPP5 — BETA100 @ 5µm CPP10 — BETA100 @ 10µm	CPP15 — BETA100 @ 15µm CPP20 — BETA100 @ 20µm CPP40 — BETA100 @ 40µm CPP70 — BETA100 @ 70µm	

## PERFORMANCE CHARACTERISTICS

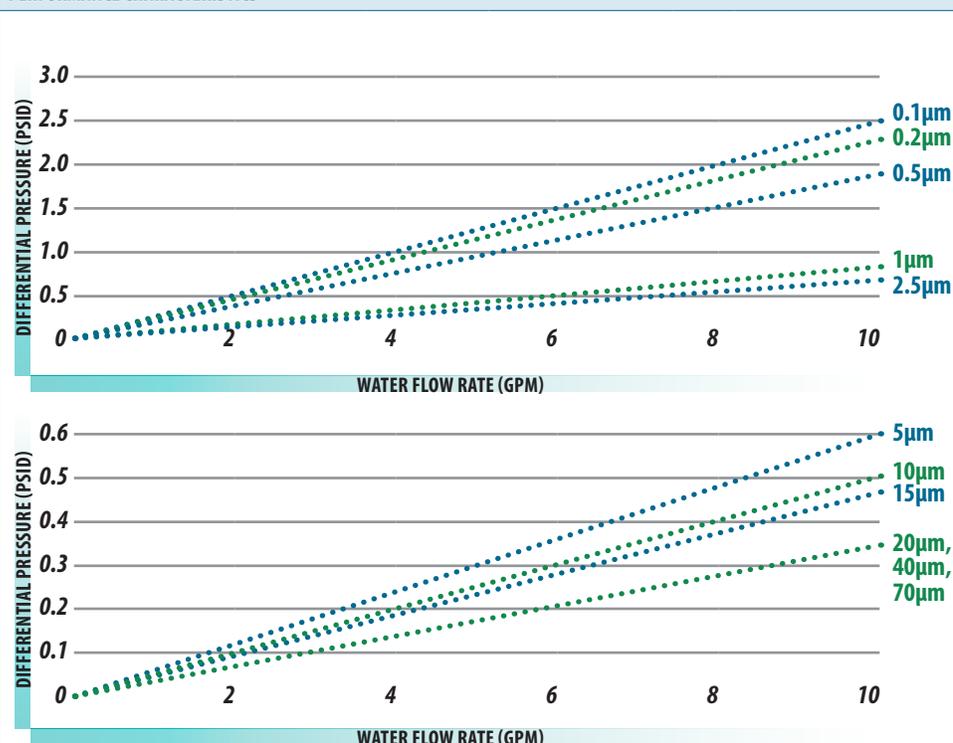

## ORDER OPTIONS

CARTRIDGE	
CPP	Continuous Pleat-Rite
MICRON RATINGS	
0.1, 0.2, 0.5, 1, 2.5, 5, 10, 15, 20, 40, 70	
CARTRIDGE LENGTH	
10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General Water Grade
5	
CARTRIDGE OPTIONS	
I	316 SS Insert
MC	Molded Cage

# HSLP

## Continuous Pleat High-Solids-Loading Polypropylene Depth

- ▶ COSMETICS
- ▶ HIGH PURITY WATER
- ▶ PHOTOCHEMICAL
- ▶ PHARMACEUTICAL

- ▶ FOOD AND BEVERAGE
- ▶ ELECTROPLATING
- ▶ DI/RO PREFILTRATION
- ▶ FERMENTATION PROCESSES


Strainrite's [Continuous Pleat High-Solids-Loading Polypropylene \(HSLP\) Depth Filter Cartridges](#) is a unique polypropylene depth filter that utilizes long strand small and large diameter fibers to provide a high solids loading, absolute-rated, pleated depth filter. This binder-free depth media is excellent for removing gels and offers more than twice the surface area compared with industry standard non-pleated depth filters. The increased surface area provides higher flow rates at reduced pressure, resulting in increased filter life.

Our 100% polypropylene construction provides an excellent range of chemical compatibility for your most demanding applications. All polypropylene construction materials are CFR 21 listed for direct food contact, which makes this filter ideal for a broad range of applications.

- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **MAXIMIZED PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER CARTRIDGE**
- ▶ **100% POLYPROPYLENE, FDA COMPLIANT WITH CFR 21**
- ▶ **THERMALLY BONDED CONSTRUCTION, ELIMINATING PARTICLE BYPASS**




## ORDER GUIDE

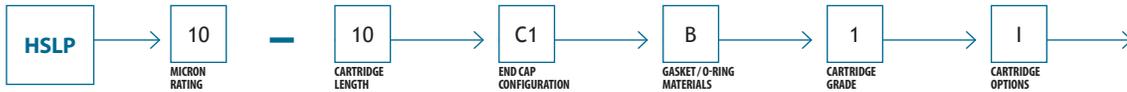

RETENTION RATING			
1, 2.5, 5, 10, 15, 20, 25, 35, 70, 90, 120			
MAXIMUM DIFFERENTIAL PRESSURE		MAXIMUM OPERATING TEMPERATURE	
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		180°F (82°C) Continuous Duty	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Single packaging available. Bulk packaging in case quantities to reduce material disposal: 10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Polypropylene Microfiber Composite	Polypropylene	Polypropylene	Polypropylene
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER			
EXTRUDED CAGE: 2.55" (6.48cm)   MOLDED CAGE: 2.68" (6.81cm)			
LENGTHS			
10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
HSLP1 — 99.98% @ 1µm HSLP2.5 — 99.98% @ 2.5µm HSLP5 — 99.98% @ 5µm HSLP10 — 99.98% @ 10µm	HSLP15 — 99.98% @ 15µm HSLP20 — 99.98% @ 20µm HSLP25 — 99.98% @ 25µm	HSLP35 — 99.98% @ 35µm HSLP70 — 99.98% @ 70µm HSLP90 — 99.98% @ 90µm HSLP120 — 99.98% @ 120µm	

## PERFORMANCE CHARACTERISTICS

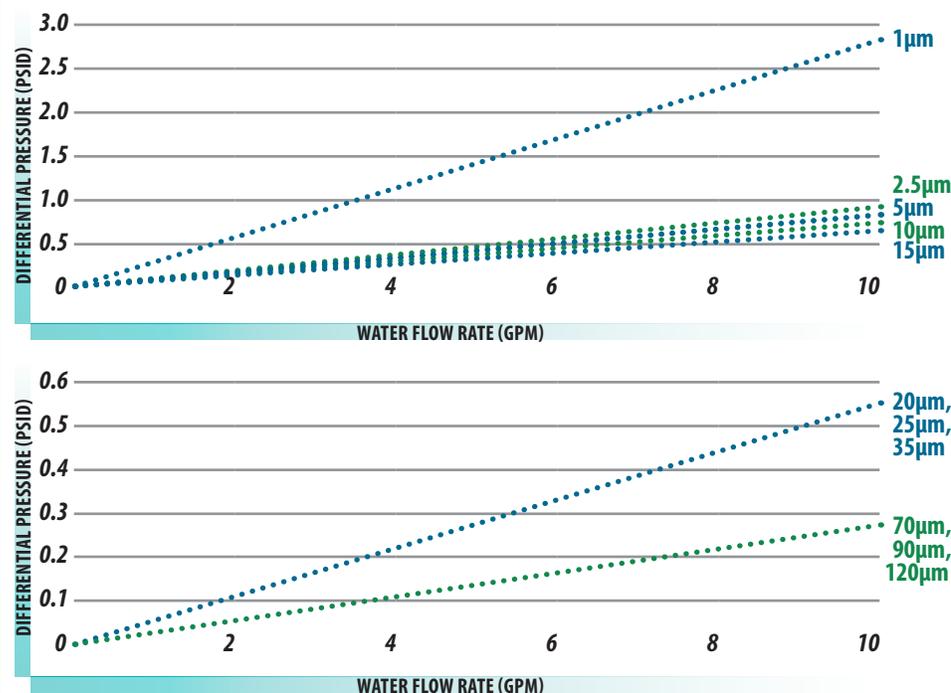

## ORDER OPTIONS

CARTRIDGE	
HSLP	
MICRON RATINGS	
1, 2.5, 5, 10, 15, 20, 25, 35, 70, 90, 120	
CARTRIDGE LENGTH	
10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
-	General
1	FDA Grade
CARTRIDGE OPTIONS	
I	316 SS Insert
MC	Molded Cage

# CFP - Continuous Fiber Pleat

Continuous Pleat Microglass Depth

- ▶ GENERAL CHEMICAL
- ▶ PLATING SOLUTIONS
- ▶ WASTE WATER

- ▶ SOLVENT FILTRATION
- ▶ DI/RO PREFILTRATION
- ▶ GENERAL WATER FILTRATION

Strainrite's [Continuous Pleat Microglass Filter Cartridges](#) utilize a high surface area of small denier fibers to create more void volume in a highly uniform matrix, optimizing flow rate and service life without sacrificing particle efficiency.

This revolutionary microfiber optimizes pore size geometry required to offer absolute rated filtration performance. Our high efficiency media is non-calendared at the lower micron ratings resulting in significantly reduced resistance to flow or pressure drop when compared to similarly rated polypropylene microfiber technologies.

These products are available in industrial grades that utilize epoxy binders or in FDA compliant grades, which utilize acrylic binders, and are perfect for a wide range of applications where chemical compatibility is critical.




- ▶ **HIGH EFFICIENCY MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION RESULTS**
- ▶ **HIGH SURFACE AREA PLEAT DESIGN FOR GREATER SURFACE AREA ENSURES LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER CARTRIDGE**
- ▶ **FDA TITLE 21 COMPLIANT FOR FOOD AND BEVERAGE CONTACT**
- ▶ **THERMALLY BONDED CONSTRUCTION TO ENSURE A CLEANER FILTRATE**

## ORDER GUIDE



CFP0.2-20C1S11

RETENTION RATING			
0.2, 0.45, 0.65, 1, 5, 10			
MAXIMUM DIFFERENTIAL PRESSURE		MAXIMUM OPERATING TEMPERATURE	
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		180°F (82°C) Continuous Duty	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Single packaging available. Bulk packaging in case quantities to reduce material disposal: 10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Borosilicate Microglass	Polypropylene	Polyester	Polypropylene
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA	
EXTRUDED CAGE: 2.55" (6.48cm)   MOLDED CAGE: 2.68" (6.81cm)		4 SQUARE FEET PER 10"	
LENGTHS			
10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
CFP0.2 — BETA1000 @ 0.8µm   BETA10 @ 0.25µm CFP0.45 — BETA1000 @ 0.9µm   BETA10 @ 0.45µm CFP0.65 — BETA1000 @ 1µm   BETA10 @ 0.65µm		CFP1 — BETA1000 @ 2µm   BETA10 @ 1µm CFP5 — BETA1000 @ 10µm   BETA10 @ 5µm CFP10 — BETA1000 @ 15µm   BETA10 @ 10µm	
PERFORMANCE CHARACTERISTICS			

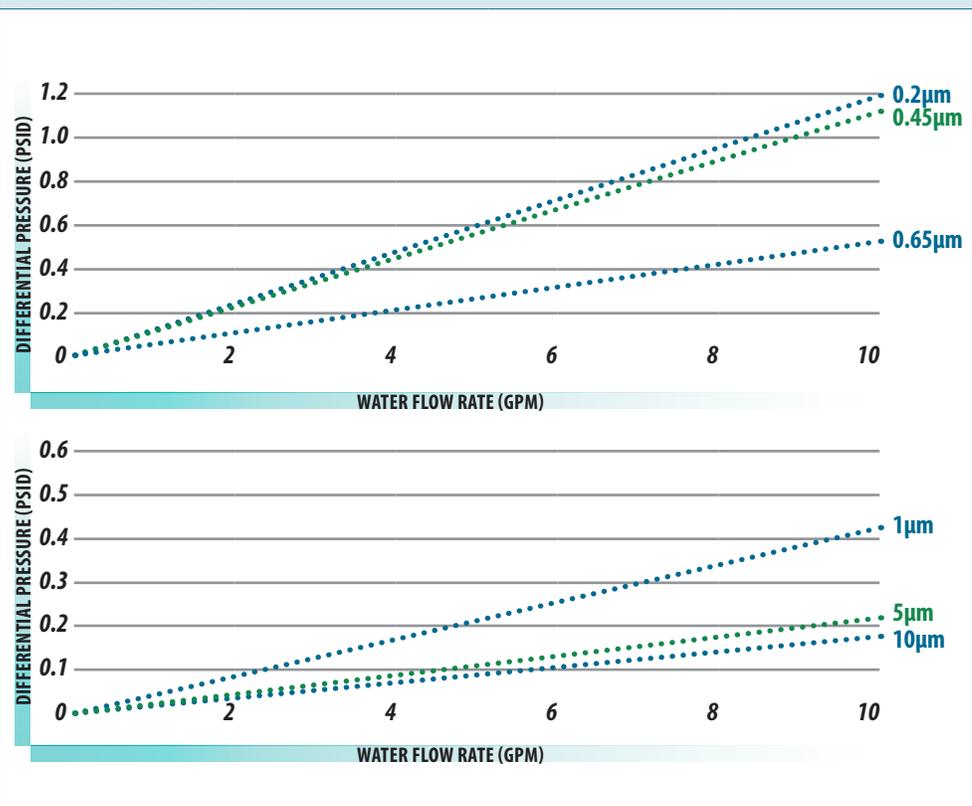

## ORDER OPTIONS

CARTRIDGE	
CFP	Continuous Fiber Pleat
MICRON RATINGS	
0.2, 0.45, 0.65, 1, 5, 10	
CARTRIDGE LENGTH	
10, 20, 30, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
- 1	General FDA Grade
CARTRIDGE OPTIONS	
I MC	316 SS Insert Molded Cage

# GPVS - Glass Pleat Value Series

Continuous Microglass Pleat - Value Series

- ▶ GENERAL CHEMICAL
- ▶ PLATING SOLUTIONS
- ▶ WASTE WATER
- ▶ OIL AND GAS PRODUCTION

- ▶ SOLVENT FILTRATION
- ▶ DI/RO PREFILTRATION
- ▶ GENERAL WATER FILTRATION

Strainrite's [Glass Pleat Value Series \(GPVS\) Filter Cartridges](#) utilize a high surface area of small denier fibers to create more void volume in a highly uniform matrix, optimizing flow rate and service life without sacrificing particle efficiency. This revolutionary microfiber optimizes pore size geometry required to offer absolute rated filtration performance.

Our high efficiency media is non-calendared at the lower micron ratings resulting in significantly reduced resistance to flow or pressure drop when compared to similarly rated polypropylene microfiber technologies. These products are perfect for a wide range of applications where chemical compatibility is critical.




- ▶ **RECOMMENDED WHEN CHEMICAL COMPATIBILITY AND TEMPERATURE ARE CRITICAL FACTORS**
- ▶ **HIGH EFFICIENCY MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION RESULTS**
- ▶ **HIGH SURFACE AREA PLEAT DESIGN FOR GREATER SURFACE AREA ENSURES LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER CARTRIDGE**
- ▶ **THERMALLY BONDED CONSTRUCTION TO ENSURE A CLEANER FILTRATE**

## ORDER GUIDE



RETENTION RATING			
0.2, 0.45, 1, 3, 5, 20			
MAXIMUM DIFFERENTIAL PRESSURE		MAXIMUM OPERATING TEMPERATURE	
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		275°F (135°C) Continuous Duty	
PACKAGING ECONOMY			
Single packaging available. Bulk packaging in case quantities to reduce material disposal: 10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Borosilicate Microglass	Polypropylene	Polyester	Polypropylene
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD		CAGE DESIGN	
Thermal Bond		Netting	
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA	
2.55" (6.48cm)		4.5 SQUARE FEET PER 10"	
LENGTHS			
10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
CFP0.2 — BETA1000 @ 0.8µm   BETA10 @ 0.25µm CFP0.45 — BETA1000 @ 0.9µm   BETA10 @ 0.45µm CFP0.65 — BETA1000 @ 1µm   BETA10 @ 0.65µm		CFP1 — BETA1000 @ 2µm   BETA10 @ 1µm CFP5 — BETA1000 @ 10µm   BETA10 @ 5µm CFP10 — BETA1000 @ 15µm   BETA10 @ 10µm	
PERFORMANCE CHARACTERISTICS			

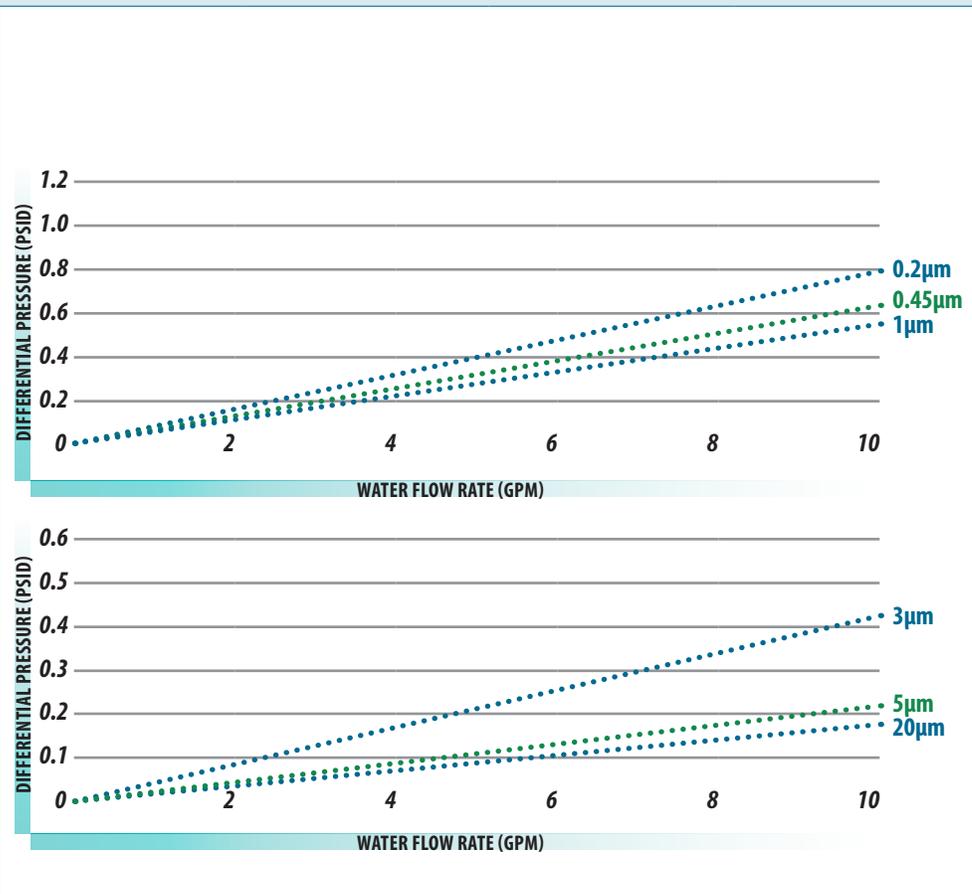

## ORDER OPTIONS

CARTRIDGE	
GPVS	Glass Pleat Value Series
MICRON RATINGS	
0.2, 0.45, 1, 3, 5, 20	
CARTRIDGE LENGTH	
10, 20, 30, 40	
PLEAT SUPPORT	
PE	Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CAGE / CORE / END CAPS	
PE	Polyester

# CRB Pleat

Continuous Resin-Bonded Depth

- ▶ INKS
- ▶ ADHESIVES
- ▶ COATINGS
- ▶ RESINS

- ▶ OILS
- ▶ HYDRAULIC FLUIDS
- ▶ HIGHLY VISCOUS FLUIDS
- ▶ HEAVY BRINE SOLUTIONS

- ▶ MACHINE TOOL COOLANTS
- ▶ OIL WELL COMPLETION FLUIDS

Strainrite's **Continuous Resin-Bonded Depth Filter Cartridges** are manufactured using long staple polyester fibers, in a specific blend of fiber diameters, and offer the broadest range of micron rated cartridges, while virtually eliminating fiber migration. Utilizing our proprietary resin coating process, we are able to take well defined micron rated depth media and treat the material, converting it from a soft, compressible fabric, to a highly advanced rigid fiber technology.


This unique rigid fiber depth filter cartridge is engineered to take advantage of targeted depth media in an optimized pleated configuration, to maximize solids loading, gel removal capacity, and filter life. CRB cartridges contain more than 3.5 ft<sup>2</sup> of surface area per 10" segment, as compared to approximately 0.5 ft<sup>2</sup> of surface area per 10" segment in a typical molded or wound resin bonded cartridge. Increased surface area reduces flow velocity, which increases filter life exponentially due to a reduction in particle penetration, promoting increased dirt holding capacity and filter life.

These exceptional pleated cartridges are perfect for both aqueous and non-aqueous liquids. CRB fibers are already fully impregnated, diminishing problematic swelling caused by fluid absorption. This prevents the CRB from prematurely blinding off, making it superior to common untreated filters.




- ▶ **VIRTUALLY NO FIBER MIGRATION, DUE TO THE UTILIZATION OF LONG POLYESTER HEAT SET FIBERS**
- ▶ **LONGER FILTER LIFE ALSO REDUCES LABOR TIME ASSOCIATED WITH CHANGE-OUTS**
- ▶ **HIGHER SURFACE AREA COMPARED TO INDUSTRY STANDARD RESIN BONDED CARTRIDGES, WHICH PROVIDES LONGER FILTER LIFE, REDUCED DISPOSAL COST AND LOWER COST PER GALLON TO FILTER**
- ▶ **EXTREMELY HIGH FLOW RATES, DUE TO A SUBSTANTIAL INCREASE IN SURFACE AREA**
- ▶ **HIGH INTEGRITY ONE PIECE CONSTRUCTION**
- ▶ **NO EPOXIES, GLUES OR ADHESIVES**

## ORDER GUIDE

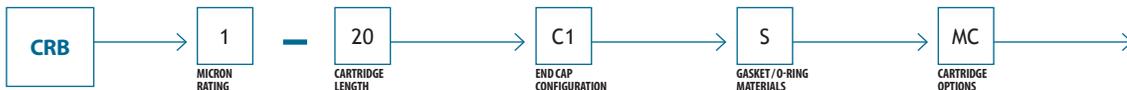

NOMINAL RATED RETENTION			
1, 5, 10, 25, 50, 75, 100, 200			
MAXIMUM DIFFERENTIAL PRESSURE		MAXIMUM OPERATING TEMPERATURE	
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		250°F (121°C) Continuous Duty	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Single packaging available. Bulk packaging in case quantities to reduce material disposal: 9.75-10 inch - 24 per carton   19.5-20 inch - 12 per carton   29.35-30 inch - 12 per carton   39-40 inch - 9 per carton			
FILTER MEDIA	END CAPS	CAGE/CORE	CONSTRUCTION METHOD
Phenolic Resin-Impregnated Polyester Material	Polypropylene Polyester	Polypropylene Polyester	Thermal Bond
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA	
EXTRUDED CAGE: 2.55" (6.48cm)   MOLDED CAGE: 2.68" (6.81cm)		3 SQUARE FEET PER 10"	
LENGTHS			
9.75" (24.8 cm)   10" (25.4 cm)   19.5" (49.6 cm)   20" (50.8 cm)   29.25" (74.4 cm)   29.5" (76.2 cm)   30" (76.2 cm)   39" (99.4 cm)   40" (102 cm)			

## PERFORMANCE CHARACTERISTICS

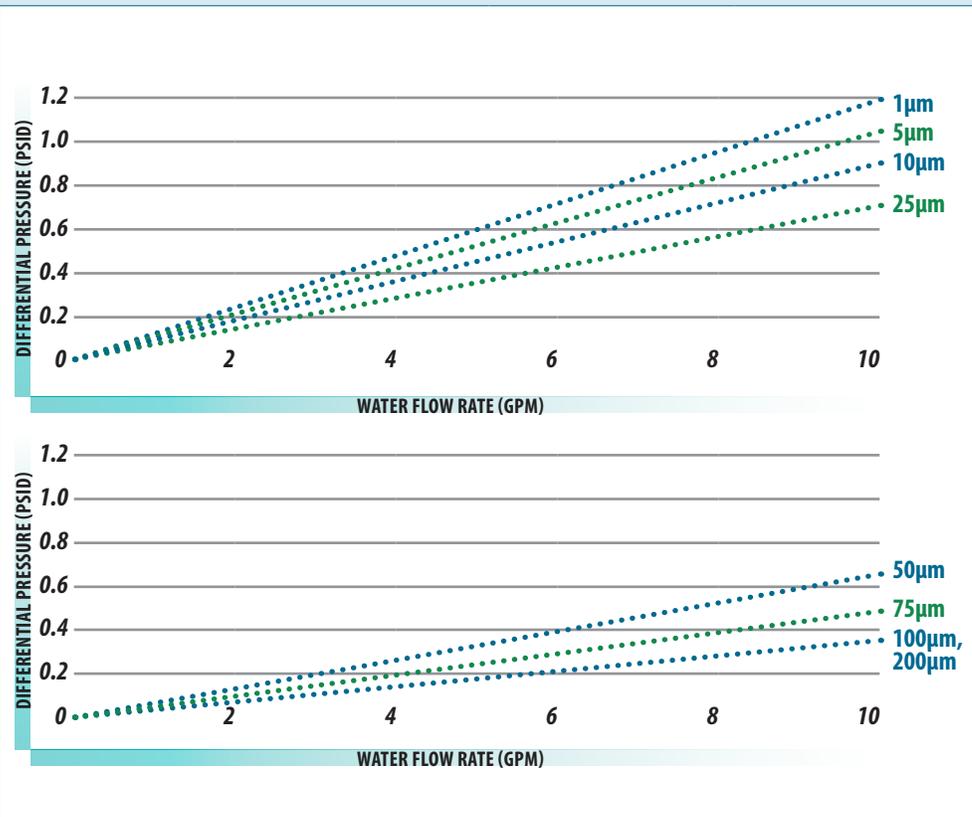

## ORDER OPTIONS

CARTRIDGE	
CRB	CRB Pleat
MICRON RATINGS	
1, 5, 10, 25, 50, 75, 100, 200	
CARTRIDGE LENGTH	
9.75, 10, 19.5, 20, 29.25, 29.5, 30, 39, 40	
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE OPTIONS	
MC	Molded Cage
APH	All Polyester Hardware




Strainrite's **Bev-MAXX** pleated membrane filters are specifically engineered to provide an absolute barrier to beverage spoiling micro-organisms. The **Bev-MAXX** incorporates a highly asymmetric polyethersulfone membrane within our exclusive pleat support configuration creating one of the industry's most rugged yeast removal filters. This exceptionally robust filter design means filter performance will remain effective after multiple steam sterilization cycles.

Every **Bev-MAXX** filter is integrity tested and flushed with high purity water to assure product performance and purity. Integrity test parameters have been correlated to microbiological retention for all of our membrane filters (refer to microbiological performance chart).

- ▶ **ABSOLUTE-RATED AND INTEGRITY TESTED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE TO ENSURE MICROBIOLOGICAL STABILITY**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **NON-FIBER SHEDDING POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION**
- ▶ **MAXIMUM PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **100% THERMALLY BONDED CONSTRUCTION**
- ▶ **HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI AUTOCLAVE AND HOT WATER SANITIZATION CYCLES**
- ▶ **316 STAINLESS STEEL INSERT STANDARD**
- ▶ **ALL MATERIALS ARE LISTED IN TITLE 21 OF THE US CODE OF FEDERAL REGULATIONS 177-182**
- ▶ **COMPONENT MATERIALS MEET THE BIOSAFETY CRITERIA OF THE USP REACTIVITY TEST FOR CLASS VI PLASTICS**
- ▶ **COMPONENT MATERIALS MEET THE "NON-FIBER RELEASING" CRITERIA AS DEFINED IN 21 CFR 210.3 (B) (6)**
- ▶ **BEV-MAXX CARTRIDGES ARE MANUFACTURED IN A FACILITY WHOSE QUALITY MANAGEMENT SYSTEM IS APPROVED BY AN ACCREDITED REGISTERING BODY TO THE ISO 9001:2008 STANDARD**
- ▶ **BEV-MAXX CARTRIDGES ARE 100% INTEGRITY TESTED AND DI FLUSHED**



## ORDER GUIDE

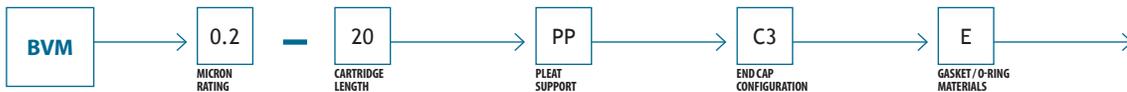

BVM0.2-20PPC3E

ABSOLUTE RATED RETENTION			
0.2, 0.45, 0.65			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		Reverse: 50 psid (3.4 bar) @ 75°F (24°C)	
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty			
STERILIZATION			
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Polyethersulfone	Polypropylene	Polypropylene	Polypropylene
SEALS		REINFORCING RING	
EPDM   Silicone		316 Stainless Steel	
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA	
2.7" (6.87cm)		7 square feet per 10" equivalent	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
INTEGRITY TEST VALUES			
PORE SIZE	BUBBLE POINT	TEST PRESSURE	AIR DIFFUSION
BVM0.2	50 psig in water	40 psig	≤16mL/min
BVM0.45	29 psig in water	23 psig	≤13.5mL/min
BVM0.65	26 psig in water	20 psig	≤14mL/min
MICROBIOLOGICAL PERFORMANCE			
MICROORGANISM	BVM0.2	BVM0.45	BVM0.65
<i>Oenococcus oeni</i>		≥10 <sup>7</sup>	
<i>Lactobacillus hilgardii</i>		≥10 <sup>7</sup>	
<i>Saccharomyces cerevisiae</i>		≥10 <sup>7</sup>	≥10 <sup>7</sup>
<i>Brevundimonas diminuta</i>	≥10 <sup>7</sup>		

## ORDER OPTIONS

CARTRIDGE	
BVM	Bev-MAXX
MICRON RATINGS	
0.2, 0.45, 0.65	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
GASKET/O-RING MATERIAL	
S E	Silicone EPDM




Strainrite's **Bev-Rite** pleated membrane filters are specifically engineered to provide a barrier to beverage spoiling micro-organisms. The **Bev-Rite** bio-reduction filter incorporates a highly asymmetric polyethersulfone membrane within our exclusive pleat support configuration, creating one of the industry's most rugged bacteria removal filters.

This exceptionally robust filter design means filter performance will remain effective after multiple steam sterilization cycles. Every **Bev-Rite** filter is integrity tested and flushed with high purity water to assure product performance and purity.

- ▶ **ABSOLUTE-RATED AND INTEGRITY TESTED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE TO ENSURE MICROBIOLOGICAL STABILITY**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **NON-FIBER SHEDDING POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION**
- ▶ **MAXIMUM PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **100% THERMALLY BONDED CONSTRUCTION**
- ▶ **HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI AUTOCLAVE AND HOT WATER SANITIZATION CYCLES**
- ▶ **316 STAINLESS STEEL INSERT STANDARD**
- ▶ **ALL MATERIALS ARE LISTED IN TITLE 21 OF THE US CODE OF FEDERAL REGULATIONS 177-182**
- ▶ **COMPONENT MATERIALS MEET THE BIOSAFETY CRITERIA OF THE USP REACTIVITY TEST FOR CLASS VI PLASTICS**
- ▶ **COMPONENT MATERIALS MEET THE "NON-FIBER RELEASING" CRITERIA AS DEFINED IN 21 CFR 210.3 (B) (6)**
- ▶ **BEV-RITE CARTRIDGES ARE MANUFACTURED IN A FACILITY WHOSE QUALITY MANAGEMENT SYSTEM IS APPROVED BY AN ACCREDITED REGISTERING BODY TO THE ISO 9001:2008 STANDARD**
- ▶ **BEV-RITE CARTRIDGES ARE 100% INTEGRITY TESTED AND DI FLUSHED**




# ORDER GUIDE

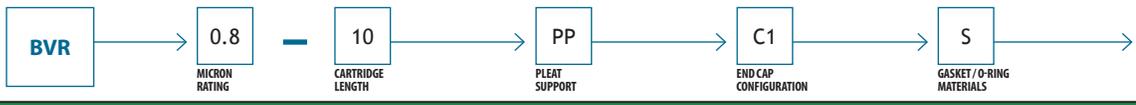

**BVR0.8-10PPC1S**

<b>ABSOLUTE RATED RETENTION</b>			
0.2, 0.45, 0.65, 0.8			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward:		Reverse:	
75 psid (5.1 bar) @ 75°F (24°C)		50 psid (3.4 bar) @ 75°F (24°C)	
40 psid (2.8 bar) @ 180°F (82°C)			
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>STERILIZATION</b>			
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
Polyethersulfone	Polypropylene	Polypropylene	Polypropylene
<b>SEALS</b>		<b>REINFORCING RING</b>	
EPDM   Silicone		316 Stainless Steel	
<b>CONSTRUCTION METHOD</b>		<b>OUTSIDE DIAMETER</b>	<b>APPROXIMATE SURFACE AREA</b>
Thermal Bond		2.7" (6.87cm)	7 square feet per 10" equivalent
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
<b>INTEGRITY TEST VALUES</b>			
<b>PORE SIZE</b>	<b>BUBBLE POINT</b>	<b>TEST PRESSURE</b>	
BVR0.2	50 psig in water	40 psig	
BVR0.45	38 psig in water	30 psig	
BVR0.65	26 psig in water	23 psig	
BVR0.8	16 psig in water	20 psig	
<b>PERFORMANCE CHARACTERISTICS</b>			

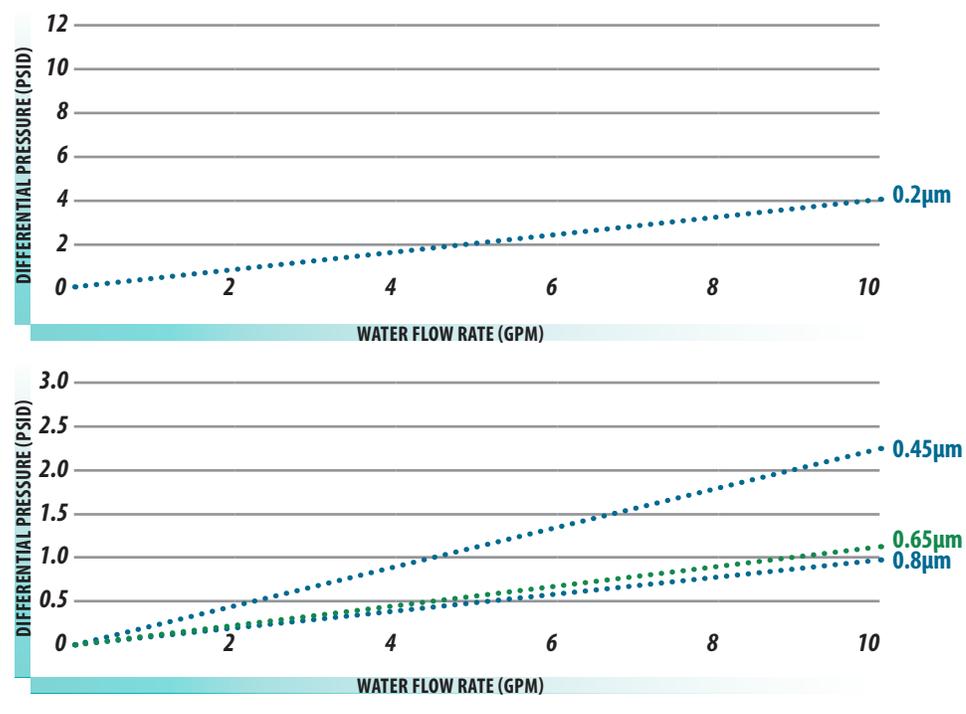

## ORDER OPTIONS

CARTRIDGE	
BVR	Bev-Rite
MICRON RATINGS	
0.2, 0.45, 0.65, 0.8	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C1	Double Open Ends
C3	Flat/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S E	Silicone EPDM

# Guard-Rite

Microglass over Polyethersulfone  
for Beverage Pre-final filtration

- ▶ PREFILTRATION OF JUICE
- ▶ PREFILTRATION OF WINE

- ▶ PREFILTRATION & CLARIFICATION FOR FINAL STERILIZING
- ▶ GRADE FILTER PROTECTION
- ▶ PREFILTRATION OF BEER



Created for beverage pre-final filtration, the **Guard-Rite** is the pre-final filter, to cost effectively reduce bioburden before final filtration and packaging. With a depth layer and synchronized final filtration layer optimized to extend final filter life with a stainless steel insert for steam or hot water sanitization.

**Guard-Rite** is engineered to provide cost effective removal of particles and reduction of beverage-spoiling micro-organisms. The superior flowing membrane ensures that flavor and color stay in your beverage.

Every **Guard-Rite** filter comes with a certificate of conformance and is manufactured to meet the highest cleanliness standards.



- ▶ RELIABLE NON FIBER RELEASING MEDIA
- ▶ SYNCHRONIZED MEDIA
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ NO ADDITIVES OR GLUE
- ▶ ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21
- ▶ THERMALLY BONDED CONSTRUCTION WITHOUT THE USE OF ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES
- ▶ HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI-AUTOCCLAVE CYCLES

## ORDER GUIDE



GR561-10PPC1S1DIF

## ABSOLUTE RATED RETENTION

561 = 1µm Microglass over 0.65 µm Polyethersulfone  
 562 = 2µm Microglass over 0.65 µm Polyethersulfone  
 563 = 3µm Microglass over 0.65 µm Polyethersulfone  
 568 = 0.8µm Microglass over 0.65 µm Polyethersulfone

## MAXIMUM DIFFERENTIAL PRESSURE

## MAXIMUM OPERATING TEMPERATURE

Forward:  
 75 psid (5.1 bar) @ 75°F (24°C)  
 40 psid (2.8 bar) @ 180°F (82°C)

180°F (82°C) Continuous Duty

## TOXICITY

Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact

## STERILIZATION

Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C)  
 Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility

## PACKAGING ECONOMY

Bulk packaging in case quantities to reduce material disposal:

5 inch - 48 per carton | 10 inch - 24 per carton | 20 inch - 12 per carton | 30 inch - 12 per carton | 40 inch - 9 per carton

## FILTER MEDIA

## END CAPS

## PLEAT SUPPORT MATERIAL

## CAGE/CORE

Microglass over  
Polyethersulfone

Polypropylene

Polypropylene  
Polyester

Polypropylene

## SEALS

Buna N | Fluorocarbon | EPDM | Silicone | FEP Encapsulated Fluorocarbon | FEP Encapsulated Silicone | PTFE Foam | PTFE Hard

## CONSTRUCTION METHOD

## OUTSIDE DIAMETER

## APPROXIMATE SURFACE AREA

Thermal Bond


2.7" (6.87cm)

5 square feet per 10" equivalent

## LENGTHS

5 inch (12.7 cm) | 10 inch (25.4 cm) | 20 inch (50.8 cm) | 30 inch (76.2 cm) | 40 inch (102 cm)

## PERFORMANCE CHARACTERISTICS

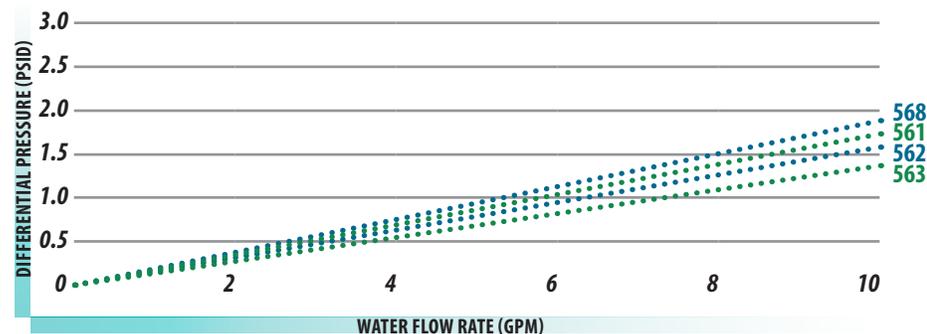

## ORDER OPTIONS

CARTRIDGE	
GR	Guard-Rite
MICRON RATINGS	
	561, 562, 563, 568
CARTRIDGE LENGTH	
	5, 10, 20, 30, 40
PLEAT SUPPORT	
PP PE	Polypropylene Polyester
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
1	FDA Grade
CARTRIDGE OPTIONS	
DIF	DI Flush

# Vino-MAXX E

Polyethersulfone for Final Sterilization of Wine

▶ FOOD AND BEVERAGE APPLICATIONS



Strainrite's **Vino-Maxx E** pleated membrane filters are specifically engineered to provide an absolute barrier to wine spoiling micro-organisms.

The **Vino-Maxx E** incorporates a highly asymmetric polyethersulfone membrane within our exclusive pleat support configuration creating one of the industry's most rugged yeast removal filters. This exceptionally robust filter design means filter performance will remain effective after multiple steam sterilization cycles.

Every **Vino-Maxx E** filter is integrity tested and flushed with high purity water to assure product performance and purity. Integrity test parameters have been correlated to microbiological retention for both of our 0.45µm and 0.65µm membrane filters (refer to microbiological performance chart).


- ▶ **ABSOLUTE-RATED AND INTEGRITY TESTED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE TO ENSURE MICROBIOLOGICAL STABILITY**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **NON-FIBER SHEDDING POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION**
- ▶ **MAXIMUM PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **100% THERMALLY BONDED CONSTRUCTION**
- ▶ **HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI AUTOCLAVE AND HOT WATER SANITIZATION CYCLES**
- ▶ **316 STAINLESS STEEL INSERT STANDARD**
- ▶ **ALL MATERIALS ARE LISTED IN TITLE 21 OF THE US CODE OF FEDERAL REGULATIONS 177-182**
- ▶ **COMPONENT MATERIALS MEET THE BIOSAFETY CRITERIA OF THE USP REACTIVITY TEST FOR CLASS VI PLASTICS**
- ▶ **COMPONENT MATERIALS MEET THE "NON-FIBER RELEASING" CRITERIA AS DEFINED IN 21 CFR 210.3 (B) (6)**
- ▶ **VINO-MAXX E CARTRIDGES ARE MANUFACTURED IN A FACILITY WHOSE QUALITY MANAGEMENT SYSTEM IS APPROVED BY AN ACCREDITED REGISTERING BODY TO THE ISO 9001:2008 STANDARD**
- ▶ **VINO-MAXX E CARTRIDGES ARE 100% INTEGRITY TESTED AND DI FLUSHED**



## ORDER GUIDE



<b>ABSOLUTE RATED RETENTION</b>			
0.45, 0.65			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		Reverse: 50 psid (3.4 bar) @ 75°F (24°C)	
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>STERILIZATION</b>			
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
Polyethersulfone	Polyethersulfone	Polypropylene	Polypropylene
<b>SEALS</b>		<b>REINFORCING RING</b>	
EPDM   Silicone		316 Stainless Steel	
<b>CONSTRUCTION METHOD</b>	<b>OUTSIDE DIAMETER</b>	<b>APPROXIMATE SURFACE AREA</b>	
Thermal Bond	2.7" (6.87cm)	7 square feet per 10" equivalent	
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
<b>INTEGRITY TEST VALUES</b>			
<b>PORE SIZE</b>	<b>BUBBLE POINT</b>	<b>TEST PRESSURE</b>	<b>AIR DIFFUSION</b>
VNXE0.45	38 psig in water	30 psig	≤13.5mL/min
VNXE0.65	20 psig in water	16 psig	≤14mL/min
<b>MICROBIOLOGICAL PERFORMANCE</b>			
<b>MICROORGANISM</b>	<b>VNXE0.45</b>	<b>VNXE0.65</b>	
<i>Oenococcus oeni</i>	≥10 <sup>7</sup>		
<i>Lactobacillus hilgardii</i>	≥10 <sup>7</sup>		
<i>Saccharomyces cerevisiae</i>	≥10 <sup>9</sup>	≥10 <sup>9</sup>	
<b>PERFORMANCE CHARACTERISTICS</b>			

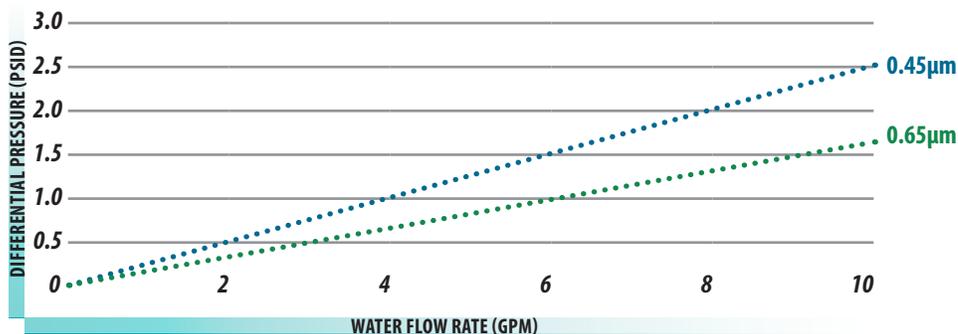

## ORDER OPTIONS

<b>CARTRIDGE</b>	
VNXE	Vino-MAXX E
<b>MICRON RATINGS</b>	
0.45, 0.65	
<b>CARTRIDGE LENGTH</b>	
5, 10, 20, 30, 40	
<b>PLEAT SUPPORT</b>	
PP	Polypropylene
<b>END CAP CONFIGURATIONS</b>	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
<b>GASKET/O-RING MATERIAL</b>	
S E	Silicone EPDM

# Trap-Rite

Polypropylene for Trap Filtration of Beer

▶ BREWERY CHEMICALS  
▶ FILTER AID PARTICLE  
REMOVAL

▶ FOOD AND BEVERAGE  
APPLICATIONS



Strainrite continues its tradition of state-of-the-art advanced filtration innovation with the **Trap-Rite**. A unique polypropylene depth filter, that utilizes long strand small and large diameter fibers to provide a high solids loading, absolute-rated, pleated depth filter. This binder-free depth media is excellent for removing filter aid particles from bright beer. **Trap-Rite** also offers more than twice the surface area compared with industry standard non-pleated depth filters. The increased surface area provides higher flow rates at reduced pressure, resulting in increased filter life.

All polypropylene construction materials are CFR 21 listed for direct food contact, which makes this filter ideal for a broad range of applications.

- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **100% POLYPROPYLENE, FDA COMPLIANT WITH CFR 21**
- ▶ **REMOVES FILTER AID PARTICLES**
- ▶ **VERY HIGH CONTAMINANT HOLDING CAPACITY**
- ▶ **MAXIMIZED PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **EXCELLENT RESISTANCE TO TYPICAL BREWERY USE CHEMICALS**
- ▶ **THERMALLY BONDED CONSTRUCTION, ELIMINATING PARTICLE BYPASS**




## ORDER GUIDE



TR10-10PPC1S11

RETENTION RATING			
1, 5, 10			
MAXIMUM DIFFERENTIAL PRESSURE		MAXIMUM OPERATING TEMPERATURE	
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		180°F (82°C) Continuous Duty	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Polypropylene Microfiber Composite	Polypropylene	Polypropylene	Polypropylene
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD		OUTSIDE DIAMETER	
Thermal Bond		2.55" (6.48cm)	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
PERFORMANCE CHARACTERISTICS			

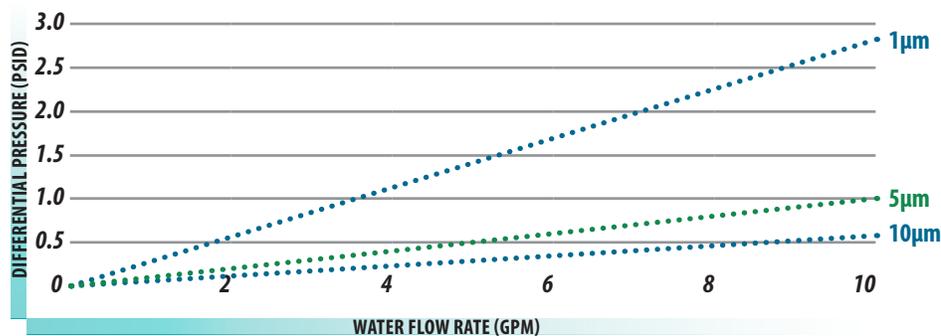

## ORDER OPTIONS

CARTRIDGE	
TR	Trap-Rite
MICRON RATINGS	
1, 5, 10	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
- 1	General FDA Grade
CARTRIDGE OPTIONS	
I MC	316 SS Insert Molded Cage

# Aqua-Pro Cartridge

Polypropylene for Drinking Water

▶ FOOD AND BEVERAGE APPLICATIONS

▶ DRINKING WATER



Strainrite's [Aqua-Pro Cartridge](#) filters are engineered to produce the highest purity drinking water, by optimizing throughput while maintaining absolute rated performance that is both predictable and repeatable.

Utilizing state-of-the-art online monitoring equipment and superior control over fiber diameter and web design, our continuous composite microfiber material delivers the industry's most uniform and consistent results.

[Aqua-Pro Cartridge](#) filters bring the strongest line of defense against waterborne diseases traced to cryptosporidium and giardia cysts. These organisms, potentially lethal to those with weakened or underdeveloped immune systems, are highly resistant to conventional water treatment processes such as chlorination, but are no match for the [Aqua-Pro Cartridge](#) filters, at an absolute 1 micron designed to exceed the ANSI/NSF Standard 53 of 99.95% for the removal of cysts.


- ▶ PERFORMANCE TESTED AND VERIFIED BY OUTSIDE LAB TO COMPLY WITH NSF/ANSI STANDARD 53 FOR REDUCTION OF CRYPTOSPORIDIUM AND GIARDIA CYSTS
- ▶ MEETS THE REQUIREMENTS OF USP PLASTIC CLASS VI
- ▶ HIGH SURFACE AREA – HIGH FLOW RATES AND LONG ON-LINE SERVICE
- ▶ CONSTRUCTED ENTIRELY OF POLYPROPYLENE
- ▶ COMPLIES WITH FDA TITLE 21 OF THE CODE OF FEDERAL REGULATIONS SECTIONS 174.5, AND 177.1520, AS APPLICABLE FOR FOOD AND BEVERAGE CONTACT
- ▶ DOUBLE O-RING STYLE ENDS FOR THE HIGHEST SEAL INTEGRITY
- ▶ VARIOUS O-RING MATERIALS AND CONFIGURATIONS – EASILY RETROFITS MOST SYSTEMS



## ORDER GUIDE



RETENTION RATING			
Crypto-Barrier			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		Reverse: 50 psid (3.4 bar) @ 75°F (24°C)	
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Polypropylene	Polypropylene	Polypropylene	Polypropylene
SEALS		CONSTRUCTION METHOD	
EPDM   Silicone		Thermal Bond	
OUTSIDE DIAMETER		INSIDE DIAMETER	
2.7" (6.87cm)		1.0" (2.54cm)	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
PERFORMANCE CHARACTERISTICS			

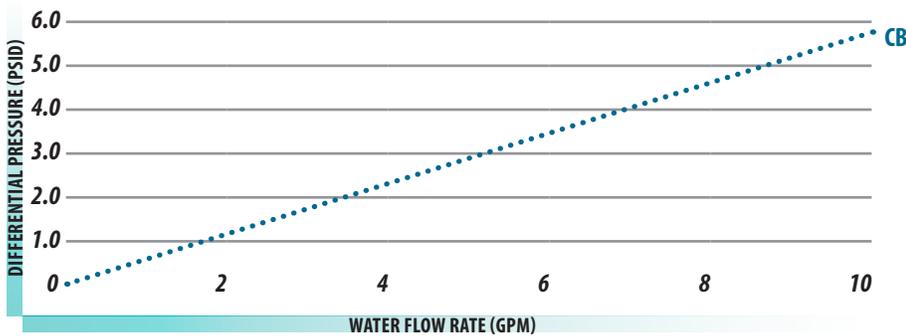

## ORDER OPTIONS

CARTRIDGE	
APC	Aqua-Pro Cartridge
MICRON RATINGS	
	CB
CARTRIDGE LENGTH	
	5, 10, 20, 30, 40
END CAP CONFIGURATIONS	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
GASKET/O-RING MATERIAL	
S E	Silicone EPDM

# Mem-PLEAT SG & Pur-MAXX SG

Sterilizing Grade Pleated Polyethersulfone Membrane

- ▶ LARGE VOLUME PARENTERALS
- ▶ SMALL VOLUME PARENTERALS
- ▶ BUFFER SOLUTIONS
- ▶ CELL CULTURE PURIFICATION
- ▶ DIAGNOSTICS
- ▶ STERILE INJECTABLES
- ▶ FINAL FILTRATION OF WFI AND CIP WATER
- ▶ VACCINES



Strainrite's [Sterilizing Grade Pleated Polyethersulfone Membrane Cartridges](#) are engineered to meet the highest standards of microorganism control for sterile fluids. These filter elements are validated for complete removal of *Brevundimonas diminuta* (ATCC 19146) at test concentrations of  $10^7$  CFU/cm<sup>2</sup> (Colony Forming Units).

This product is ideally suited for applications where fluid sterilization by filtration will be validated in accordance with GMP. These cartridges are produced utilizing a unique multi-pleated configuration integrating highly asymmetric and hydrophilic polyethersulfone membrane with exceptional pleat support materials. This novel multi-pleated approach increases cartridge life, strength and durability, and allows our filter cartridges to withstand multiple sterilization cycles without sacrificing product integrity.


These cartridges comply with FDA CFR Title 21 and USP Biological Reactivity for Class VI Plastics. By combining these ultra pure components with the low protein binding features of highly asymmetric hydrophilic polyethersulfone membrane makes them perfect for applications in the biopharmaceutical and bottled water industries.

Serial-layered (0.2um over 0.2um) and dual-layered (0.45um over 0.2um) configurations are available.



- ▶ **VALIDATED 0.2 µm ABSOLUTE RATED MEMBRANE CONFIGURATION**
- ▶ **HIGH SURFACE AREA MEMBRANE OFFERS EXCELLENT LIFE AND FLUX RATES WHILE PROVIDING ABSOLUTE FILTRATION**
- ▶ **ABSOLUTE-RATED DUAL LAYER MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY**
- ▶ **LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **NON-FIBER SHEDDING POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION**
- ▶ **PLEAT DESIGN FOR GREATER SURFACE AREA: LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS**
- ▶ **100% THERMALLY BONDED CONSTRUCTION**
- ▶ **INTEGRITY TESTED**
- ▶ **HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI AUTOCLAVE AND HOT WATER SANITIZATION CYCLES**
- ▶ **316 SS REINFORCED END TREATMENTS**
- ▶ **ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21 AND ARE BIO-SAFE IN ACCORDANCE WITH USP CLASS VI**
- ▶ **VALIDATION GUIDE AVAILABLE ON REQUEST**

## ORDER GUIDE

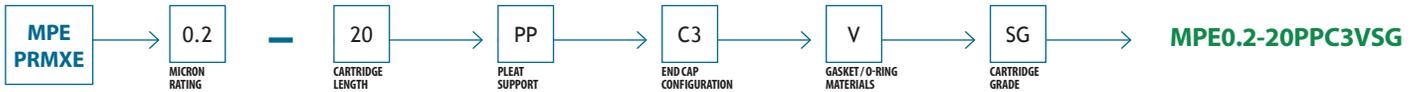

ABSOLUTE RATED RETENTION																								
0.2, 0.45/0.2																								
MAXIMUM DIFFERENTIAL PRESSURE																								
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)		Reverse: 50 psid (3.4 bar) @ 75°F (24°C)																						
MAXIMUM OPERATING TEMPERATURE																								
180°F (82°C) Continuous Duty Polypropylene																								
TOXICITY																								
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact																								
STERILIZATION																								
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility																								
PACKAGING ECONOMY																								
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton																								
FILTER MEDIA	END CAPS/ CAGE/CORE	PLEAT SUPPORT MATERIAL	REINFORCING RING																					
Polyethersulfone	Polypropylene	Polypropylene	316 Stainless Steel																					
SEALS		CONSTRUCTION METHOD																						
Buna N   Fluorocarbon   EPDM   Silicone		Thermal Bond																						
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA																						
MPE0.2: 2.55" (6.48cm)   PRMXE0.2: 2.7" (6.87cm)		6.5 square feet per 10" equivalent																						
LENGTHS																								
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)																								
INTEGRITY TEST VALUES																								
PORE SIZE	BUBBLE POINT	TEST PRESSURE	AIR DIFFUSION																					
0.2-SG	50 psig	40 psig	≤16mL/min																					
USP PHYSIOCHEMICAL TESTS FOR PLASTICS																								
Ultrapure water extracts from multiple lots of cartridges were tested and shown to have values that comply with USP limits																								
TEST	RESULTS	USP LIMIT																						
Non volatile residue Heavy Metals Residue on Ignition Buffering Capacity	<2mg <1ppm <2mg <1mL	<15mg <1ppm <5mg <10ml																						
PERFORMANCE CHARACTERISTICS																								
<table border="1"> <caption>Performance Characteristics Data (Approximate)</caption> <thead> <tr> <th>Water Flow Rate (GPM)</th> <th>Differential Pressure (PSID) - 0.2µm</th> <th>Differential Pressure (PSID) - 0.45/0.2µm</th> </tr> </thead> <tbody> <tr><td>0</td><td>0.0</td><td>0.0</td></tr> <tr><td>1</td><td>0.5</td><td>0.4</td></tr> <tr><td>2</td><td>1.0</td><td>0.8</td></tr> <tr><td>3</td><td>1.5</td><td>1.2</td></tr> <tr><td>4</td><td>2.0</td><td>1.6</td></tr> <tr><td>5</td><td>2.5</td><td>2.0</td></tr> </tbody> </table>				Water Flow Rate (GPM)	Differential Pressure (PSID) - 0.2µm	Differential Pressure (PSID) - 0.45/0.2µm	0	0.0	0.0	1	0.5	0.4	2	1.0	0.8	3	1.5	1.2	4	2.0	1.6	5	2.5	2.0
Water Flow Rate (GPM)	Differential Pressure (PSID) - 0.2µm	Differential Pressure (PSID) - 0.45/0.2µm																						
0	0.0	0.0																						
1	0.5	0.4																						
2	1.0	0.8																						
3	1.5	1.2																						
4	2.0	1.6																						
5	2.5	2.0																						

## ORDER OPTIONS

CARTRIDGE	
MPE PRMXE	Mem-Pleat E (2.55") Pur-MAXX E (2.7")
MICRON RATINGS	
0.2 0.45 / 0.2	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
GASKET / O-RING MATERIAL	
S B V E	Silicone Buna N Fluorocarbon EPDM
CARTRIDGE GRADE	
SG	Sterilizing Grade

# Endo-MAXX CN

Charged Nylon for Endotoxin Reduction

- ▶ ENDOTOXIN REMOVAL
- ▶ HIGH PURITY WATER



Strainrite's **Endo-Maxx CN** was developed for the filtration of fluids that require a high degree of particle and bacterial retention while achieving a two and a half log reduction of endotoxin.

Hydrophilic charged nylon membrane provides excellent flow rates, broad chemical compatibility, low extractability, high mechanical strength, and temperature resistance in a variety of applications for the biopharmaceutical and dialysis processes.

The **Endo-Maxx CN** meets USP Biological Reactivity Test, in vivo for class VI-121°C plastics. Sterilizable using industry recognized and accepted methods.


- ▶ **INTEGRITY TESTED ENDOTOXIN REMOVAL FILTER**
- ▶ **ABSOLUTE-RATED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY**
- ▶ **MAXIMUM PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER ELEMENT**
- ▶ **ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21, PHARMACEUTICAL GRADES ARE BIO-SAFE IN ACCORDANCE WITH USP CLASS VI**
- ▶ **THERMALLY BONDED CONSTRUCTION WITHOUT THE USE OF ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES**
- ▶ **POSITIVE ZETA POTENTIAL FOR REMOVAL OF CHARGED PARTICLES SMALLER THAN THE ABSOLUTE RETENTION RATING OF THE FILTER**



## ORDER GUIDE



<b>ABSOLUTE RATED RETENTION</b>			
0.1, 0.2			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			
Reverse: 50 psid (3.4 bar) @ 75°F (24°C)			
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>TOXICITY</b>			
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact			
<b>STERILIZATION</b>			
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
Charged Nylon 6,6 cast on Polyester	Polypropylene	Polypropylene Polyester	Polypropylene
<b>SEALS</b>			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>OUTSIDE DIAMETER</b>	<b>APPROXIMATE SURFACE AREA</b>		
2.7" (6.87cm)	6.8 square feet per 10" equivalent		
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
<b>ENDOTOXIN REDUCTION</b>			
The Endo-MAXX CN cartridge media has been third party verified to deliver a >2 log reduction of bacterial endotoxin using the gel-clot characterization method			
<b>PERFORMANCE CHARACTERISTICS</b>			

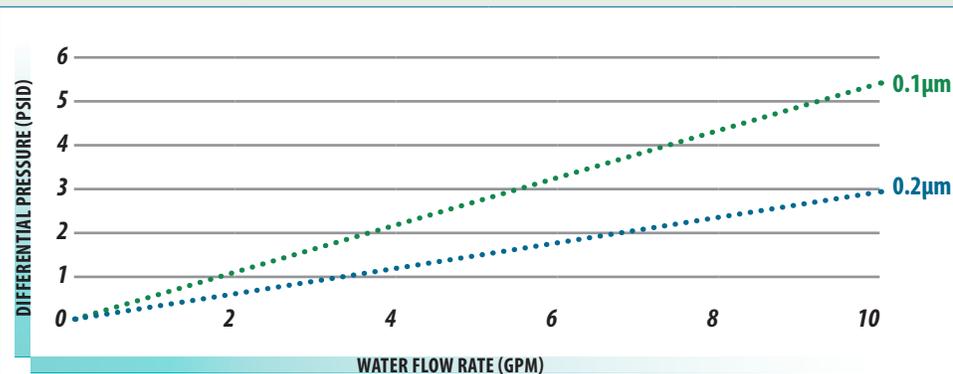

## ORDER OPTIONS

<b>CARTRIDGE</b>	
EDXCN	Endo-MAXX CN
<b>MICRON RATINGS</b>	
0.1, 0.2	
<b>CARTRIDGE LENGTH</b>	
5, 10, 20, 30, 40	
<b>PLEAT SUPPORT</b>	
PE PP	Polyester Polypropylene
<b>END CAP CONFIGURATIONS</b>	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
<b>GASKET/O-RING MATERIAL</b>	
S B V E TF TH TV TS	Silicone Buna N Fluorocarbon EPDM PTFE Foam PTFE Hard Encapsulated Fluorocarbon Encapsulated Silicone

# Ink-Jet IKP

Polypropylene for Ink-jet Inks

▶ HIGH VISCOSITY  
INK-JET INKS

▶ PIGMENT BASED  
INK-JET INKS

▶ DYE BASED  
INK-JET INKS




Strainrite's **Ink-Jet IKP** filter is another example of Strainrite's continued tradition of providing industry leading filtration solutions. IKP filters offer more surface area and less depth than the dual-density IKS filters to achieve industry leading performance as a final filter for pigment and dye based inkjet inks.

The **Ink-Jet IKP** filters are manufactured without binders or resins, in our class 10,000 clean room resulting in an extremely clean non-fiber shedding filter.

- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION RESULTS**
- ▶ **LOWER PRESSURE DROPS, WHICH YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **100% POLYPROPYLENE CONSTRUCTION OFFERS A WIDE RANGE OF CHEMICAL COMPATIBILITY**
- ▶ **THERMALLY BONDED CONSTRUCTION ENSURES A CLEANER FILTRATE WHILE MINIMIZING EXTRACTABLES**




# ORDER GUIDE

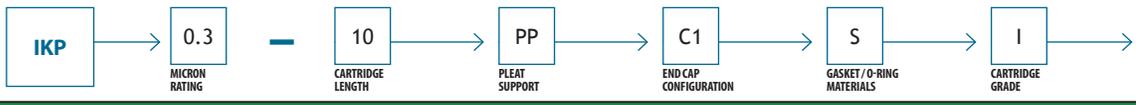

**IKP0.3-10PPC1SI**

<b>RETENTION RATING</b>			
0.3, 0.5, 1, 3, 5, 10, 15, 20, 40, 70, 90			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>TOXICITY</b>			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
Polypropylene	Polypropylene	Polypropylene	Polypropylene
<b>SEALS</b>			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>OUTSIDE DIAMETER</b>			
2.68" (6.81cm)			
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
<b>EFFICIENCY</b>			
IKP0.3 — BETA100 @ 0.3µm IKP0.5 — BETA100 @ 0.5µm IKP1 — BETA100 @ 1µm IKP3 — BETA100 @ 3µm	IKP5 — BETA100 @ 5µm IKP10 — BETA100 @ 10µm IKP15 — BETA100 @ 15µm	IKP20 — BETA100 @ 20µm IKP40 — BETA100 @ 40µm IKP70 — BETA100 @ 70µm IKP90 — BETA100 @ 90µm	

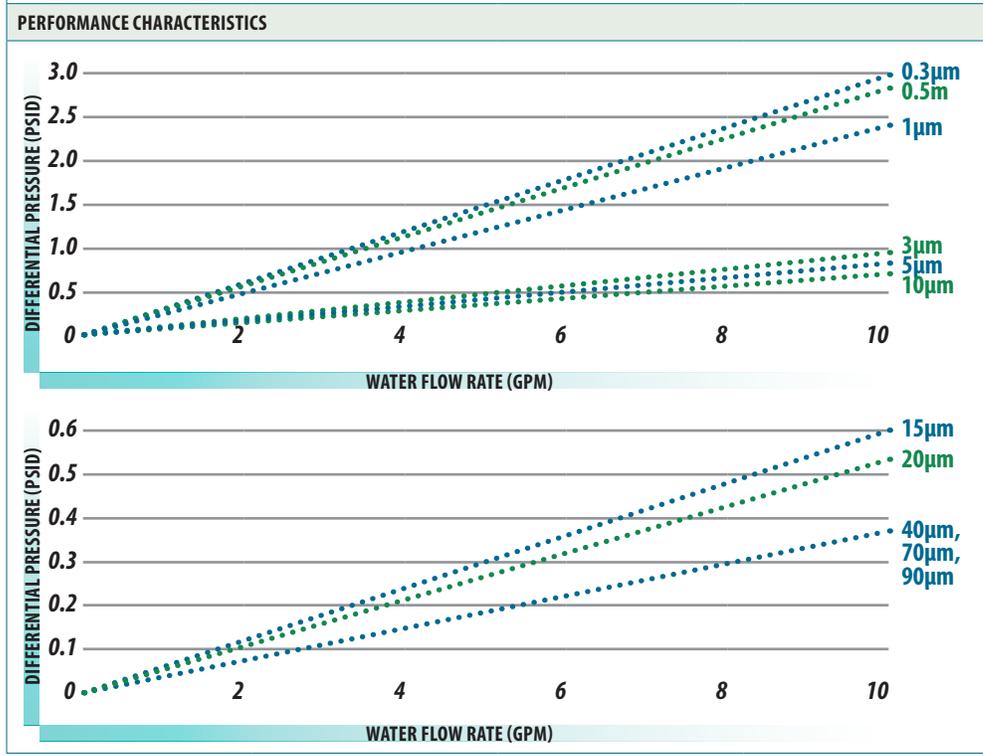

## ORDER OPTIONS

CARTRIDGE	
IKP	Ink-Jet IKP
MICRON RATINGS	
0.3, 0.5, 1, 3, 5, 10, 15, 20, 40, 70, 90	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
I	316 SS Insert

# Ink-Jet IKS

Dual Density Polypropylene for Ink-jet Inks

- ▶ HIGH VISCOSITY INK-JET INKS
- ▶ GEL REMOVAL

- ▶ PIGMENT BASED INK-JET INKS
- ▶ DYE BASED INK-JET INKS




Strainrite's **Ink-Jet Select IKS** filter is another example of Strainrite's continued tradition of providing industry leading filtration solutions. **Ink-Jet Select** filters feature a graded pore density to maximize filter life and performance. IKS filters incorporate our proprietary melt blown, micro- and nano-fiber technology to achieve industry leading performance for both pigment and dye based ink-jet inks.

The **Ink-Jet Select** filters are manufactured without binders or resins, in our class 10,000 clean room resulting in an extremely clean non-fiber shedding filter. Due to our utilization of the unique graded pore density depth media this element is outstanding for removing gels, compared to traditional pleated polypropylene filters.

- ▶ **ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION RESULTS**
- ▶ **LOWER PRESSURE DROPS, WHICH YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME**
- ▶ **100% POLYPROPYLENE CONSTRUCTION OFFERS A WIDE RANGE OF CHEMICAL COMPATIBILITY**
- ▶ **GRADED PORE DENSITY PLEAT DESIGN TO OPTIMIZE SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER CARTRIDGE**




# ORDER GUIDE

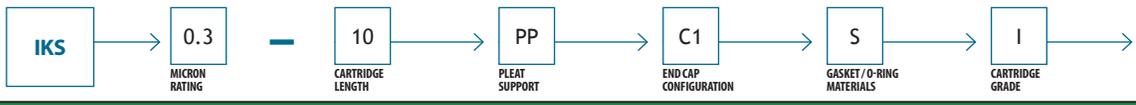

**IKS0.3-10PPC1SI**

<b>RETENTION RATING</b>			
0.3, 0.5, 1, 3, 5, 10, 15, 20, 40, 70, 90			
<b>MAXIMUM DIFFERENTIAL PRESSURE</b>			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>TOXICITY</b>			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAGE/CORE</b>
Polypropylene Micro/Nano-fiber Composite	Polypropylene	Polypropylene	Polypropylene
<b>SEALS</b>			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>OUTSIDE DIAMETER</b>			
2.68" (6.81cm)			
<b>LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
<b>EFFICIENCY</b>			
IKS0.3 — BETA100 @ 0.3µm IKS0.5 — BETA100 @ 0.5µm IKS1 — BETA100 @ 1µm IKS3 — BETA100 @ 3µm	IKS5 — BETA100 @ 5µm IKS10 — BETA100 @ 10µm IKS15 — BETA100 @ 15µm	IKS20 — BETA100 @ 20µm IKS40 — BETA100 @ 40µm IKS70 — BETA100 @ 70µm IKS90 — BETA100 @ 90µm	

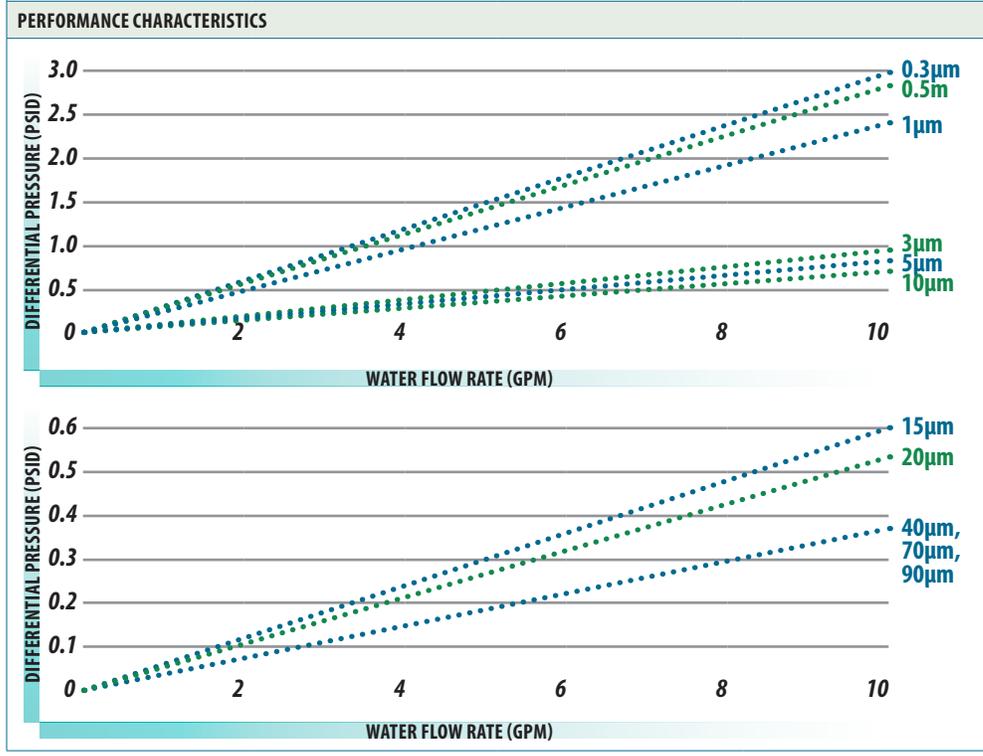

## ORDER OPTIONS

CARTRIDGE	
IKS	Ink-Jet Select IKS
MICRON RATINGS	
0.3, 0.5, 1, 3, 5, 10, 15, 20, 40, 70, 90	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
I	316 SS Insert

# Ink-Jet IKG

Microglass for Ink-jet Inks

- ▶ HIGH VISCOSITY INK-JET INKS
- ▶ GEL REMOVAL

- ▶ PIGMENT BASED INK-JET INKS
- ▶ DYE BASED INK-JET INKS



The Ink-Jet IKG filter is another example of Strainrite's continued tradition of providing industry leading filtration solutions.

The Ink-Jet IKG filters are assembled without binders or resins, in our class 10,000 clean room, resulting in an extremely clean non-fiber shedding filter. Due to our utilization of the unique graded pore density depth media this element is outstanding for removing gels, compared to traditional pleated polypropylene filters.

- ▶ ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION RESULTS
- ▶ LOWER PRESSURE DROPS, WHICH YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME
- ▶ THERMALLY BONDED CONSTRUCTION ENSURES A CLEANER FILTRATE WHILE MINIMIZING EXTRACTABLES




## ORDER GUIDE



IKG1-20PPC2BI

RETENTION RATING			
0.5, 1, 3, 6, 10, 20, 40			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward: 75 psid (5.1 bar) @ 75°F (24°C) 40 psid (2.8 bar) @ 180°F (82°C)			
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty Polypropylene		275°F (135°C) Continuous Duty Polyester	
TOXICITY			
All components meet all relevant USP XXII Class VI test for biological safety and FDA requirements for contact with food and beverage per 21CFR177.1520			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Borosilicate Microglass	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER			
2.68" (6.81cm)			
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
EFFICIENCY			
IKG0.5 — BETA100 @ 0.5µm IKG1 — BETA100 @ 1µm	IKG3 — BETA100 @ 3µm IKG6 — BETA100 @ 6µm IKG10 — BETA100 @ 10µm	IKG20 — BETA100 @ 20µm IKG40 — BETA100 @ 40µm	

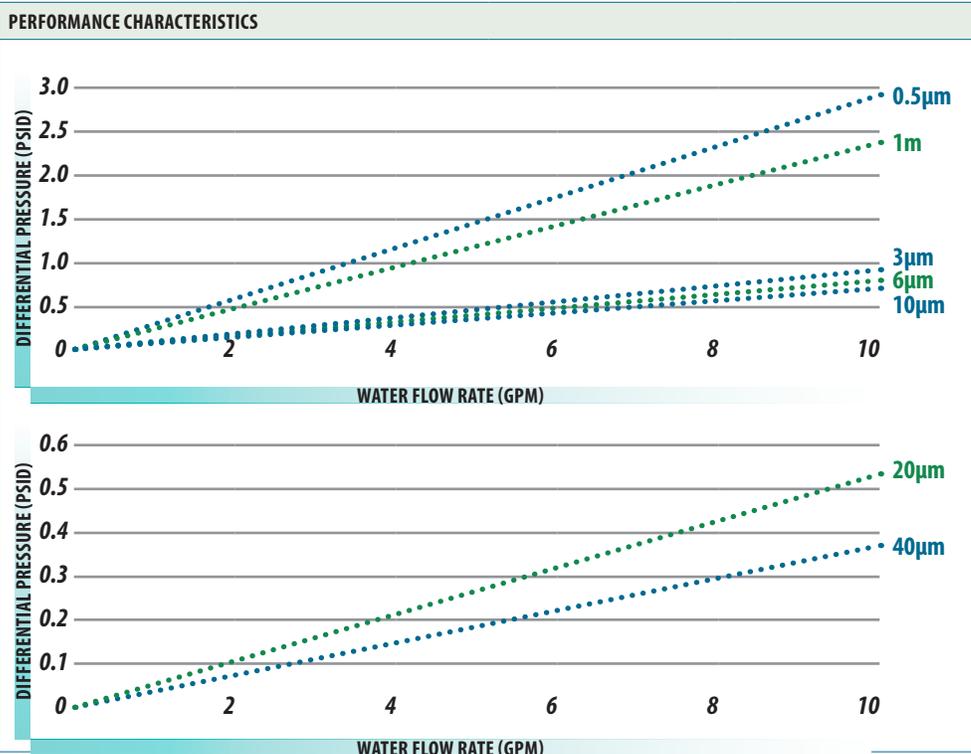

## ORDER OPTIONS

CARTRIDGE	
IKG	Ink-Jet IKG
MICRON RATINGS	
0.5, 1, 3, 6, 10, 20, 40	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PE PP	Polyester Polypropylene
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET / O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
I APH	316 SS Insert All Polyester Hardware

# PES-E

Polyethersulfone For Microelectronics

- ▶ HIGH PURITY CHEMICAL FILTRATION
- ▶ LIQUID CLARIFICATION
- ▶ GENERAL WATER FILTRATION

- ▶ SEMICONDUCTOR ELECTRONICS
- ▶ DEIONIZED WATER SYSTEMS



Strainrite's PES-E was developed for microelectronics industry where a high degree of particle retention and/or constant bacterial barrier for effective sterilization is required.

Hydrophilic asymmetric polyethersulfone membranes ensure excellent flow rates, broad chemical compatibility, low protein binding, low extractability, high mechanical strength, and temperature resistance in a variety of applications in the microelectronics industry. The PES-E is 100% integrity testable and utilizes Strainrite's double rinse process to ensure extremely low extractables. Polyethersulfone offers a broad range of chemical compatibility and temperature performance.

The PES-E meets USP Biological Reactivity Test, in vivo for class VI-121°C plastics. Sterilizable using industry recognized and accepted methods.



- ▶ HIGH SURFACE AREA MEMBRANE OFFERS EXCELLENT LIFE AND FLUX RATES WHILE PROVIDING ABSOLUTE FILTRATION
- ▶ ABSOLUTE-RATED MEMBRANE PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATE QUALITY
- ▶ LOW PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME
- ▶ NON-FIBER SHEDDING POLYPROPYLENE SUPPORT MATERIALS ELIMINATE FIBER MIGRATION
- ▶ INTEGRITY TESTABLE
- ▶ MAXIMUM PLEAT DESIGN FOR GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, FEWER CHANGE OUTS AND REDUCED OPERATING COSTS PER ELEMENT
- ▶ THERMALLY BONDED CONSTRUCTION WITHOUT THE USE OF ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES
- ▶ HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE

## ORDER GUIDE



PESE50-10PPC1SET

ABSOLUTE RATED RETENTION (NANOMETERS)			
50, 100, 200, 450, 650, 800, 1200			
MAXIMUM DIFFERENTIAL PRESSURE			
Forward:		Reverse:	
75 psid (5.1 bar) @ 75°F (24°C)		50 psid (3.4 bar) @ 75°F (24°C)	
40 psid (2.8 bar) @ 180°F (82°C)			
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty Polypropylene			
TOXICITY			
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact			
STERILIZATION			
Cartridge can be sterilized via steam or Autoclave: 20 times at 275°F (135°C) Cartridge may be sanitized in place with common sanitizing agents, contact factory for chemical compatibility			
DI WATER SPECIFICATIONS			
All Cartridges are 18 megohm flushed			
PACKAGING ECONOMY			
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton   40 inch - 9 per carton			
FILTER MEDIA	END CAPS	PLEAT SUPPORT MATERIAL	CAGE/CORE
Polyethersulfone	Polypropylene	Polypropylene	Polypropylene
SEALS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Fluorocarbon   FEP Encapsulated Silicone   PTFE Foam   PTFE Hard			
CONSTRUCTION METHOD			
Thermal Bond			
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA	
2.7" (6.87cm)		6.8 square feet per 10" equivalent	
LENGTHS			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			
PERFORMANCE CHARACTERISTICS			

## ORDER OPTIONS

CARTRIDGE	
PESE	PES-E
NANOMETER RATINGS	
50, 100, 200, 450, 650, 800, 1200	
CARTRIDGE LENGTH	
5, 10, 20, 30, 40	
PLEAT SUPPORT	
PP	Polypropylene
END CAP CONFIGURATIONS	
C1	Double Open Ends
C2	213/Recessed Cup
C3	Flat/222
C4	Single Open End/Flat
C5	Recessed Cup/222
C6	Flat/226
C7	Fin/226
C8	Fin/222
GASKET/O-RING MATERIAL	
S	Silicone
B	Buna N
V	Fluorocarbon
E	EPDM
TF	PTFE Foam
TH	PTFE Hard
TV	Encapsulated Fluorocarbon
TS	Encapsulated Silicone
CARTRIDGE GRADE	
E	Electronics
CARTRIDGE OPTIONS	
I	316 SS Insert
T	Integrity Tested

# Vent-MAXX

Double Layer PTFE for Sterilization in Air & Vent Gas Applications

- ▶ FERMENTER INLET AIR
- ▶ STERILE VENTING OF TANKS

- ▶ STERILE PROCESS AIR
- ▶ EXHAUST VENTING



Strainrite's **Vent-Maxx** gas sterilizing filters set a new standard for PTFE membrane elements. These filters utilize a technologically advanced membrane in our unique pleat construction to deliver unrivalled efficiency, superior strength, and high flow rates.

**Vent-Maxx** double layer PTFE membrane filters are designed to remove microorganisms, particulate, and moisture in your most demanding air and gas applications. These liquid validated sterilizing grade filters are designed to meet the highest levels of security required in the pharmaceutical, food and beverage, and biopharmaceutical industries.

**Vent-Maxx** filters conform to USP Class VI – 121oC and 21 CFR Part 177. Strainrite delivers clear solutions to your air and gas filtration applications.



- ▶ PTFE MEMBRANES
- ▶ INHERENTLY HYDROPHOBIC MEDIA
- ▶ 100% INTEGRITY TESTED
- ▶ HIGH SURFACE AREA
- ▶ STERILIZING GRADE IN LIQUIDS
- ▶ VIRUS RETENTIVE IN GASES
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ WATER INTRUSION TESTABLE
- ▶ QUALITY CONTROL CERTIFICATE WITH EVERY FILTER
- ▶ FDA LISTED MATERIALS PER CFR 21
- ▶ CAN BE STEAM STERILIZED MULTIPLE TIMES IN SITU FOR LONGER FILTER LIFE
- ▶ MANUFACTURED IN CERTIFIED CLEAN ROOMS

## ORDER GUIDE



MAXIMUM DIFFERENTIAL PRESSURE																	
Forward:		Reverse:															
75 psid (5.1 bar) @ 75°F (24°C)		50 psid (3.4 bar) @ 75°F (24°C)															
40 psid (2.8 bar) @ 180°F (82°C)																	
MAXIMUM OPERATING TEMPERATURE																	
180°F (82°C) Continuous Duty																	
TOXICITY																	
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact																	
STERILIZATION																	
Vent-Maxx cartridges have been validated for bacterial removal in air at an aerosol bacterial challenge level of <i>Brevundimonas diminuta</i> at 10 <sup>7</sup> per cm <sup>2</sup> per ASTM (F 838-05)																	
Liquid challenge validated as sterilizing grade filter at a challenge level of <i>Brevundimonas diminuta</i> at 10 <sup>7</sup> per cm <sup>2</sup> per ASTM (F 838-05)																	
Water Intrusion Test (WIT) value of > 60 psi with a WIT not to exceed 75 psi																	
PACKAGING ECONOMY																	
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton																	
FILTER MEDIA	END CAPS/ CAGE/CORE	PLEAT SUPPORT MATERIAL	END CAP INSERT														
Double Layer PTFE	Polypropylene	Polypropylene	316 Stainless Steel														
SEALS		CONSTRUCTION METHOD															
Fluorocarbon   Silicone		Thermal Bond															
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA															
2.7" (6.87cm)		7.5 square feet per 10" equivalent															
LENGTHS																	
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)																	
INTEGRITY TEST VALUES																	
All cartridges are integrity tested prior to shipment using pressure decay test method. Values below are for cartridges wetted with 100% IPA.																	
CARTRIDGE	TEST PRESSURE	DIFFUSIONAL FLOW															
10"	14 psi	25mL/min															
20"	14 psi	50mL/min															
30"	14 psi	75mL/min															
PERFORMANCE CHARACTERISTICS																	
<table border="1"> <caption>Pressure Drop vs Air Flow Rate Data</caption> <thead> <tr> <th>Air Flow Rate (SCFM)</th> <th>Pressure Drop (PSID)</th> </tr> </thead> <tbody> <tr><td>0</td><td>0.0</td></tr> <tr><td>20</td><td>0.2</td></tr> <tr><td>40</td><td>0.4</td></tr> <tr><td>60</td><td>0.6</td></tr> <tr><td>80</td><td>0.8</td></tr> <tr><td>100</td><td>1.15</td></tr> </tbody> </table>				Air Flow Rate (SCFM)	Pressure Drop (PSID)	0	0.0	20	0.2	40	0.4	60	0.6	80	0.8	100	1.15
Air Flow Rate (SCFM)	Pressure Drop (PSID)																
0	0.0																
20	0.2																
40	0.4																
60	0.6																
80	0.8																
100	1.15																

## ORDER OPTIONS

CARTRIDGE	
VM	Vent-MAXX
CARTRIDGE LENGTH	
5, 10, 20, 30	
END CAP CONFIGURATIONS	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
GASKET / O-RING MATERIAL	
S V	Silicone Fluorocarbon
CARTRIDGE GRADE	
2	Pharmaceutical

# Vent-Rite

Pleated PTFE for Sterilization in Air & Vent Gas Applications

- ▶ FERMENTER INLET AIR
- ▶ STERILE VENTING OF TANKS

- ▶ STERILE PROCESS AIR
- ▶ EXHAUST VENTING



Strainrite's **Vent-Rite** hydrophobic, sterilizing PTFE membrane filters provide the highest levels of security in demanding air and gas applications. These filters are designed to remove microorganisms, particulate and moisture. Strainrite's optimized design ensures exceptional gas flow rate and throughput for the biopharmaceutical, food and beverage markets.

**Vent-Rite** filters are designed for applications that require particulate security to 0.003 $\mu$ m in gas and air and 0.2 $\mu$ m in liquids. Strainrite delivers value and security with these aerosol validated cartridges.

**Vent-Rite** meets USP Biological Reactivity Test Criteria, is non-fiber-releasing, and manufactured to withstand multiple sterilization cycles, when using industry recognized and accepted methods.



- ▶ PTFE MEMBRANES
- ▶ INHERENTLY HYDROPHOBIC MEDIA
- ▶ 100% INTEGRITY TESTED
- ▶ HIGH SURFACE AREA
- ▶ AEROSOL VALIDATED
- ▶ VIRUS RETENTIVE IN GASES
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ WATER INTRUSION TESTABLE
- ▶ QUALITY CONTROL CERTIFICATE WITH EVERY FILTER
- ▶ FDA LISTED MATERIALS PER CFR 21
- ▶ CAN BE STEAM STERILIZED MULTIPLE TIMES IN SITU FOR LONGER FILTER LIFE
- ▶ MANUFACTURED IN CERTIFIED CLEAN ROOMS

## ORDER GUIDE



MAXIMUM DIFFERENTIAL PRESSURE																	
Forward:		Reverse:															
75 psid (5.1 bar) @ 75°F (24°C)		50 psid (3.4 bar) @ 75°F (24°C)															
40 psid (2.8 bar) @ 180°F (82°C)																	
MAXIMUM OPERATING TEMPERATURE																	
180°F (82°C) Continuous Duty																	
TOXICITY																	
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact																	
STERILIZATION																	
Vent-Maxx cartridges have been validated for bacterial removal in air at an aerosol bacterial challenge level of <i>Brevundimonas diminuta</i> at 10 <sup>7</sup> per cm <sup>2</sup> per ASTM (F 838-05)																	
PACKAGING ECONOMY																	
Bulk packaging in case quantities to reduce material disposal: 5 inch - 48 per carton   10 inch - 24 per carton   20 inch - 12 per carton   30 inch - 12 per carton																	
FILTER MEDIA	END CAPS/ CAGE/CORE	PLEAT SUPPORT MATERIAL	END CAP INSERT														
PTFE	Polypropylene	Polypropylene	316 Stainless Steel														
SEALS		CONSTRUCTION METHOD															
Fluorocarbon   Silicone		Thermal Bond															
OUTSIDE DIAMETER		APPROXIMATE SURFACE AREA															
2.7" (6.87cm)		8.5 square feet per 10" equivalent															
LENGTHS																	
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)																	
INTEGRITY TEST VALUES																	
All cartridges are integrity tested prior to shipment using pressure decay test method. Values below are for cartridges wetted with 100% IPA.																	
CARTRIDGE	TEST PRESSURE	DIFFUSIONAL FLOW															
10"	14 psi	100mL/min															
20"	14 psi	200mL/min															
30"	14 psi	300mL/min															
PERFORMANCE CHARACTERISTICS																	
<table border="1"> <caption>Pressure Drop vs Air Flow Rate Data</caption> <thead> <tr> <th>Air Flow Rate (SCFM)</th> <th>Pressure Drop (PSID)</th> </tr> </thead> <tbody> <tr><td>0</td><td>0.0</td></tr> <tr><td>20</td><td>0.2</td></tr> <tr><td>40</td><td>0.4</td></tr> <tr><td>60</td><td>0.6</td></tr> <tr><td>80</td><td>0.8</td></tr> <tr><td>100</td><td>1.15</td></tr> </tbody> </table>				Air Flow Rate (SCFM)	Pressure Drop (PSID)	0	0.0	20	0.2	40	0.4	60	0.6	80	0.8	100	1.15
Air Flow Rate (SCFM)	Pressure Drop (PSID)																
0	0.0																
20	0.2																
40	0.4																
60	0.6																
80	0.8																
100	1.15																

## ORDER OPTIONS

CARTRIDGE	
VR	Vent-Rite
CARTRIDGE LENGTH	
5, 10, 20, 30	
END CAP CONFIGURATIONS	
C3 C6 C7 C8	Flat/222 Flat/226 Fin/226 Fin/222
GASKET/O-RING MATERIAL	
S V	Silicone Fluorocarbon
CARTRIDGE GRADE	
2	Pharmaceutical

# MAXX-Cap

Single-Use / Multi-Use Ultrapure Polypropylene Capsules

▶ ULTRAPURE  
CHEMICAL

▶ BIO-PHARMACEUTICAL

▶ HIGH VALUE  
PRODUCTS

▶ BIO-TECHNOLOGY

▶ OPHTHALMICS

▶ FOOD AND BEVERAGE  
PROCESSING INKS

The Strainrite **MAXX-Cap** capsule is made of ultrapure polypropylene using FDA compliant materials. The **MAXX-Cap** was designed for single-use and multi-use applications. Strainrite's depth filters and our complete line of membranes can be installed in our proprietary capsule design.

*D1/01 - Sanitary*



*D2/02 - 1/2" Female NPT*



*D3/03 - 1/4" Hose Barb*



*D4/04 - 1/2" Hose Barb*



*D5/05 - Graduated Hose Barb*



Our proprietary design utilizes an inlet and outlet vent for confident start up and safe efficient processing. Strainrite offers a wide array of materials from the innovative SG to our charged modified CN as well as absolute and nominal media like polypropylene and microglass. Strainrite capsules will also accept our sterile air and vent product line, the Vent Maxx and Vent Rite.

**MAXX-Cap** is available in sizes from 5" to 40". Strainrite offers the advantages of a capsule with low internal void space, that reduces valuable product loss by reducing your process costs. All Strainrite capsules are adaptable for use with sanitary fittings that can be autoclaved. Strainrite **MAXX-Cap** capsules may be integrated into existing capsule applications.

Made of 100% polypropylene, Strainrite's capsule design incorporates thermal bonding. Thermal bonding provides an integral fit that requires no glues, binders, surfactants or adhesives. This design ensures low extractable filtrate when incorporated with our low extractable 100% clean room manufactured cartridges.



- ▶ RELIABLE NON-FIBER RELEASING MATERIALS
- ▶ NO ADDITIVES OR GLUE
- ▶ ALL MATERIALS OF CONSTRUCTION ARE FDA COMPLIANT WITH CFR TITLE 21
- ▶ THERMALLY BONDED CONSTRUCTION WITHOUT THE USE OF ADHESIVES OR BINDERS, RESULTING IN LOWER EXTRACTABLES
- ▶ HIGH STRENGTH DESIGN ALLOWING FOR EXTENDED USE AND MULTI-AUTOCLEASE CYCLES

# ORDER GUIDE



## MC-P5D1O1PMX12E

<b>MAXIMUM PRESSURE</b>			
70 psi @ 70°F (21.1°C)			
<b>MAXIMUM OPERATING TEMPERATURE</b>			
180°F (82°C) Continuous Duty			
<b>TOXICITY</b>			
Cartridge materials meet USP Class VI and CFR 21 for food and beverage contact			
<b>STERILIZATION</b>			
Autoclave: May be autoclaved 3 times for 60 minutes. Not in line steam sterilizable.			
<b>PACKAGING ECONOMY</b>			
Bulk packaging in case quantities to reduce material disposal: 5 inch - Individually Boxed - 6 case / 9 case quantity    20 inch - Individually Boxed - 6 case quantity    40 inch - Individually Boxed 10 inch - Individually Boxed - 6 case / 12 case quantity    30 inch - Individually Boxed - 6 case quantity			
<b>MEMBRANE MEDIA</b>	<b>PLEATED DEPTH MEDIA</b>	<b>PLEAT SUPPORT MATERIAL</b>	<b>CAPSULE HARDWARE</b>
Polyethersulfone Polysulfone Nylon	Borosilicate Microglass Polypropylene Microfiber	Polypropylene Polyester	Polypropylene
<b>END CAPS</b>	<b>CARTRIDGE SEALS</b>		
Polypropylene	Buna N   Fluorocarbon   EPDM   Silicone		
<b>CAGE/CORE</b>	<b>CAPSULE VENT SEALS</b>		
Polypropylene	Buna N   Fluorocarbon   EPDM   Silicone		
<b>OUTSIDE DIAMETER</b>		<b>CONSTRUCTION METHOD</b>	
3.5" (8.89cm)		Thermal Bond	
<b>NOMINAL LENGTHS</b>			
5 inch (12.7 cm)   10 inch (25.4 cm)   20 inch (50.8 cm)   30 inch (76.2 cm)   40 inch (102 cm)			

### ORDER OPTIONS

CAPSULE	
MC	MAXX-Cap
NOMINAL LENGTHS	
	5, 10, 20, 30, 40
INLET DESIGN	
D1	1", 1.5" sanitary
D2	0.5" female NPT
D3	0.25" hose barb
D4	0.5" hose barb
D5	grad. hose barb
OUTLET DESIGN	
O1	1", 1.5" sanitary
O2	0.5" female NPT
O3	0.25" hose barb
O4	0.5" hose barb
O5	grad. hose barb

CARTRIDGE STYLE	MICRON RATING	CARTRIDGE GRADE					
		- General	1 FDA Grade	2 Pharma.	5 Water Grade	SG Sterilizing	E Electromics
PRMXE (Pur-MAXX E)	0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1.2		X	X	X		
PRMXS (Pur-MAXX S)	0.03, 0.05, 0.10, 0.2, 0.45, 0.65	X	X		X		
PRMXN (Pur-MAXX N)	0.1, 0.2, 0.45, 0.65, 0.8, 1.2	X	X	X	X		
PRMXCN (Pur-MAXX CN)	0.04, 0.1, 0.2, 0.45, 0.65, 0.8, 1.2	X	X	X	X		
PRMXT (Pur-MAXX T)	0.1, 0.2	X		X			
PRMXCN (Pur-MAXX C)	0.1, 0.2, 0.45, 0.65, 0.8, 1.2	X	X	X			
DMX (Duo-MAXX)	<i>Many options available; please contact customer service or inquire with a sales representative to learn more</i>						
PMX (Poly-MAXX)	1, 1.5, 2.5, 5, 10, 15, 20, 40, 70	X	X	X			
PMXG (Poly-MAXX G)	0.25, 0.5, 1, 2.5, 5, 8, 12, 20, 30, 50	X	X	X			
SPMX (Poly-MAXX Select)	1, 1.5, 3, 5, 10, 15, 20, 40, 70, 90	X	X	X			
FMX (Fiber-MAXX)	0.8, 0.9*, 1, 2*, 3, 5, 10, 15* <small>*Not Available in FDA Grade</small>	X	X	X			
FMXG (Fiber-MAXX G)	0.2, 0.45, 0.65, 1, 5, 10	X	X	X			
CPP (Continuous Pleat)	0.2, 0.5, 1, 2.5, 5, 10, 15, 20, 40, 70	X			X		
HSLP (Continuous High Solids Loading)	1, 2.5, 5, 10, 15, 20, 25, 35, 70, 90, 120	X	X				
CFP (Continuous Fiber Pleat)	0.25, 0.45, 0.65, 1, 5, 10	X	X				
BVM (Bev-MAXX)	0.2, 0.45, 0.65	X					
BVR (Bev-Rite)	0.2, 0.45, 0.65, 0.8	X					
GR (Guard-Rite)	561, 562, 563, 568		X				
VNXE (Vino-MAXX E)	0.45, 0.65	X					
TR (Trap-Rite)	1, 5, 10	X	X				
PRMXE (Pur-MAXX E SG)	0.2					X	
EDXCN (Endo-MAXX CN)	0.1, 0.2	X					
IKP (Ink Jet IKP)	0.3, 0.5, 1, 3, 5, 10, 15, 20, 40, 70, 90	X					
IKS (Ink Jet Select)	0.3, 0.5, 1, 3, 5, 10, 15, 20, 40, 70, 90	X					
IKG (Ink Jet IKG)	0.5, 1, 3, 6, 10, 20, 40	X					
PESE (PES-E)	50, 100, 200, 450, 650, 800, 1200 <small>Nanometer ratings</small>						X
VM (Vent-MAXX)	-			X			
VR (Vent-Rite)	-			X			

### CARTRIDGE STYLE MICRON RATING CARTRIDGE GUIDE

See Inset Chart  
For Available Options

CARTRIDGE O-RING	
S B V E	Silicone Buna N Fluorocarbon EPDM

# MADD-MAXX GF

Absolute-Rated Microglass Hybrid Elements

- ▶ FOOD AND BEVERAGE
- ▶ DI/RO PREFILTRATION
- ▶ EDIBLE OILS

- ▶ REAGENT GRADE CHEMICALS
- ▶ GENERAL WATER FILTRATION

- ▶ WASTE WATER
- ▶ AMINE FLUIDS
- ▶ GLYCOL FLUIDS

Strainrite's MADD-MAXX GF filters are engineered for critical high purity applications, optimizing throughput while maintaining an absolute rated performance that is consistent and reliable. Our microglass filter elements feature a media structure with high surface area and increased void volume, as well as optimized pore size geometry.

Precision blowing of fine denier fibers results in a highly uniform matrix that optimizes element flow rate and service life. This advanced fine fiber technology outperforms all competing microfiber technologies. MADD-MAXX GF filter elements increase filtration efficiency of any existing bag filter vessel versus conventional filter bags.


MADD-MAXX GF pleated elements are the preferred choice for filtering beverages such as beer and wine because they do not remove flavor enhancing proteins. We utilize acrylic binders that meet the requirements of CFR 21 for food and beverage contact.\* Our standard elements utilize an epoxy binder, providing the MADD-MAXX with a greater range of chemical compatibility in a wider range of applications.





- ▶ ABSOLUTE-RATED MEDIA PROVIDES RELIABLE PORE SIZE CONTROL RESULTING IN REPEATABLE FILTRATION PERFORMANCE
- ▶ NON-FIBER RELEASING MATERIALS WITH MINIMAL EXTRACTABLES PROVIDING HIGH PURITY FILTRATE
- ▶ LOWER PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME
- ▶ WIDE CHEMICAL COMPATIBILITY
- ▶ MAXIMUM PLEAT DESIGN COUPLED WITH NON-CALENDERED MICROFIBER MATRIX OFFERS GREATER SURFACE AREA, ENSURING LONGER SERVICE LIFE, LESS DOWNTIME, AND REDUCED OPERATING COSTS PER ELEMENT
- ▶ STANDARD GRADE UTILIZES AN EPOXY BINDER, FDA GRADE UTILIZES AN ACRYLIC BINDER\*
- ▶ THERMALLY BONDED CONSTRUCTION, ELIMINATING PARTICLE BYPASS

\*FDA grade available upon special request for certain micron ratings; please inquire with Strainrite customer service for more information.

## ORDER GUIDE

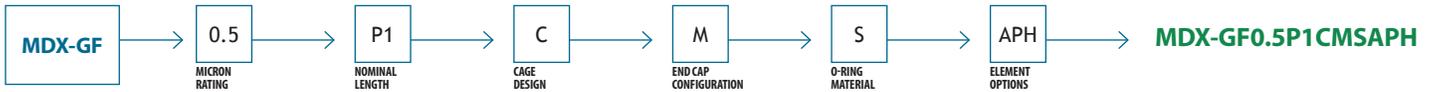

<b>MICRON RATING</b>			
0.5, 1, 3, 5, 10, 15			
<b>MAXIMUM OPERATING TEMPERATURE</b>		<b>MAXIMUM DIFFERENTIAL PRESSURE</b>	
180°F (82°C) Continuous Duty Polypropylene 300°F (149°C) Continuous Duty Polyester		25 PSID @ 70°F (21°C)	
<b>FILTER MEDIA</b>	<b>HARDWARE</b>	<b>SUPPORT MATERIAL</b>	<b>CAGE</b>
Borosilicate Microglass	Polypropylene Polyester	Polyester	Polypropylene Polyester
<b>O-RINGS</b>			
Buna N   Fluorocarbon   EPDM   Silicone			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>NOMINAL TOP OUTSIDE DIAMETER</b>			
6.5" - 7.5"			
<b>NOMINAL SURFACE AREA</b>			
P1 - 17 square feet   P2 - 40 square feet   P3 - 46 square feet   P4 - 60 square feet			
<b>NOMINAL LENGTHS</b>			
P1 - 12" (30.5 cm)   P2 - 26" (66.3 cm)   P3 - 30" (76.5 cm)   P4 - 40" (102 cm)			
<b>PERFORMANCE CHARACTERISTICS</b> P4 FILTER			

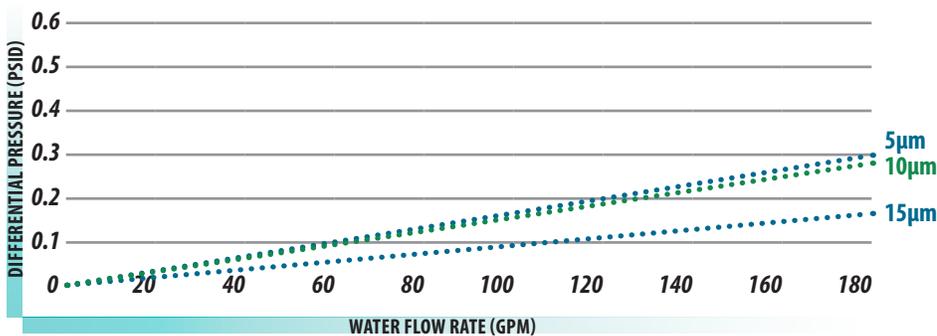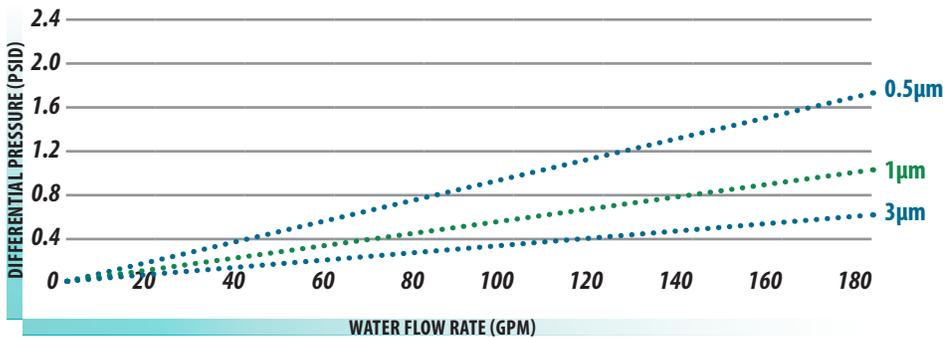

## ORDER OPTIONS

<b>ELEMENT</b>	
MDX-GF	Madd-MAXX GF
<b>MICRON RATINGS</b>	
0.5, 1, 3, 5, 10, 15	
<b>CARTRIDGE LENGTH</b>	
P1	12" (30.5 cm)
P2	26" (66.3 cm)
P3	30" (76.5 cm)
P4	40" (102 cm)
<b>CAGE DESIGN</b>	
C	Plastic Polypropylene
<b>END CAP CONFIGURATION</b>	
P	P-Flange Top
S	S-Top with O-ring
M	M-Flange Top
C	C-Top with O-ring*
*All Polyester Hardware not available	
<b>O-RING MATERIAL</b>	
S	Silicone (Standard O-ring)
B	Buna N (Standard gasket)
V	Fluorocarbon
E	EPDM
<b>ELEMENT OPTIONS</b>	
APH	All Polyester Hardware

# MADD-MAXX MF

Absolute-Rated Polypropylene Hybrid Elements

- ▶ FOOD AND BEVERAGE
- ▶ DI/RO PREFILTRATION
- ▶ EDIBLE OILS

- ▶ REAGENT GRADE CHEMICALS
- ▶ GENERAL WATER FILTRATION

- ▶ WASTE WATER
- ▶ AMINE FLUIDS
- ▶ GLYCOL FLUIDS


Strainrite's MADD-MAXX MF filters are engineered for critical high purity applications, optimizing throughput while maintaining an absolute rated performance that is consistent and reliable. Our superior filter media is constructed on the latest continuous microfiber blowing equipment, which accurately controls fiber diameter and web design. This state-of-the-art equipment utilizes online monitoring equipment, delivering the industry's most uniform and consistent media, resulting in unparalleled product consistency.

This element combines the advantages of typical bag filtration, ease of use, and exceptional dirt holding capacity with the high efficiency and performance of cartridge filtration. The inside-out flow design ensures that unwanted contaminants stay inside the element during change out, virtually eliminating the possibility of downstream contamination. Our 100% polypropylene construction provides an excellent range of chemical compatibility for your most demanding applications. All materials of construction meet or exceed the requirements of CFR 21 for food and beverage contact.




- ▶ ABSOLUTE-RATED MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION
- ▶ FASTER CHANGE-OUTS COMPARED TO STANDARD HIGH PERFORMANCE CARTRIDGES
- ▶ CONTAMINANTS ARE CAPTURED INSIDE THE ELEMENT, ELIMINATING DOWNSTREAM CONTAMINATION
- ▶ 100% POLYPROPYLENE, FDA COMPLIANT WITH CFR 21
- ▶ THERMALLY BONDED END CAPS
- ▶ SINGLE O-RING SEAL ENSURES A HERMETIC SEAL FOR HIGH PURITY APPLICATIONS
- ▶ MAXIMUM PLEAT DESIGN FOR GREATER SURFACE THAT ENSURES LONGER SERVICE LIFE, LESS DOWNTIME, AND REDUCED OPERATING COSTS PER ELEMENT
- ▶ LOWER PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME

## ORDER GUIDE

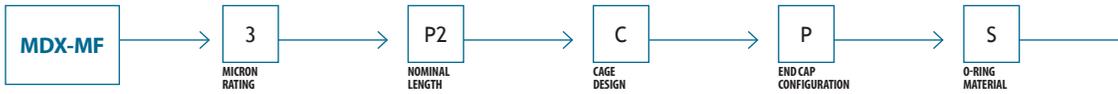

MICRON RATING			
0.5, 1, 3, 5, 10, 25, 50			
MAXIMUM OPERATING TEMPERATURE		MAXIMUM DIFFERENTIAL PRESSURE	
180°F (82°C) Continuous Duty		25 PSID @ 70°F (21°C)	
FILTER MEDIA	HARDWARE	SUPPORT MATERIAL	CAGE
Polypropylene Microfiber	Polypropylene	Polypropylene	Polypropylene
O-RINGS			
Buna N   Fluorocarbon   EPDM   Silicone			
CONSTRUCTION METHOD			
Thermal Bond			
NOMINAL TOP OUTSIDE DIAMETER			
6.5" - 7.5"			
NOMINAL SURFACE AREA			
P1 - 17 square feet   P2 - 40 square feet   P3 - 46 square feet   P4 - 60 square feet			
NOMINAL LENGTHS			
P1 - 12" (30.5 cm)   P2 - 26" (66.3 cm)   P3 - 30" (76.5 cm)   P4 - 40" (102 cm)			
PERFORMANCE CHARACTERISTICS P2 FILTER			

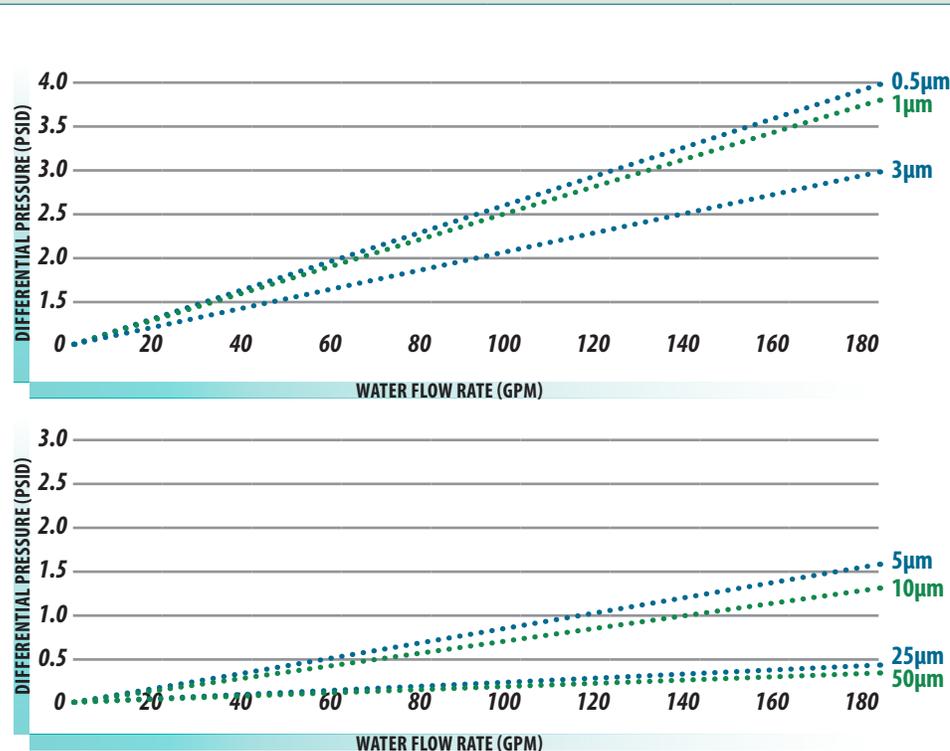

## ORDER OPTIONS

ELEMENT	
MDX-MF	Madd-MAXX MF
MICRON RATINGS	
0.5, 1, 3, 5, 10, 25, 50	
CARTRIDGE LENGTH	
P1 P2 P3 P4	12" (30.5 cm) 26" (66.3 cm) 30" (76.5 cm) 40" (102 cm)
CAGE DESIGN	
C	Plastic Polypropylene
END CAP CONFIGURATIONS	
P S M C	P-Flange Top S-Top with O-ring M-Flange Top C-Top with O-ring
O-RING MATERIAL	
S B V E	Silicone (Standard O-ring) Buna N (Standard gasket) Fluorocarbon EPDM

Strainrite's Aqua-MAXX [Hybrid Filter Technology] filters are engineered for critical high purity applications by optimizing throughput while maintaining absolute rated performance that is both predictable and repeatable. Our superior filter media is constructed on the latest Continuous Composite Microfiber blowing equipment, which accurately controls fiber diameter and web design. This state-of-the-art equipment utilizes online monitoring equipment, delivering the industry's most uniform and consistent media, resulting in unparalleled product consistency.

By combining high performance media in an Aqua-MAXX inside-out flow configuration, we have created the ultimate filter. This element combines the advantages of typical bag filtration, ease of use, and exceptional dirt holding capacity with the high efficiency and performance characteristics of cartridge filtration. The inside out flow design ensures that unwanted contaminants stay inside the element during change out, unlike typical cartridge filtration, virtually eliminating the possibility of downstream contamination. All materials of construction meet or exceed the requirements of CFR 21 for Food and Beverage contact.



- ▶ COMPLIES WITH ANSI/NSF STANDARD 53; MEETS THE REQUIREMENTS OF USP PLASTIC CLASS VI
- ▶ MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION
- ▶ FASTER CHANGE-OUTS COMPARED TO STANDARD HIGH PERFORMANCE CARTRIDGES
- ▶ CONTAMINANTS ARE CAPTURED INSIDE THE ELEMENT, ELIMINATING DOWNSTREAM CONTAMINATION
- ▶ MAXIMUM FLOW RATES OF 50 GPM
- ▶ LOWER PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME
- ▶ MAXIMUM PLEAT DESIGN FOR GREATER SURFACE THAT ENSURES LONGER SERVICE LIFE, LESS DOWNTIME, AND REDUCED OPERATING COSTS PER ELEMENT
- ▶ THERMALLY BONDED END CAPS
- ▶ DOUBLE 261 O-RING SEAL ENSURES A HERMETIC SEAL FOR CRITICAL HIGH PURITY APPLICATIONS
- ▶ COMPLIANT WITH FDA 21 CFR

## ORDER GUIDE

AQMX


PFA

FILTER

AQMX-PFA

<b>MAXIMUM FLOW RATE</b>	
50 gpm	
<b>MAXIMUM OPERATING TEMPERATURE</b>	<b>MAXIMUM DIFFERENTIAL PRESSURE</b>
180°F (82°C) Continuous Duty	25 PSID @ 70°F (21°C)
<b>FILTER MEDIA</b>	<b>SUPPORT MATERIAL</b>
Composite Polypropylene Microfiber	Polypropylene
<b>HARDWARE</b>	<b>CAGE</b>
Polypropylene	Polypropylene
<b>O-RINGS</b>	<b>CONSTRUCTION METHOD</b>
EPDM	Thermal Bond
<b>NOMINAL TOP OUTSIDE DIAMETER</b>	<b>NOMINAL LENGTHS</b>
7"	30" (76.5 cm)

## PERFORMANCE CHARACTERISTICS

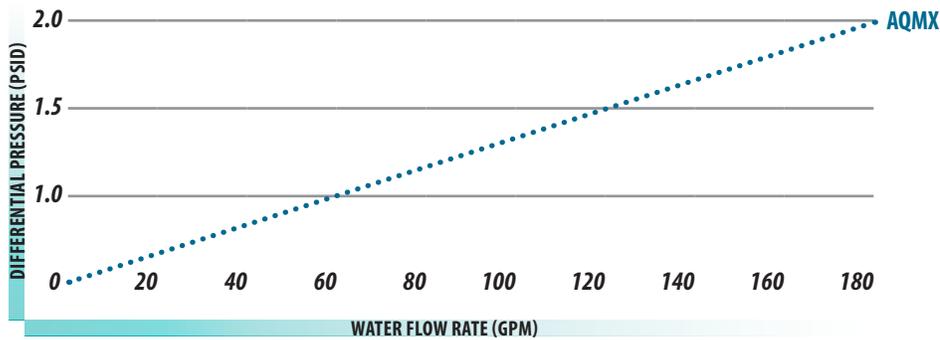

## ORDER OPTIONS

ELEMENT	
AQMX	Aqua-MAXX
FILTER	
PFA FFA	Primary Filter (pre-filter) Secondary Filter (final filter)

# MADD-MAXX XL

Polypropylene Felt Hybrid Elements

- ▶ FOOD AND BEVERAGE
- ▶ DI/RO PREFILTRATION
- ▶ EDIBLE OILS

- ▶ REAGENT GRADE CHEMICALS
- ▶ GENERAL WATER FILTRATION


- ▶ WASTE WATER
- ▶ AMINE FLUIDS
- ▶ GLYCOL FLUIDS

Strainrite's **MADD-MAXX XL** elements feature the proven benefits of small fiber diameter and a high void area, creating the perfect depth filter. These elements offer 5 to 10 times more surface area, depending upon chosen configuration and materials of construction. Coupled with a single O-ring postive seal, resulting in the most reliable, and versatile filters available.





- ▶ INCREASED SURFACE AREA OFFERS HIGHER FLOW CAPACITY IN EXISTING APPLICATIONS
- ▶ LOWER INITIAL DIFFERENTIAL PRESSURE, REDUCING FILTRATION COSTS, DUE TO LONGER ELEMENT LIFE
- ▶ SINGLE O-RING SEALING FLANGE FOR INCREASED EFFICIENCY
- ▶ THERMALLY BONDED END CAPS ELIMINATING BYPASS
- ▶ INTERNAL POLYMERIC PLEAT SEPARATOR TO ASSURE FULL UTILIZATION OF THE ENTIRE PLEAT SURFACE AREA

## ORDER GUIDE

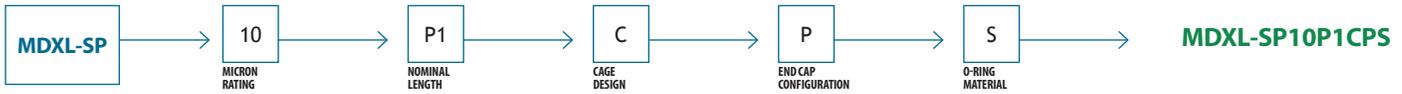

<b>MICRON RATING</b>			
1T, 1, 5, 10, 25, 50, 75, 100, 200			
<b>MAXIMUM OPERATING TEMPERATURE</b>		<b>MAXIMUM DIFFERENTIAL PRESSURE</b>	
180°F (82°C) Continuous Duty		25 PSID @ 70°F (21°C)	
<b>FILTER MEDIA</b>	<b>HARDWARE</b>	<b>SUPPORT MATERIAL</b>	<b>CAGE</b>
Polypropylene Felt	Polypropylene	Polypropylene	Polypropylene Rigid Resin Bonded Felt
<b>O-RINGS</b>			
Buna N   Fluorocarbon   EPDM   Silicone			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>NOMINAL TOP OUTSIDE DIAMETER</b>			
6.75" - 7.45"			
<b>NOMINAL SURFACE AREA</b>			
P1 - 8 square feet   P2 - 18 square feet   P3 - 22 square feet   P4 - 30 square feet			
<b>NOMINAL LENGTHS</b>			
P1 - 12" (30.5 cm)   P2 - 26" (66.3 cm)   P3 - 30" (76.5 cm)   P4 - 40" (102 cm)			
<b>PERFORMANCE CHARACTERISTICS</b> P2 FILTER			

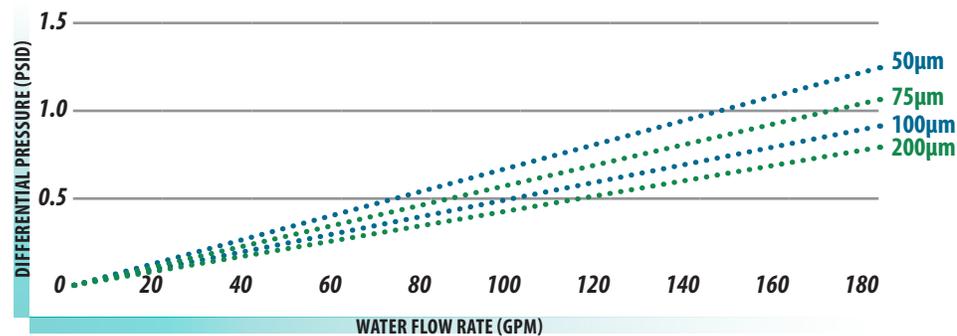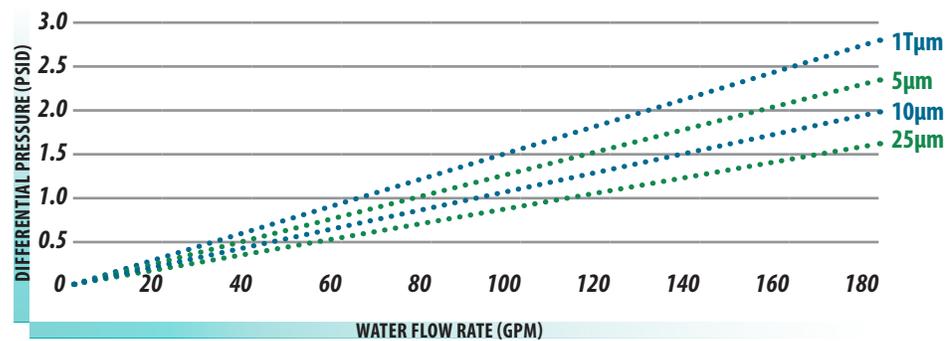

## ORDER OPTIONS

ELEMENT	
MDXL-SP	Madd-MAXX XL
MICRON RATINGS	
1T, 1, 5, 10, 25, 50, 75, 100, 200	
CARTRIDGE LENGTH	
P1 P2 P3 P4	12" (30.5 cm) 26" (66.3 cm) 30" (76.5 cm) 40" (102 cm)
CAGE DESIGN	
C	Plastic Polypropylene
END CAP CONFIGURATIONS	
P S M C	P-Flange Top S-Top with O-ring M-Flange Top C-Top with O-ring
O-RING MATERIAL	
S B V E	Silicone (Standard O-ring) Buna N (Standard gasket) Fluorocarbon EPDM

# VISC-MAXX

Resin-Bonded Polyester Hybrid Elements

- ▶ CUTTING FLUIDS
- ▶ ADHESIVES
- ▶ INKS, PAINTS AND COATINGS

- ▶ COOLANTS
- ▶ GLYCOL FLUIDS
- ▶ AMINE FLUIDS
- ▶ FINE CHEMICALS

- ▶ PLATING SOLUTIONS
- ▶ PETROCHEMICALS
- ▶ COOLING TOWERS
- ▶ DOWN WELL INJECTIONS

Combining the advantages of resin-bonded cartridges, non-compressible media, and enhanced depth filtration, with the proven inside out flow advantages of bag filtration, makes the **VISC-MAXX** the optimum alternative to cartridge filtration.

The **VISC-MAXX** utilizes a phenolic treated polyester large fiber material in a gradient density pleat design to create the perfect resin bonded filter.


Our unique patent protected textile provides unsurpassed gel and particle removal due to maximized surface area and the true non-compressible depth design.

A chronic complaint of conventional resin-bonded cartridge users is post-filter fiber migration, which results in compromised product and a need to re-filter. Our proprietary textile eliminates these problems entirely. Cages can be designed with specific applications in mind. Choices include polypropylene, polyester and phenolic-treated polyester.





- ▶ NO FIBER MIGRATION DUE TO THE UTILIZATION OF LENGTHY HEAT SET FIBERS
- ▶ INCREASED SURFACE AREA MEANS LONGER FILTER LIFE AND REDUCED DISPOSAL COST
- ▶ LONGER FILTER LIFE REDUCES LABOR TIME ASSOCIATED WITH CHANGE-OUTS
- ▶ HIGHER PRODUCTIVITY DUE TO LONGER RUN TIMES
- ▶ GRADIENT DENSITY DESIGN, PREVENTING PREMATURE BLINDING OF FINAL FILTRATION LAYER
- ▶ THERMALLY BONDED END CAPS ELIMINATE BYPASS
- ▶ ONE P1 SIZE ELEMENT REPLACES (40) 10" EQUIVALENT RESIN BONDED CARTRIDGES

## ORDER GUIDE

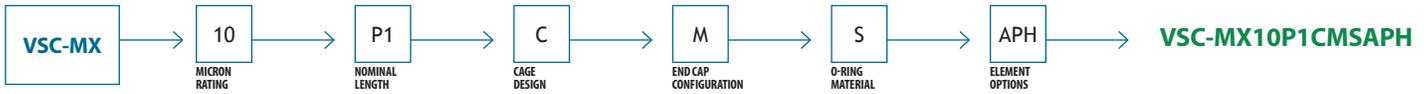

MICRON RATING		
1T, 1, 5, 10, 25, 50, 75, 100, 200		
MAXIMUM OPERATING TEMPERATURE		MAXIMUM DIFFERENTIAL PRESSURE
170°F (77°C) Continuous Duty Polypropylene 250°F (121°C) Continuous Duty Polyester		25 PSID @ 70°F (21°C)
FILTER MEDIA	HARDWARE	CAGE
Phenolic treated long-fiber Polyester	Polypropylene Polyester	Polypropylene Polyester (P-Flange top and M-Flange top only)
O-RINGS		
Buna N   Fluorocarbon   EPDM   Silicone		
CONSTRUCTION METHOD		
Thermal Bond		
NOMINAL TOP OUTSIDE DIAMETER		
6.75" - 7.45"		
NOMINAL SURFACE AREA		
P1 - 8 square feet   P2 - 18 square feet   P3 - 22 square feet   P4 - 30 square feet		
NOMINAL LENGTHS		
P1 - 12" (30.5 cm)   P2 - 26" (66.3 cm)   P3 - 30" (76.5 cm)   P4 - 40" (102 cm)		
PERFORMANCE CHARACTERISTICS P2 FILTER		

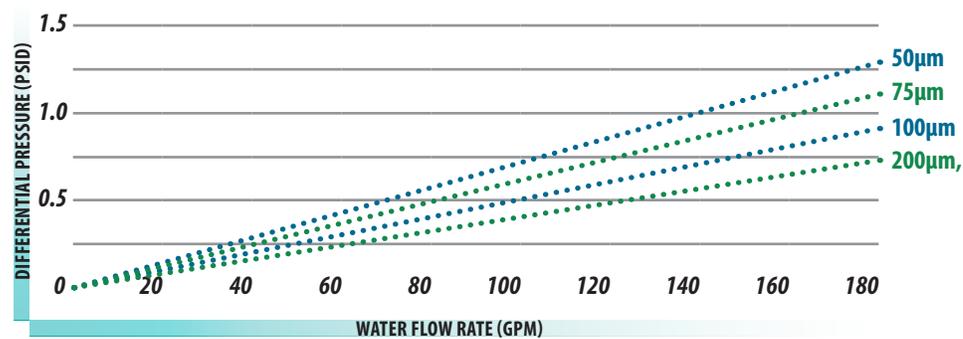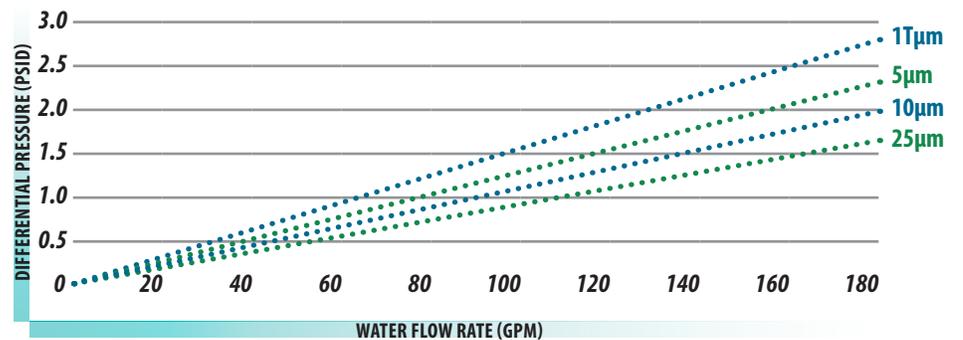

## ORDER OPTIONS

ELEMENT	
VSC-MF	Visc-MAXX
MICRON RATINGS	
1T, 1, 5, 10, 25, 50, 75, 100, 200	
CARTRIDGE LENGTH	
P1	12" (30.5 cm)
P2	26" (66.3 cm)
P3	30" (76.5 cm)
P4	40" (102 cm)
CAGE DESIGN	
C	Plastic Polypropylene Polyester*
E	
*P-Flange Top, M-Flange Top only	
END CAP CONFIGURATION	
P	P-Flange Top
S	S-Top with O-ring
M	M-Flange Top
C	C-Top with O-ring*
*All Polyester Hardware not available	
O-RING MATERIAL	
S	Silicone (Standard O-ring)
B	Buna N (Standard gasket)
V	Fluorocarbon
E	EPDM
ELEMENT OPTIONS	
APH	All Polyester Hardware

# Clari-MAXX

Multi-Layer Polypropylene Micro Fiber Hybrid Elements

▶ FOOD AND BEVERAGE  
▶ INK AND PAINT  
▶ POTABLE WATER

▶ COATINGS  
▶ CHEMICALS  
▶ ELECTRONICS

Strainrite continues its tradition of state-of-the-art advanced filtration innovation with the **Clari-MAXX**, a unique polypropylene depth filter that utilizes long strand small and large diameter fibers to provide a high solids loading, absolute-rated, pleated depth filter. This binder-free depth media is excellent for removing gels and offers five times the surface area compared with industry standard non-pleated depth filters. The increased surface area provides higher flow rates at reduced pressure, and results in increased filter life.

The Clari-MAXX Advantage:




Our 100% polypropylene construction provides an excellent range of chemical compatibility for your most demanding applications. All polypropylene construction materials are CFR 21 listed for direct food contact, which makes this filter ideal for a broad range of applications.

- 5 times more surface area than standard filters
- Small Fiber Diameter
- High Solids-Holding Volume





- ▶ EXQUISITELY CONTROLLED, STATE OF THE ART MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION
- ▶ FASTER CHANGE-OUTS COMPARED TO STANDARD HIGH PERFORMANCE CARTRIDGES
- ▶ CONTAMINANTS ARE CAPTURED INSIDE THE ELEMENT, ELIMINATING DOWNSTREAM CONTAMINATION
- ▶ THERMALLY BONDED END CAPS
- ▶ DIRECT REPLACEMENT FOR PALL MARKSMAN™
- ▶ LOWER PRESSURE DROPS YIELD HIGHER FLOW RATES AND REDUCED PROCESSING TIME
- ▶ MAXIMUM PLEAT DESIGN FOR GREATER SURFACE THAT ENSURES LONGER SERVICE LIFE, LESS DOWNTIME, AND REDUCED OPERATING COSTS PER ELEMENT
- ▶ SINGLE O-RING SEAL ENSURES A HERMETIC SEAL FOR HIGH PURITY APPLICATIONS
- ▶ 100% POLYPROPYLENE, FDA COMPLIANT WITH CFR 21
- ▶ CUSTOM LENGTH OPTIONS TO ACCOMMODATE EXISTING BASKETS

## ORDER GUIDE

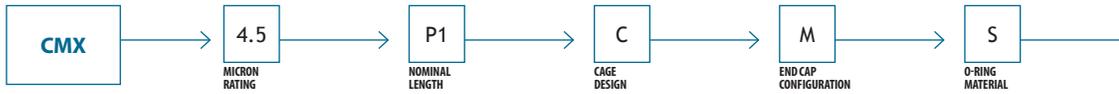

CMX4.5P1CMS

<b>MICRON RATING</b>		<b>RECOMMENDED CHANGE-OUT</b>	
1.5, 3, 4.5, 10, 20, 30, 70		35 psid	
<b>MAXIMUM OPERATING TEMPERATURE</b>		<b>MAXIMUM DIFFERENTIAL PRESSURE</b>	
180°F (82°C) Continuous Duty		25 PSID @ 70°F (21°C)	
<b>FILTER MEDIA</b>	<b>END CAPS</b>	<b>SUPPORT MATERIAL</b>	<b>MOLDED CAGE</b>
Multi-Layer Polypropylene Microfiber	Polypropylene	Polypropylene	Polypropylene
<b>O-RINGS</b>			
Buna N   Fluorocarbon   EPDM   Silicone			
<b>CONSTRUCTION METHOD</b>			
Thermal Bond			
<b>OUTSIDE DIAMETER</b>			
6" (15.2 cm)			
<b>NOMINAL SURFACE AREA</b>			
P1 - 12 square feet   P2 - 23 square feet   P3 - 26 square feet   P4 - 48 square feet			
<b>NOMINAL LENGTHS</b>			
P1 - 14" (35.7 cm)   P2 - 26" (66.3 cm)   P3 - 30" (76.5 cm)   P4 - 40" (102 cm)			
<b>PERFORMANCE CHARACTERISTICS</b> P2 FILTER			

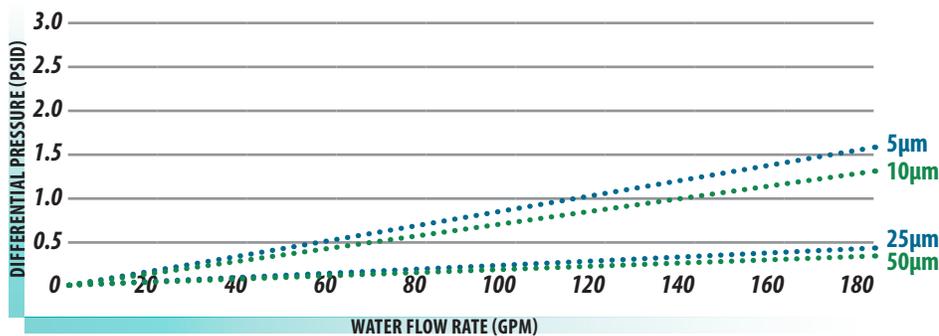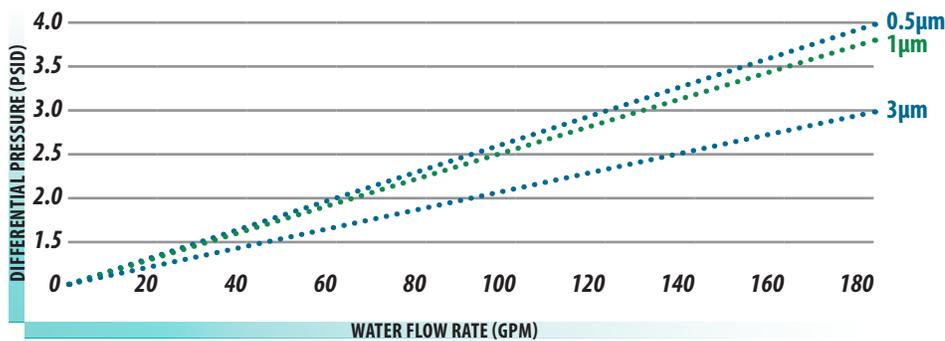

## ORDER OPTIONS

ELEMENT	
CMX	Clari-MAXX
MICRON RATINGS	
1.5, 3, 4.5, 10, 20, 30, 70	
CARTRIDGE LENGTH	
P1 P2 P3 P4	14" (35.7 cm) 26" (66.3 cm) 30" (76.5 cm) 40" (102 cm)
CAGE DESIGN	
C	Plastic Polypropylene
END CAP CONFIGURATIONS	
P S M C	P-Flange Top S-Top with O-ring M-Flange Top C-Top with O-ring
O-RING MATERIAL	
S B V E	Silicone Buna N Fluorocarbon EPDM

# MAXX-FLOW

Housing-Specific Hybrid Elements - 6.75" OD

Borosilicate Microglass or Polypropylene Microfiber

▶ 6.75" OD HOUSING

MAXX-Flow filters are engineered for critical high purity applications by optimizing throughput while maintaining absolute rated performance that is both predictable and repeatable. Our polypropylene filter media is constructed on the latest continuous microfiber blowing equipment, which accurately controls fiber diameter and web design.

This state-of-the-art equipment utilizes online monitoring equipment, delivering the industry's most uniform and consistent media, resulting in unparalleled product consistency. Our microglass filter elements feature a media structure with high surface area and increased void volume, as well as optimized pore size geometry.


Precision blowing of fine denier fibers results in a highly uniform matrix that optimizes element flow rate and service life. This advanced fine fiber technology outperforms all competing microfiber technologies.

Designed to best fit Strainrite's SMF (vertical) and HSMF (horizontal) housing, this hybrid filter easily works with most standard 6.75" outside diameter housing.





- ▶ LARGE DIAMETER PLEAT CONFIGURATION FOR HIGH FLOW RATES
- ▶ HIGH DIRT HOLDING CAPABILITY DUE TO EXTENSIVE SURFACE AREA
- ▶ 99% RATED FILTER MEDIA FOR CONSISTENT AND REPEATABLE PERFORMANCE
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ CAPABLE OF FLOW RATES UP TO 500GPM PER FILTER
- ▶ INJECTION MOLDED CAGE FOR SUPERIOR STRENGTH AND ELEMENT INTEGRITY
- ▶ INSIDE-OUT FILTER RETAINS ALL CONTAMINANTS INSIDE THE FILTER DURING CHANGE-OUTS

## ORDER GUIDE

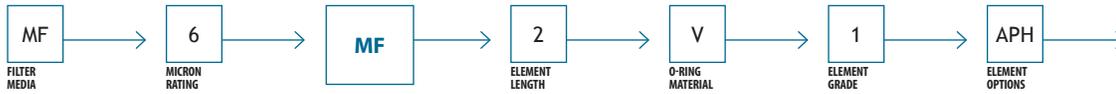

MF6MF2V1APH

MICRON RATING			
MF - 2, 4.5, 6, 10, 20, 40, 70, 90 GF - 2, 6, 10, 20, 30			
MAXIMUM OPERATING TEMPERATURE		MAXIMUM DIFFERENTIAL PRESSURE	
180°F (82°C) Continuous Duty		25 PSID @ 70°F (21°C)	
MAXIMUM FLOW RATES		RECOMMENDED CHANGE-OUT	
20" - 175 gpm   40" - 350 gpm   60" - 500 gpm		35 psid	
FILTER MEDIA	END CAPS	SUPPORT MATERIAL	MOLDED CAGE
Borosilicate Microglass Polypropylene Microfiber	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
O-RINGS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Silicone			
CONSTRUCTION METHOD			
Thermal Bond			
NOMINAL TOP OUTSIDE DIAMETER			
6.75" (17.1 cm)			
LENGTHS			
20" (50.8 cm)   40" (101.6 cm)   P1 - 12" (30.5 cm)   P2 - 26" (66.3 cm)			
PERFORMANCE CHARACTERISTICS 40" FILTER			

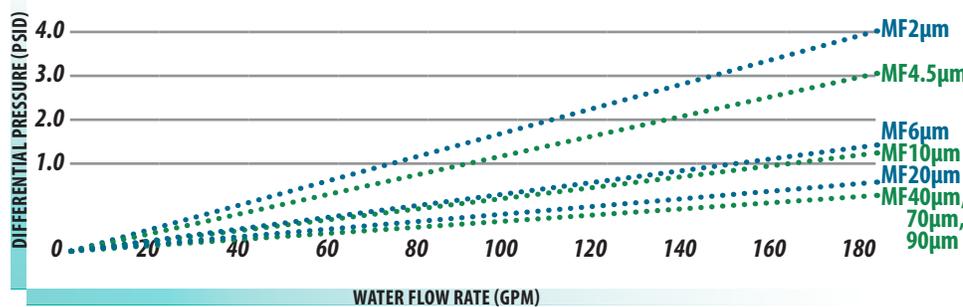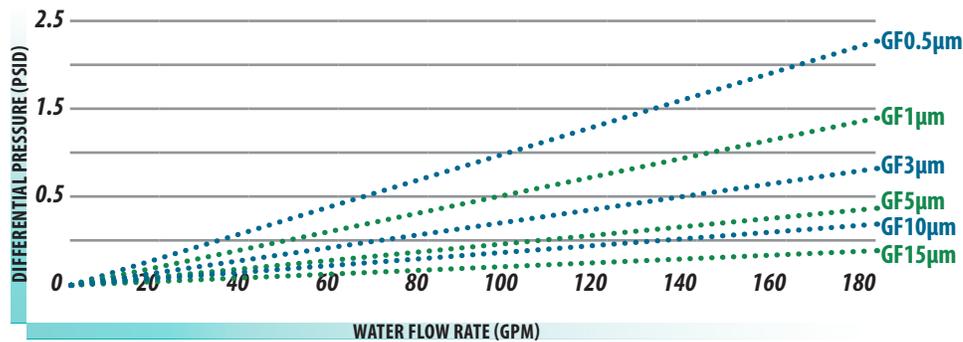

## ORDER OPTIONS

FILTER MEDIA	
MF GF	Polypropylene Microfiber Borosilicate Microglass
MICRON RATINGS	
MF: 2, 4.5, 6, 10, 20, 40, 70, 90 GF: 2, 6, 10, 20, 30	
ELEMENT	
MF	MAXX-Flow
ELEMENT LENGTH	
2 4 P1 P2	20" (50.8 cm) 40" (101.6 cm) 12" (30.5 cm) 26" (66.3 cm)
O-RING MATERIAL	
S B V E TV	Silicone (Standard O-ring) Buna N (Standard gasket) Fluorocarbon EPDM FEP Encapsulated Fluoro.
ELEMENT GRADE	
- 1	General FDA Grade
ELEMENT OPTIONS	
APH	All Polyester Hardware

# MAXX-TRAP

Housing-Specific Hybrid Elements - 6.75" OD

High-Solids Loading Microglass/Polypropylene Microfiber

▶ 6.75" OD HOUSING

Strainrite continues its tradition of state-of-the-art advanced filtration innovation with the **MAXX-Trap**, a continuous, high-solids loading (HSL) hybrid, that utilizes long strand small and large diameter fibers to provide a high solids loading, absolute-rated, pleated depth filter.


Designed to best fit Strainrite's SMF (vertical) and HSMF (horizontal) housing, this hybrid filter easily works with most standard 6.75" outside diameter housing. The binder-free depth media is excellent for removing gels and offers more than twice the surface area compared with industry standard non-pleated depth filters.

The increased surface area provides higher flow rates at reduced pressure, resulting in increased filter life. Our 100% polypropylene construction provides an excellent range of compatibility for your most demanding applications.





- ▶ **HIGH EFFICIENCY MEDIA PROVIDES RELIABLE, CONSISTENT AND REPEATABLE FILTRATION**
- ▶ **99% RATED FILTER MEDIA FOR CONSISTENT AND REPEATABLE PERFORMANCE**
- ▶ **LARGE DIAMETER PLEAT CONFIGURATION FOR HIGH FLOW RATES**
- ▶ **CAPABLE OF FLOW RATES UP TO 500GPM PER FILTER**
- ▶ **INJECTION MOLDED CAGE FOR SUPERIOR STRENGTH AND ELEMENT INTEGRITY**
- ▶ **THERMALLY BONDED CONSTRUCTION**
- ▶ **HIGH DIRT HOLDING CAPABILITY DUE TO EXTENSIVE SURFACE AREA REQUIRING FEWER FILTER CHANGEOUTS**
- ▶ **INSIDE-OUT FILTER RETAINS ALL CONTAMINANTS INSIDE THE FILTER DURING CHANGE-OUTS**

# ORDER GUIDE

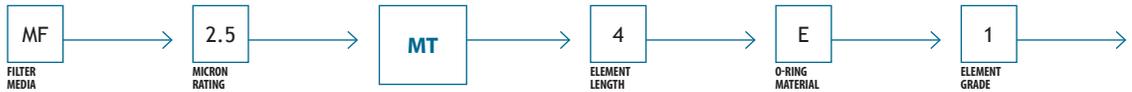

**MF2.5MT4E1**

MICRON RATING			
MF - 0.25, 0.5, 1, 2.5, 5, 10, 20, 30, 50 GF - 0.2, 0.5, 1, 3, 5, 10, 15			
MAXIMUM OPERATING TEMPERATURE		MAXIMUM DIFFERENTIAL PRESSURE	
180°F (82°C) Continuous Duty		25 PSID @ 70°F (21°C)	
MAXIMUM FLOW RATES		RECOMMENDED CHANGE-OUT	
20" - 175 gpm   40" - 350 gpm   60" - 500 gpm		35 psid	
FILTER MEDIA	END CAPS	SUPPORT MATERIAL	MOLDED CAGE
Borosilicate Microglass Polypropylene Microfiber	Polypropylene	Polypropylene Polyester	Polypropylene
O-RINGS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Silicone			
CONSTRUCTION METHOD			
Thermal Bond			
NOMINAL TOP OUTSIDE DIAMETER			
6.75" (17.1 cm)			
LENGTHS			
20" (50.8 cm)   40" (101.6 cm)   P1 - 12" (30.5 cm)   P2 - 26" (66.3 cm)			
PERFORMANCE CHARACTERISTICS POLYPROPYLENE 40" FILTER			

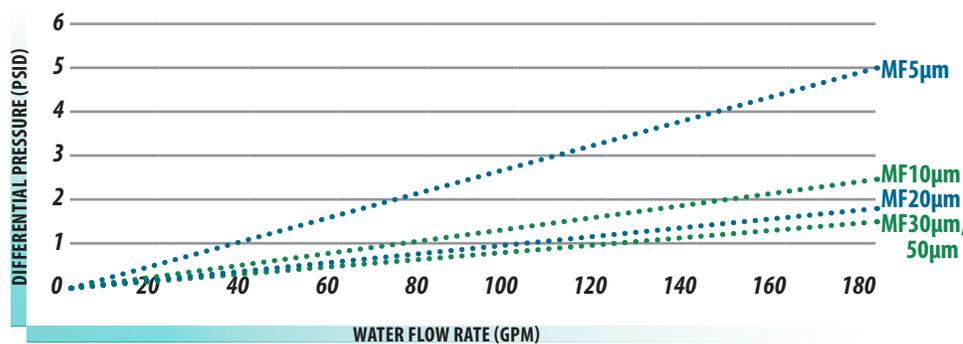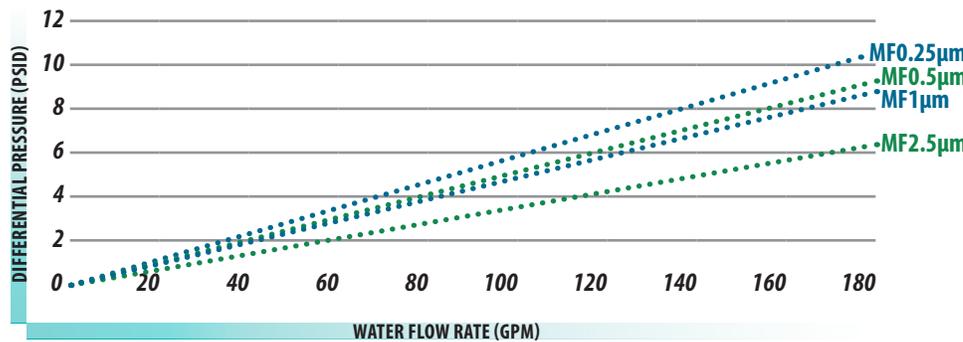

## ORDER OPTIONS

FILTER MEDIA	
MF GF	Polypropylene Microfiber Borosilicate Microglass
MICRON RATINGS	
MF - 0.25, 0.5, 1, 2.5, 5, 10, 20, 30, 50 GF - 0.2, 0.5, 1, 3, 5, 10, 15	
ELEMENT	
MT	MAXX-Trap
ELEMENT LENGTH	
2 4 P1 P2	20" (50.8 cm) 40" (101.6 cm) 12" (30.5 cm) 26" (66.3 cm)
O-RING MATERIAL	
S B V E TV	Silicone (Standard O-ring) Buna N (Standard gasket) Fluorocarbon EPDM FEP Encapsulated Fluoro.
ELEMENT GRADE	
- 1	General FDA Grade

# MAXX-PRO

Housing-Specific Hybrid Elements - 6.5" OD

Outside-In Polypropylene Microfiber with 226 O-rings

- ▶ AMINES
- ▶ HYDROCARBON
- ▶ CHEMICAL PLANTS
- ▶ PIPELINE FUELS

- ▶ PROCESS WATER
- ▶ WASTE WATER
- ▶ UTILITY WATER
- ▶ COOLING WATER

The Strainrite Companies is proud to add the **MAXX-Pro** to our family of large pleat geometry products. The **MAXX-Pro** filters are high efficiency, outside to inside flow direction liquid filtration cartridges designed for applications with high contaminant removal requirements. These filters are a direct replacement for the 3M 740™ series and others.



HF 338 end cap

**MAXX-Pro** cartridges are for use in filter housings that accept 6.5" (165 mm) outside diameter filter cartridges with 226 O-ring connections. The large diameter, ultra high surface area pleated cartridges are designed to provide the optimum combination of particle removal efficiency and contaminant holding capability with comparatively low flow resistance. Microfiber forms the basis of the filtration media utilized in **MAXX-Pro** filter cartridges.

Strainrite's manufacturing processes allow for tightly controlled specifications resulting in a filter media with consistent and predictable particle retention characteristics. **MAXX-Pro** cartridges are offered in micron grades ranging from 1 µm to 70 µm, and are typically used to remove solid contaminants.

740™ is a trademark of the 3M Corporation.


- ▶ **LARGE DIAMETER PLEAT CONFIGURATION FOR HIGH FLOW RATES**
- ▶ **HIGH DIRT HOLDING CAPABILITY DUE TO EXTENSIVE SURFACE AREA**
- ▶ **99% RATED FILTER MEDIA FOR CONSISTENT AND REPEATABLE PERFORMANCE**
- ▶ **INJECTION MOLDED CAGE FOR SUPERIOR STRENGTH AND ELEMENT INTEGRITY**
- ▶ **THERMALLY BONDED CONSTRUCTION**
- ▶ **VARIABLE PLEAT GEOMETRY ENSURES MAXIMIZED USABLE SURFACE AREA**

#### MAXX-PRO 226 O-RING

- ▶ **EXTREMELY LOW RISK OF BY PASS FOR HIGH QUALITY FLUIDS**
- ▶ **NO LOOSE PARTS TO ASSEMBLE FOR EASY INSTALLATION**
- ▶ **NO SPRINGS OR CAPS TO LOSE REDUCES THE RISK OF BY PASS**
- ▶ **BROAD CHEMICAL COMPATIBILITY FOR MANY APPLICATIONS**
- ▶ **CONVENIENT HANDLE FOR EASY REMOVAL**





# ORDER GUIDE

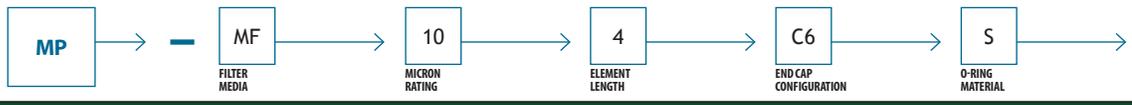

**MP-MF104C6S**

MICRON RATING			
1, 2, 5, 10, 15, 25, 40, 70			
MAXIMUM OPERATING TEMPERATURE			
180°F (82°C) Continuous Duty			
MAXIMUM FLOW RATES		RECOMMENDED CHANGE-OUT	
40" - 60-80 gpm		35 psid	
FILTER MEDIA	END CAPS	SUPPORT MATERIAL	MOLDED CAGE
Polypropylene Microfiber	Polypropylene	Polypropylene Polyester	Polypropylene
O-RINGS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Silicone			
CONSTRUCTION METHOD			
Thermal Bond			
NOMINAL TOP OUTSIDE DIAMETER			
6.5" (16.5 cm)			
LENGTHS			
40" (101.6 cm)   60" (152.4 cm; consult factory for availability)			
PERFORMANCE CHARACTERISTICS			

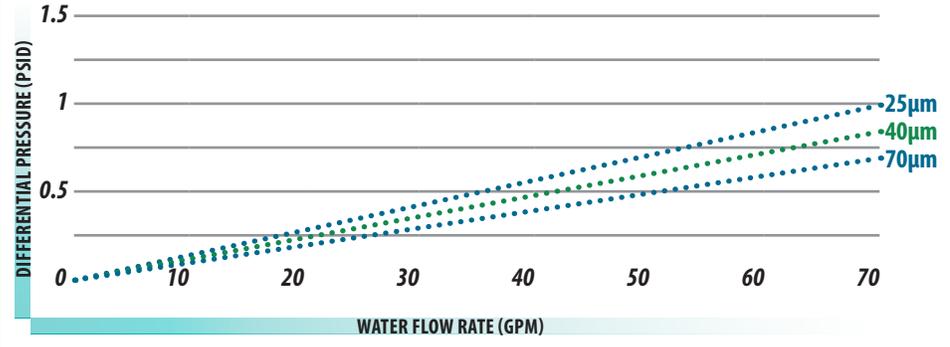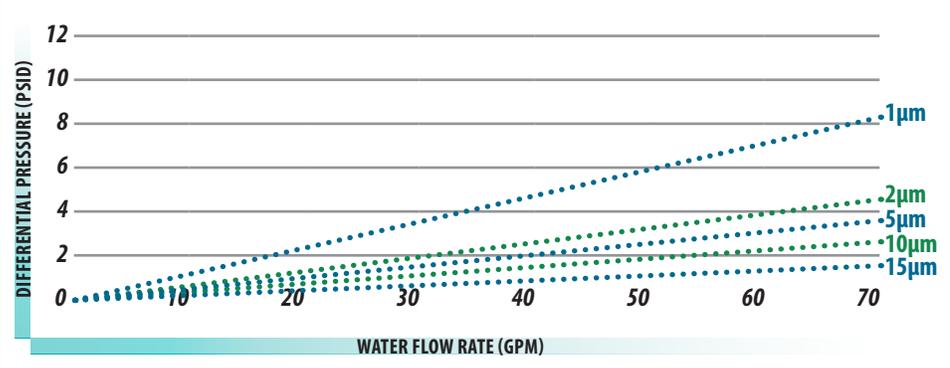

## ORDER OPTIONS

FILTER MEDIA	
MP	MAXX-Pro
ELEMENT	
MF	Polypropylene Microfiber
MICRON RATINGS	
1, 2, 5, 10, 15, 25, 40, 70	
ELEMENT LENGTH	
4	40" (101.6 cm)
6	60" (152.4 cm)*
<small>*Consult factory for availability</small>	
END CAP CONFIGURATION	
CF	Flat/224
C6	Flat/226
HF	Flat/338
O-RING MATERIAL	
S	Silicone (Standard O-ring)
B	Buna N (Standard gasket)
V	Fluorocarbon
E	EPDM
TV	FEP Encapsulated Fluoro.
TS	FEP Encapsulated Silicone*
<small>*Not available in 338/Flat (HF)</small>	

# HIGH-FLOW

Housing-Specific Hybrid Elements - 6.25" OD  
Borosilicate Microglass or Polypropylene Microfiber

▶ 6.25" OD HOUSING


As a leader in the dynamics of inside-out fluid filtration for over 35 years The Strainrite Companies is proud to add the **HIGH-Flow** to our family of large pleat geometry products. It is well known that inside out flow elements have higher dirt holding capabilities and offer hygienic superiority over typical outside-in fluid filtration filters.

**HIGH-Flow** filters' unique large pleat geometry make them capable of handling up to 500gpm in a 60" length, which is a perfect solution for high flow rate applications.

- ▶ LARGE DIAMETER PLEAT CONFIGURATION FOR HIGH FLOW RATES
- ▶ HIGH DIRT HOLDING CAPABILITY DUE TO EXTENSIVE SURFACE AREA
- ▶ 99% RATED FILTER MEDIA FOR CONSISTENT AND REPEATABLE PERFORMANCE
- ▶ THERMALLY BONDED CONSTRUCTION
- ▶ CAPABLE OF FLOW RATES UP TO 500GPM PER FILTER
- ▶ INJECTION MOLDED CAGE FOR SUPERIOR STRENGTH AND ELEMENT INTEGRITY
- ▶ INSIDE-OUT FILTER RETAINS ALL CONTAMINANTS INSIDE THE FILTER DURING CHANGE-OUTS
- ▶ AVAILABLE IN 20", 40", 60" & 80" LENGTHS





## ORDER GUIDE

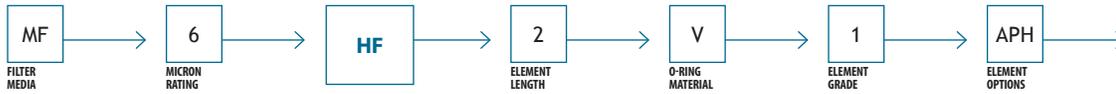

MF6HF2V1APH

MICRON RATING			
MF - 1, 2, 4.5, 6, 10, 20, 40, 70, 90 GF - 2, 6, 10, 20, 30			
MAXIMUM OPERATING TEMPERATURE		MAXIMUM DIFFERENTIAL PRESSURE	
180°F (82°C) Continuous Duty		25 PSID @ 70°F (21°C)	
MAXIMUM FLOW RATES		RECOMMENDED CHANGE-OUT	
20" - 175 gpm   40" - 350 gpm   60" - 500 gpm		35 psid	
PRESSURE DROP RATES (PSID/GPM)			
MICRON	20"	40"	60"
2	0.00637	0.00419	0.00279
6	0.00417	0.00208	0.00140
10	0.00368	0.00182	0.00123
20	0.00127	0.00064	0.00043
30	0.00106	0.00053	0.00035
FILTER MEDIA	END CAPS	SUPPORT MATERIAL	MOLDED CAGE
Borosilicate Microglass Polypropylene Microfiber	Polypropylene Polyester	Polypropylene Polyester	Polypropylene Polyester
O-RINGS			
Buna N   Fluorocarbon   EPDM   Silicone   FEP Encapsulated Silicone			
CONSTRUCTION METHOD			
Thermal Bond			
NOMINAL TOP OUTSIDE DIAMETER			
6.25" (15.88 cm)			
LENGTHS			
20" (50.8 cm)   40" (101.6 cm)   60" (152.4 cm)   80" (203.2 cm)			
PERFORMANCE CHARACTERISTICS 40" FILTER			

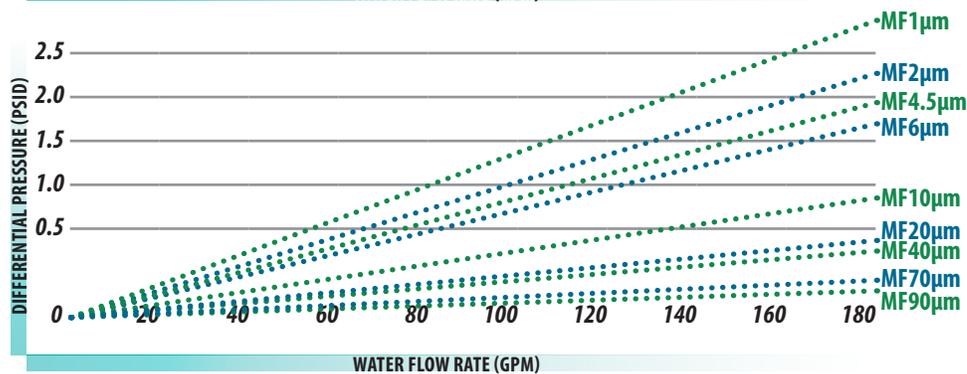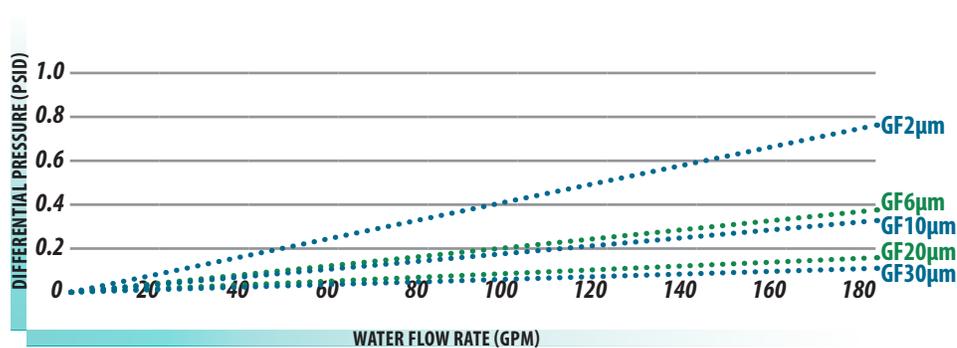

## ORDER OPTIONS

FILTER MEDIA	
MF GF	Polypropylene Microfiber Borosilicate Microglass
MICRON RATINGS	
MF - 1, 2, 4.5, 6, 10, 20, 40, 70, 90 GF - 2, 6, 10, 20, 30	
ELEMENT	
HF	High-Flow
ELEMENT LENGTH	
2 4 6 8	20" (50.8 cm) 40" (101.6 cm) 60" (152.4 cm) 80" (203.2 cm)
O-RING MATERIAL	
S B V E TV	Silicone (Standard O-ring) Buna N (Standard gasket) Fluorocarbon EPDM FEP Encapsulated Fluoro.
ELEMENT GRADE	
- 1	General FDA Grade
ELEMENT OPTIONS	
APH	All Polyester Hardware

# MICRON RATED FELT FILTER BAGS

Sure-Weld  
The Classic

▶ PAINTS & COATINGS  
▶ GENERAL CHEMICAL  
▶ PRODUCED WATER  
FROM GAS DRILLING

▶ PROCESS WATER  
▶ INK INDUSTRY  
▶ FOOD AND BEVERAGE  
INDUSTRY

The Strainrite Companies offer the widest range of needle punch felt filters in the market. We have formed long-term strategic partnerships with North America's largest and most respected needle punch manufacturers.

All of our fabrics are manufactured on state-of-the-art high speed needling equipment that continuously monitor key specifications in real time resulting in the most uniform and consistent fabric across the entire web in our industry.

By combining our technically advanced converting process with the industry's most reliable media, The Strainrite Companies offers [The Classic](#), a felt filter bag that leads in product quality, reliability and repeatability.

## THE CLASSIC


- ▶ FELT FILTER BAGS OFFER SEVERAL DISTINCT ADVANTAGES OVER STANDARD STRING WOUND AND MELT BLOWN CARTRIDGES
- ▶ HYGIENICALLY SUPERIOR DUE TO INSIDE-OUT FLOW DYNAMICS, ALL IMPURITIES ARE CONTAINED INSIDE THE FILTER BAG
- ▶ LOWER TOTAL COSTS DUE TO HIGHER SOLIDS LOADING CAPABILITIES
- ▶ REDUCED LABOR COSTS FROM FEWER CHANGE-OUTS
- ▶ FEWER SPENT FILTERS RESULTING IN REDUCED DISPOSAL COSTS
- ▶ REDUCED PRODUCT LOSS DUE TO LOWER HOLD UP VOLUMES
- ▶ USER FRIENDLY BECAUSE IT IS EASIER AND QUICKER TO CHANGE ONE FILTER BAG VERSUS SEVERAL 10" CARTRIDGES

## SURE-WELD

- ▶ HIGHER EFFICIENCIES DUE TO TIGHTER SEAL TOLERANCES
- ▶ NO THREAD, WHICH ELIMINATES POTENTIAL SILICONE CONTAMINATION FROM THIS LIKELY SOURCE
- ▶ PUNCTURE FREE OVERLAP SIDE SEAMS PROVIDE ADDED STRENGTH AND IMPROVES EFFLUENT CONSISTENCY



## ORDER GUIDE

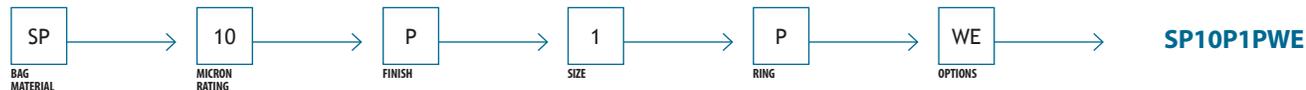

The **Sure-Weld** Felt Filter Bag, with our proprietary “Tri-Seal” P-flange provides a distinct advantage compared to conventional sewn filter bag with metal snap rings or industry standard poly flanges. Using state-of-the-art welding technology specifically designed to bond needle punched textile fabrics, we are able to offer the strongest most reliable welded filter bags on the market.

Our **Sure-Weld** filters come with the security of an overlap side seam, which eliminates the “bump” that occurs with conventional sewn snap ring filters. By welding to a “Tri-Seal” P-flange our fully welded filter bags offer unparalleled seal security, which delivers superior filtrate consistency.



## AVAILABLE MICRON RATINGS

Polypropylene - 0.5\*, 1T, 1, 3, 5, 10, 25, 50, 75, 100, 150, 200  
 Polyester - 0.5\*, 1T, 1, 3, 5, 10, 25, 50, 75, 100, 150, 200  
 Nomex - 1, 5, 10, other microns available on request  
 Nylon - Available on request

## POLYPROPYLENE - CHEMICAL COMPATIBILITY\*\*

TEMPERATURE	CHEMICAL	COMPATIBILITY
200°F	Acids	Excellent
200°F	Alkali	Excellent
200°F	Oxidizing Agents	Excellent
200°F	Solvents	Average

## POLYESTER - CHEMICAL COMPATIBILITY\*\*

TEMPERATURE	CHEMICAL	COMPATIBILITY
300°F	Weak Acids	Good
300°F	Strong Acids	Good
300°F	Weak Alkali	Poor
300°F	Strong Alkali	Poor
300°F	Solvents	Very Good
300°F	Petroleum Products	Very Good

\*Not available in Sure-Weld

\*\*Reflective of Filter Bag Material only. Please consult with your Application Engineer to verify specific chemical compatibility

## ORDER OPTIONS

MATERIAL	
SP	Polypropylene Felt
AP	Polyester Felt
HT	*Nomex
N	*Nylon
MICRON RATINGS	
SP	0.5*, 1T, 1, 3, 5, 10, 25, 50, 75, 100, 150, 200
AP	0.5*, 1T, 1, 3, 5, 10, 25, 50, 75, 100, 150, 200
HT	0.5, 1T, 1, 3, 5, 10, 25, 50, 75, 100, 150, 200
N	0.5, 1T, 1, 3, 5, 10, 25, 50, 75, 100, 150, 200
FINISH	
S	Singed
P	Plain
B	*Singed Both Sides
C	*Cerex Cover
N	*Nylon Mesh Cover
SIZE	
1	7" x 16"
2	7" x 32"
3	*4.08" x 8"
4	*4.08" x 14"
25	*4" x 9"
30	*4.118" x 10"
50	*4" x 21"
65	*4.118" x 22"
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
PER	Polyester P-Flange
MER	Polyester M-Flange
DS	*Draw String
S	*Carbon Steel Ring
SS	*Stainless Steel Ring
PR	*Polypropylene Ring
N	*No Ring
Z	*Polypropylene Z-Flange**
OPTIONS	
WE	Sure-Weld
HS	*Handle-Strap
AS	*Fully Stitched

\*Not available in Sure-Weld

\*\* Fits Size 25, 50 bags only

# MICRON RATED MESH FILTER BAGS

Monofilament Mesh

Multifilament Mesh

▶ PAINTS  
▶ COATINGS  
▶ GENERAL  
CHEMICAL

▶ PROCESS WATER  
▶ INK INDUSTRY  
▶ FOOD AND BEVERAGE  
INDUSTRY

**Monofilament Mesh** Filter Bags are manufactured in a wide range of micron ratings using a single filament weave. Single filament woven media provides two distinct advantages over multifilament media, excellent fabric strength and perfectly uniformed openings.

**Monofilament Mesh** is available in 1 through 800 microns as standard and larger for special orders. For applications where clients require no fiber migration at a high level of efficiency, monofilament material is a perfect fit.

**Multifilament Mesh** Filter Bags are manufactured in a narrow range of micron ratings using a multi-strand weave.

Multi-strand woven media is very cost effective for those applications where nominal filtration is required. The media openings are nominally spaced apart and require the use of a support basket to optimize filter performance. This media is excellent when applications require fiber free products from 100 micron up to 800 micron nominal efficiency range.





## MONOFILAMENT MESH

- ▶ NYLON MONOFILAMENT IS FDA AND EU COMPLIANT
- ▶ RELIABLE AND PREDICTABLE FILTRATION PERFORMANCE DUE TO A HIGHLY UNIFORMED HOLE CONFIGURATION
- ▶ NON-FIBER RELEASING MATERIAL FOR HIGH PURITY APPLICATIONS
- ▶ EXTREMELY WIDE CHEMICAL COMPATIBILITY
- ▶ VERY HIGH TENSILE STRENGTH
- ▶ HYGIENICALLY SUPERIOR DUE TO INSIDE-OUT FLOW DYNAMIC, ALL IMPURITIES ARE CONTAINED INSIDE THE ELEMENT
- ▶ MINIMAL PRODUCT LOSS DUE TO QUICKER DRAIN OFF OF FILTERED PRODUCT

## MULTIFILAMENT MESH

- ▶ AVAILABLE IN A HIGHLY CHEMICAL RESISTANT NYLON MATERIAL
- ▶ VERY COST EFFECTIVE
- ▶ NON-FIBER RELEASING MATERIAL
- ▶ REDUCED PRODUCT LOSS DUE TO VIRTUALLY NO MEDIA HOLD UP VOLUME
- ▶ EXCELLENT NOMINAL EFFICIENCY PERFORMANCE WHEN UTILIZED WITH A SUPPORT BASKET
- ▶ SUPERIOR TO CARTRIDGE FILTRATION DUE TO INSIDE-OUT FLOW DYNAMIC, ALL IMPURITIES ARE CONTAINED INSIDE THE FILTER BAG

## ORDER GUIDE

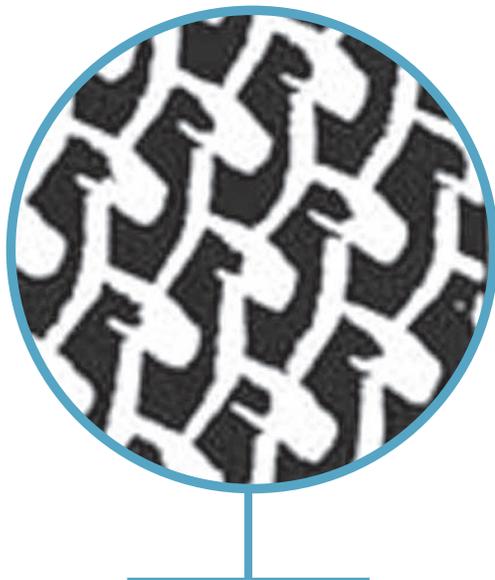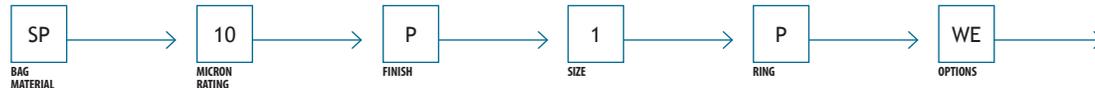

**Monofilament Mesh** is a woven fabric where each thread is a single filament, boasting excellent strength with no fiber migration. Providing extra strength and abrasion resistance, and offering a broad range of chemical compatibility, Monofilament Mesh bags are available in nylon, polyester and polypropylene.

**Multifilament Mesh** is a woven fabric where each strand consists of many smaller diameter threads. Multifilament Mesh filters are manufactured in a narrow range of micron ratings using a multi-strand weave, and are available in nylon and polyester.



## ORDER OPTIONS

STYLE	
- A	Standard *Automotive  <small>* Not available for NMU, PEMU</small>
MATERIAL	
NMO PEMO POMO NMU PEMU	Nylon Monofilament *Polyester Monofilament *Polypropylene Monofilament Nylon Multifilament Polyester Multifilament  <small>* Minimum order quantities may apply</small>
MICRON RATINGS	
NMO PEMO POMO	1, 5, 10, 25, 35, 50, 75, 100, 125, 150, 200, 250, 300, 400, 600, 800
NMU PEMU	100T, 100F, 150, 200, 250, 300, 400, 600, 600T, 800
FINISH	
P	Plain
SIZE	
1 2 3 4 25 30 50 65	7" x 16" 7" x 32" 4.08" x 8" 4.08" x 14" 4" x 9" 4.118" x 10" 4" x 21" 4.118" x 22"
RING	
P M PER MER DS S SS PR N Z	Polypropylene P-Flange Polypropylene M-Flange Polyester P-Flange Polyester M-Flange Draw String Carbon Steel Ring Stainless Steel Ring Polypropylene Ring No Ring *Polypropylene Z-Flange  <small>* Fits Size 25, 50 bags only</small>
OPTIONS	
HS	Handle-Strap

# POXL & PEXL X-TRA LIFE FILTER BAGS

Extended Life Bags

▶ INKS, PAINTS  
& COATINGS  
▶ GENERAL CHEMICAL

▶ PROCESS WATER  
▶ FOOD AND BEVERAGE  
INDUSTRY

X-TRA Life Filter Bags utilize state-of-the-art needling technology providing outstanding filtration performance in a variety of applications.


Our polyester and polypropylene X-TRA Life materials utilize a proprietary fiber blend configuration to create a media that is heavier, thicker and stronger than standard felted media. This formulation delivers enhanced efficiencies, without increasing initial differential pressure.

Both the POXL and PEXL bags are ideal for removing gels, irregular shaped particles in liquid streams with a wide particle size distribution. X-TRA Life Filter Bags are available in designs that comply with both FDA and EC requirements for food and beverage contact.

- ▶ FIELD TESTS ARE VERIFYING THAT OUR POXL AND PEXL FILTERS LAST AN AVERAGE OF 2 TO 4 TIMES LONGER THAN CONVENTIONAL BAGS
- ▶ REDUCED OPERATING COSTS DUE TO FEWER BAG CHANGEOUTS
- ▶ REDUCED LABOR COSTS ASSOCIATED WITH FEWER BAG CHANGES
- ▶ REDUCED DISPOSAL COST
- ▶ INCREASED PRODUCTIVITY DUE TO STAYING ONLINE LONGER BETWEEN CHANGEOUTS
- ▶ THERMALLY TREATED FABRIC FINISH WHICH VIRTUALLY ELIMINATES THE POSSIBILITY OF FIBER MIGRATION
- ▶ FULLY WELDED CONSTRUCTION UTILIZING OUR SURE-WELD TECHNOLOGY IS STANDARD ON POXL BAGS



## ORDER GUIDE

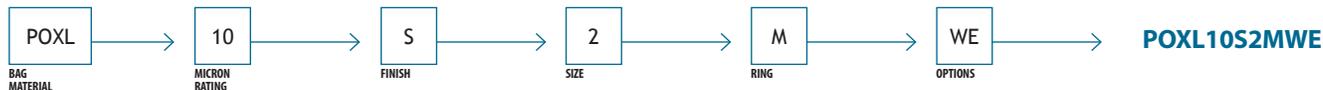

POXL and PEXL bags are available with Sure-Weld technology. Our proprietary “Tri-Seal” P-flange provides a distinct advantage compared to conventional sewn filter bag with metal snap rings or industry standard poly flanges. Using state-of-the-art welding technology specifically designed to bond needle punched textile fabrics, we are able to offer the strongest most reliable welded filter bags on the market.

Our Sure-Weld filters come with the security of an overlap side seam, which eliminates the “bump” that occurs with conventional sewn snap ring filters. By welding to a “Tri-Seal” P-flange our fully welded filter bags offer unparalleled seal security, which delivers superior filtrate consistency.



## AVAILABLE MICRON RATINGS

POXL - Polypropylene Extended Life - 1, 5, 10, 25, 50, 75, 100  
PEXL - Polyester Extended Life - 1, 5, 10, 25, 50, 75, 100

## POLYPROPYLENE - CHEMICAL COMPATIBILITY\*\*

TEMPERATURE	CHEMICAL	COMPATIBILITY
200°F	Acids	Excellent
200°F	Alkali	Excellent
200°F	Oxidizing Agents	Excellent
200°F	Solvents	Average

## POLYESTER - CHEMICAL COMPATIBILITY\*\*

TEMPERATURE	CHEMICAL	COMPATIBILITY
300°F	Weak Acids	Good
300°F	Strong Acids	Good
300°F	Weak Alkali	Poor
300°F	Strong Alkali	Poor
300°F	Solvents	Very Good
300°F	Petroleum Products	Very Good

\*\*Reflective of Filter Bag Material only. Please consult with your Application Engineer to verify specific chemical compatibility

## ORDER OPTIONS

MATERIAL	
POXL PEXL	Polypro. Extended Felt Life Polyester Extended Felt Life
MICRON RATINGS	
POXL - 1, 5, 10, 25, 50, 75, 100 PEXL - 1, 5, 10, 25, 50, 75, 100	
FINISH	
S N	Singed Nylon Mesh Cover
SIZE	
1 2	7" x 16" 7" x 32"
RING	
P M PER MER	Polypropylene P-Flange Polypropylene M-Flange Polyester P-Flange Polyester M-Flange
OPTIONS	
WE	Sure-Weld

# EVP/EVP-A ENHANCED VERTICAL PLEAT

Extended Life Bags

- ▶ GLYCOLS
- ▶ AMINES
- ▶ COOLANTS
- ▶ ADHESIVES
- ▶ RESINS
- ▶ PETRO-CHEMICALS
- ▶ FINE CHEMICALS
- ▶ PLATING SOLUTIONS
- ▶ FOOD & BEVERAGE APPLICATIONS
- ▶ INKS, PAINTS & COATINGS
- ▶ COOLING TOWERS
- ▶ DOWN WELL INJECTION
- ▶ CUTTING FLUIDS
- ▶ HIGH PURITY WATER

Strainrite's **EVP (Enhanced Vertical Pleat)** filters are the product of years of successful, application specific filtration in a variety of industries, using the Model 8T as the genesis of the Value-Life Series.

By working closely with our distributor partners, and their valued customers, we have learned how to amplify the critical features that make the **EVP** the greatest value in the filtration marketplace today. With proprietary advances in pleat profile and rigidity, graded density materials of construction, and utilized surface area, no filter element provides equal filtration performance, life and loading capacity at a similar price.



- ▶ **OPTIMIZED PLEAT PROFILE RIGIDITY PROVIDES > 50% INCREASES IN SURFACE AREA UTILIZATION INCREASE AND PROTECTS FINAL FILTER MEDIA FROM PREMATURE BLINDING AND INCREASES FILTER LIFE**
- ▶ **TRUE GRADED DENSITY DESIGN AND INCREASED SURFACE AREA**
- ▶ **REDUCED FILTER ELEMENT DISPOSAL COSTS**
- ▶ **LONGER, UNINTERRUPTED RUN TIMES**
- ▶ **REDUCED EMPLOYEE EXPOSURE, REDUCED PRODUCT LOSS AND REAL LABOR COST-SAVINGS DUE TO FEWER FILTER CHANGE-OUTS**
- ▶ **NO EQUIPMENT MODIFICATION REQUIRED, FITS ALL INDUSTRY STANDARD #1 AND #2 SIZE BAG HOUSINGS**
- ▶ **CARBON STEEL AND STAINLESS STEEL RINGS AND PLASTIC FLANGES; HANDLE STRAP INCLUDED**
- ▶ **OPTIONAL ZERO-BYPASS VESSELS AVAILABLE**


## EVP-A

- ▶ **FDA COMPLIANT**

## AQUA-RITE EVP

- ▶ **ABSOLUTE RATED COVER PROVIDES PROTECTION AND CLASSIFICATION WHILE MAINTAINING THE GRADIENT DEPTH OF THE STANDARD EVP**

# ORDER GUIDE

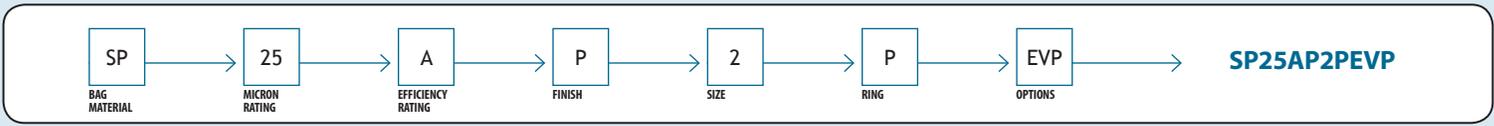

## RESULTS FROM FIELD CASE STUDIES - SURFACE AREA AND LIFE IMPROVEMENT

Product Styles	Bag Life	Surface Area in Square Feet						
		5	10	15	20	25	30	35
#2 Size Filter Bag (SP1P2S)	1 Day	[Small blue bar]						
Value Life EVP (SP1P2S-EVP)	11 Days	[Large blue bar]						

## RESULTS FROM FIELD CASE STUDIES - WASTE WATER STUDY

Product Styles	Filter Life in Hours						
	5	10	15	20	25	30	35
AP10P2S	[Small blue bar]						
AP10P2S-EVP	[Large blue bar]						

## OPTIMIZED PLEAT PROFILE



14 square feet (size 2) of media versus 4 square feet of media standard bag

7 square feet (size 1) of media versus 2 square feet of media standard bag

Fits in standard size 1 / size 2 housing

## ORDER OPTIONS

MATERIAL	
SP AP AR	Polypropylene Felt Polyester Felt* Aqua-Rite Polypropylene Felt*
*Not available in Absolute efficiency	
MICRON RATINGS	
1T, 1, 5, 10, 25, 50, 75*, 100*, 150*, 200*	
*Not available in Absolute efficiency	
EFFICIENCY RATING	
A -	Absolute Nominal
FINISH	
S P	Singed* Plain
*Not available in Absolute efficiency	
SIZE	
1 2	7" x 16" 7" x 32"
RING	
P M PER MER S SS	Polypropylene P-Flange Polypropylene M-Flange Polyester P-Flange* ** Polyester M-Flange* ** Carbon Steel Ring** Stainless Steel Ring**
*Not available in Aqua-Rite **Not available in Absolute efficiency	
OPTIONS	
EVP	Enhanced Vertical Pleat

# AA - ADDITIONAL AREA NEEDLE-PUNCH FELT

Extended Life Bags

- ▶ INKS, PAINTS & COATINGS
- ▶ EDIBLE OILS
- ▶ PROCESS WATER
- ▶ WASTE WATER
- ▶ FOOD & BEVERAGE INDUSTRY

Added Area AA bags provide 65% more surface area and frequently provide a vastly disproportionate benefit – life advantages of 4-5 x have been reported (actual benefit for a given application must be assessed on a case-by-case basis).

The Strainrite Companies offer the widest range of needle punch felt filters in the market. We have formed long term strategic partnerships with North America's largest and most respected needle punch manufacturers.


All of our fabrics are manufactured on state-of-the-art high speed needling equipment that continuously monitor key specifications in real time resulting in the most uniform and consistent fabric across the entire web in our industry. By combining our technically advanced converting process with industry's most reliable media The Strainrite Companies offers [The AA](#), a felt filter bag that leads in product quality, reliability and repeatability.



- ▶ 65% MORE SURFACE AREA THAN YOUR STANDARD SIZE 2 BAG FILTER
- ▶ UP TO 50% MORE FLOW THAN YOUR STANDARD SIZE 2 BAG FILTER
- ▶ LOWER TOTAL COSTS DUE TO HIGHER SOLIDS LOADING CAPABILITIES
- ▶ REDUCED LABOR COSTS FROM FEWER CHANGE-OUTS
- ▶ SMALLER HOUSING FOOT-PRINT IN NEW APPLICATION
- ▶ LOWER HOLD-UP VOLUME (67% LESS)
- ▶ LESS PRODUCT DRAG-OUT
- ▶ BAGS ARE FULLY WELDED, AVAILABLE IN BOTH 100% POLYPROPYLENE AND 100% POLYESTER CONSTRUCTION

For BRB-AA bags that will not be placed in a fully-welded Strainrite AA basket or will be installed using a non-welded AA insert, contact The Strainrite Companies or your distributor for additional ordering instructions – a length suffix code must also be used in those situations. Polyloc™ is a trademark of the Pall Corporation. Sentinel™ and Hayflow™ are trademarks of the Eaton Corporation. DuoFlo™ is a trademark of 3M CUNO.

## ORDER GUIDE

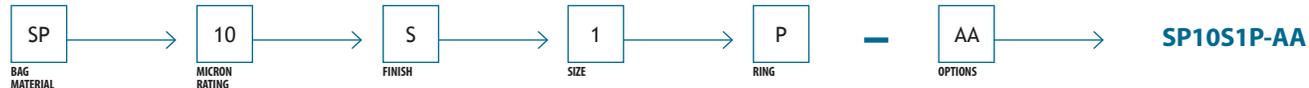

The **BRB-AA Resinator** filter bag combines the benefits of added filter area with a resin-bonded filter medium that provides extra-ordinary life and high quality filtration for coatings, resins, paints, and adhesives. The non-compressible filter medium is ideal for high viscosity fluids. The phenolic-resin impregnated filter medium is tolerant to temperatures of 250°F when used with polyester hardware.

**Note: The BRB-AA Resinator filter bag is not intended for food, beverage and pharmaceutical applications.**



## ORDER OPTIONS

MATERIAL	
SP	Polypropylene Felt
AP	Polyester Felt
POXL	Extended Life Polypropylene
PEXL	Extended Life Polyester
BRB	Resin-Bonded Polyester Felt
MICRON RATINGS	
AP: 1T, 1, 5,10, 25, 50, 75, 100, 200 SP: 1T, 1, 5,10, 25, 50, 75, 100, 200 POXL: 1, 5,10, 25, 50, 75, 100 PEXL: 1, 5,10, 25, 50, 75, 100 BRB: 1T,1,5,10,25,50,75,100,200	
FINISH	
S	*Singed
P	**Plain
SIZE	
1	7" x 16"
2	7" x 32"
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
PER	*Polyester P-Flange
MER	*Polyester M-Flange
S	Carbon Steel Ring
SS	Stainless Steel Ring
OPTIONS	
AA	Added Area <sup>††</sup>
AAH	Added Area (Hayflow equivalent) <sup>††</sup>
AAC	Added Area (Cuno equivalent) <sup>††</sup>
SL-AA	BRB Single Layer Added Area

## STANDARD BAGS VS. AA BAGS

BAG SIZE	DIAMETER (INCHES)	LENGTH (INCHES)	TOTAL AREA (SQURE FEET)
1	7.000	16.0	2.44
1-AA	7.000		4.03
2	7.000	30.5	4.66
2-AA	7.000		7.69

## RETROFIT / REPLACEMENT FEATURES



Retrofits in standard #1 and #2 bag filter vessels (requires a basket change)

Ease of insertion with fully-welded bottoms

Drop-in replacement for DuoFlo™ and Hayflow™ (no basket change required)

Utilizes both Strainrite P-flange (Polyloc™) and M-Flange (Sentinel™)

P-flange (Polyloc™)

M-Flange (Sentinel™)



<sup>†</sup>Not available in BRB-AA

<sup>††</sup>Not available in POXL or PEXL

<sup>†††</sup>Not available in POXL, PEXL or BRB-AA

<sup>††††</sup>Not available in BRB

# SPMF HIGH EFFICIENT

High Efficiency Filter Bags

- ▶ INKS & PAINTS
- ▶ GENERAL CHEMICAL
- ▶ OIL INDUSTRY
- ▶ PHARMACEUTICAL INDUSTRY
- ▶ AMINES
- ▶ PROCESS WATER
- ▶ MICROELECTRONICS INDUSTRY
- ▶ FOOD & BEVERAGE INDUSTRY

SPMF High Efficient Filter Bags are an excellent choice over cartridges for many applications and still offer absolute filtration. A series of different sieve opening layers achieves maximum surface area and longer life exceeding cartridge life substantially. SPMF bags do offer lower operating cost and still maintain the use of existing filter housings without the expense of new capital equipment.

All Strainrite SPMF bags are totally welded with our proprietary welding techniques to assure no particulate bypass and best cleanliness. Strainrite's chemically resistant polypropylene flange withstands and responds to increased flow rates and improves over high ranges of pressure, temperatures and microns. The molded (built-in) handles make quick and easy bag removal.



- ▶ ALL COMPONENTS USED IN SPMF BAGS ARE FDA/EC LISTED MATERIALS FOR FOOD AND BEVERAGE APPLICATIONS
- ▶ AVAILABLE IN 1A, 2A, 5A 10A AND 25A ABSOLUTE EFFICIENCIES
- ▶ AVAILABLE WITH ZERO-BYPASS, 5 POINTS-OF-SEAL, EDPM TOP FLANGE AND OPTIONAL COMPRESSION DEVICE

## ORDER GUIDE



Strainrite's **SPMF** bags are developed to deliver longer life and absolute filtration. Each inner component is developed specifically to achieve continuous finer filtration inside to out with gradual particulate removal separation. Actual production runs have proven longer life and more effective clarity. 100% polypropylene construction, silicone free all in one easily disposable bag makes filtering very cost effective.

Strainrite's **SPMF** filter bags give absolute micron filtration and are available in 1A, 5A, 10A and 25 A micron ratings. Our bags replace expensive absolute rated cartridges by reducing filter costs due to bags having substantially more surface area. Standard needle punched felt bags are made from nominally rated media that has a fiber structure that is not as fine a filtration grade as melt blown media used in Strainrite's **SPMF** bags. Our bags have been designed to deliver calibrated fractional efficiency on very small particles down to less than one micron. Strainrite's **SPMF** bags are completely welded and welded to our snap type polypropylene molded flange.

ABSOLUTE RATED RETENTION
1, 2, 5, 10, 25
FINISH
PLAIN

## ORDER OPTIONS

MATERIAL	
SPMF	SPMF High Efficient
MICRON RATINGS	
1A, 2A, 5A, 10A, 25A	
FINISH	
P	Plain
SIZE	
1	*7" x 16"
2	7" x 32"
<i>*Not available in 1A, 2A</i>	
RING	
P M S SS	Polypropylene P-Flange Polypropylene M-Flange Carbon Steel Ring Stainless Steel Ring
OPTIONS	
HS	Handle Strap

# HI-PRO MICRO

High Efficiency Filter Bags

- ▶ PAINTS
- ▶ GENERAL CHEMICAL
- ▶ FOOD & BEVERAGE INDUSTRY

- ▶ COATINGS
- ▶ PRODUCED WATER FROM GAS DRILLING
- ▶ HIGH PURITY WATER

The Strainrite Companies introduced the Hi-Pro Micro line of high-performance filter bags several years ago and it has proved to be a very successful product. This line provides a full range of absolute rated filter bags to meet all your exacting needs. All four editions of the [Hi-Pro Micro \(HPM\)](#) line incorporate Strainrite's unique graduated layering of media — starting with a built-in pre-filter inner layer and progressing to the tighter outer layers. The smaller particles are systematically removed as fluid travels through multiple layers with each individual layer performing a special function. This graduation aids in the prevention of premature blinding which causes unnecessary filter change out.

The product line offerings include the [Hi-Pro Micro 9200](#), the [Hi-Pro Micro 9500](#), the [Hi-Pro Micro 9700](#), and the ultimate in bag filtration, the [Hi-Pro Micro 9900](#).

## HPM-9200 & HPM-9500:

- ▶ WELL SUITED FOR APPLICATIONS REQUIRING REMOVAL OF SPECIFIC PARTICLE SIZES FROM LIQUIDS AT A REASONABLE COST/BENEFIT RATIO
- ▶ UP TO 95% EFFICIENCY

## HPM-9700 & HPM-9900:

- ▶ UP TO 99% EFFICIENCY
- ▶ BEST CHOICE FOR OIL CONTAMINATION
- ▶ EFFECTIVE REMOVAL OF GEL-LIKE PARTICLES

## AQUA-RITE HPM-9900:

- ▶ ANSI/NSF STANDARD 61 COMPLIANT
- ▶ MEETS REQUIREMENTS OF 40 CFR PARTS 141 & 142
- ▶ LT2 ENHANCED SURFACE WATER TREATMENT RULE (INDEPENDENTLY PERFORMED BY BIOVIR LABORATORIES INC.)
- ▶ APPROVED IN CALIFORNIA FOR 3 LOG REDUCTION USING STRAINRITE'S PRE & FINAL BAG SYSTEM
- ▶ BEST CHOICE FOR GIARDIA AND CRYPTOCYSTS




## ORDER GUIDE




An unrivaled product, Strainrite's **Aqua Rite Hi-Pro Micro** line is the product suggested by the U.S. Environmental Protection Agency for the most effective removal of giardia and other cysts. Strainrite's product has the lowest standard deviation of any other filter, which means users achieve more consistent results from batch to batch. Equally important, this product presents the ultimate value in high purity filtration. The product line includes the **HPM99-CC-2SR** and **HPM99-CCX-2SR**, the ultimate in bag filtration. The two bags work in combination to achieve our drinking water approved system

## UNIQUE GRADUATED FILTER DESIGN


All four editions of the Hi-Pro Micro (HPM) line incorporate Strainrite's unique graduated layering of media — starting with a built-in pre-filter inner layer and progressing to the tighter outer layers.

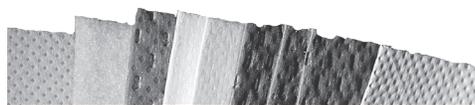


## PERFORMANCE CHARACTERISTICS - HPM 9200 SERIES

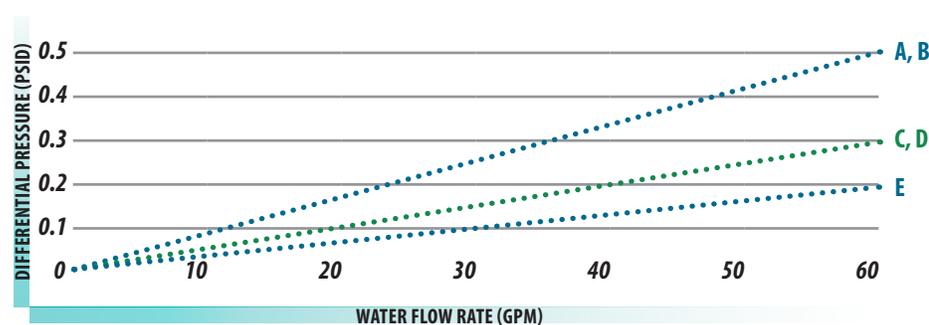

## PERFORMANCE CHARACTERISTICS - HPM 9500 SERIES

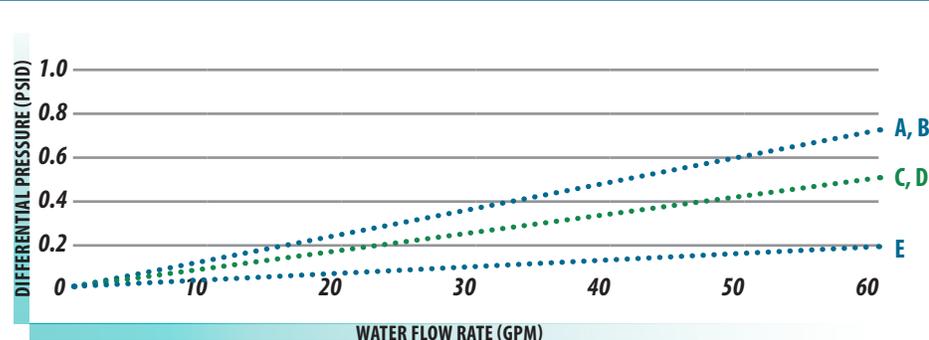

## PERFORMANCE CHARACTERISTICS - HPM 9700 SERIES

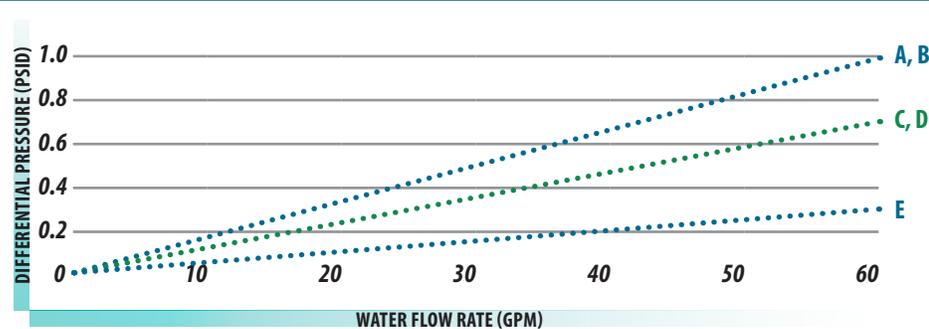

## ORDER OPTIONS - HPM

MATERIAL	
HPM	Hi-Pro Micro
EFFICIENCY	
99	9900 Series - 99%
97	9700 Series - 97%
95	9500 Series - 95%
92	9200 Series - 92%
MICRON RATING	
A	1.0
B	3.5
C	5.0
D	10.0
E	25.0
SIZE	
1	7" x 16"
2	7" x 32"
3	4.08" x 8"
4	4.08" x 14"
25	4" x 9"
30	4.118" x 10"
50	4" x 21"
65	4.118" x 22"
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
S	Carbon Steel Ring
SS	Stainless Steel Ring
Z	Polypropylene Z-Flange*

\*Fits Size 25, 50 bags only

ORDER OPTIONS:  
AQUA-RITE HPM

AQUA-RITE HI-PRO MICRO	
HPM99-CC-2SR	Primary Filter (pre-filter)
HPM99-CCX-2SR	Secondary Filter (final filter)

# ACCURITE ULTRA-EFFICIENT

High Efficiency Filter Bags - Polypropylene Support

- ▶ INKS & PAINTS
- ▶ GENERAL CHEMICAL
- ▶ PETROCHEMICAL
- ▶ PHARMACEUTICAL INDUSTRY
- ▶ COATINGS
- ▶ PROCESS WATER
- ▶ MICROELECTRONICS INDUSTRY
- ▶ FOOD & BEVERAGE INDUSTRY

[Accu-Rite Ultra-Efficient Filter Bags](#) achieve efficiencies greater than 99% and are available in 1.5, 3, 10 and 25 micron ratings. They are an excellent choice where the convenience of bag filtration is required in combination with absolute filtration. We employ specially-engineered filtration layers in combination to achieve maximized performance in terms of filter life and particle retention. [Accu-Rite](#) bags offer lower operating cost while permitting the use of existing filter housings without the expense of new capital equipment.



- ▶ ALL COMPONENTS USED IN ACCU-RITE ULTRA-EFFICIENT FILTER BAGS ARE FDA/EC LISTED MATERIALS FOR FOOD AND BEVERAGE APPLICATIONS
- ▶ AVAILABLE IN 1.5, 3, 5, 10 AND 25 ABSOLUTE EFFICIENCIES
- ▶ AVAILABLE WITH ZERO-BYPASS, 5 POINTS-OF-SEAL, EDPM TOP FLANGE AND OPTIONAL COMPRESSION DEVICE
- ▶ POLYPROPYLENE COVER INCLUDED ON SIZE 1 AND 2 FILTER BAGS TO FACILITATE CHANGE-OUT.

## ORDER GUIDE



All Strainrite **Accu-Rite** bags are totally welded with our proprietary welding techniques to assure absence of particulate bypass and best cleanliness. Strainrite's chemically-resistant polypropylene flange withstands and responds to increased flow rates, performing reliably over high ranges of pressure and temperature, and providing a high-performance seal consistent with the micron rating of the filter. The molded (built-in) handles make quick and easy bag removal.


Strainrite has achieved superior results by engineering a filter construction that removes progressively smaller contaminants as fluids move from upstream to downstream through our proprietary filter media. Actual production runs have proved that the **Accu-Rite Ultra-Efficient Filter Bags** provide longer life and superior clarity. These filters, comprised of 100% polypropylene filter medium with polypropylene support, are manufactured in a silicone free facility in which each employee has received CRATER training.

**Accu-Rite** filters are available with a variety of rings and flanges to fit most filter housings. This includes Strainrite's M-Flange which is employed in retrofitting a competitor's Sentinel™ flange\*.

\*Sentinel™ is a trademark of Eaton Corporation.

## ORDER OPTIONS

MATERIAL	
ARPO	Accu-Rite
CARTRIDGE LENGTH	
51	1.5μ - 99%
53	3μ - 99%
55	5μ - 99%
57	10μ - 99%
59	25μ - 99%
FINISH	
P	Plain
SIZE	
1	7" x 16.5"
2	7" x 30.5"
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
S	Carbon Steel Ring
SS	Stainless Steel Ring

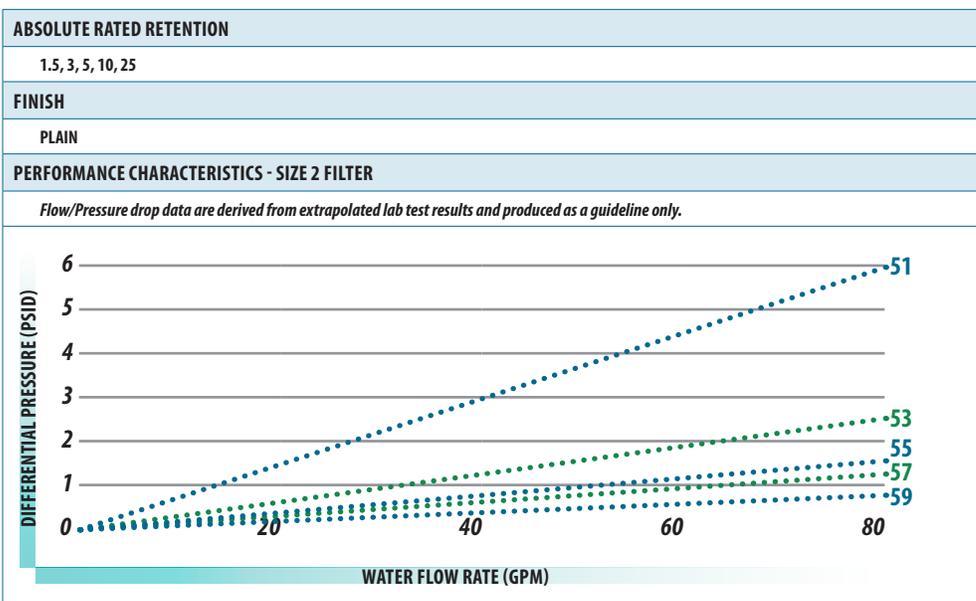

# BRB / BRB-AA RESINATOR

Resin-Bonded Specialty Bags

- ▶ INKS
- ▶ PAINTS
- ▶ COATINGS
- ▶ HYDRAULIC FLUIDS
- ▶ RESINS
- ▶ ADHESIVES
- ▶ PRODUCED FLUIDS
- ▶ PETROLEUM PRODUCTS

Once again, The Strainrite Companies delivers true filtration innovation by combining only the positive qualities of resin-bonded cartridges with the proven advantages of a Strainrite premium quality filter bag.

**Resinator** users gain the non-compressible media depth of a resin filter, along with the greatly enhanced solids loading capacity and cost saving features of a Strainrite gradient-density filter bag. This product excels in a wide variety of high viscosity fluid filtration applications where authoritative removal of problematic gels is required.

These “hard body” filter bags represent a significant advancement in the utilization of rigid fiber technology and illustrate the leadership role The Strainrite Companies plays in supplying vision and technical leadership when designing and manufacturing liquid filter bags.

This graduated double layer product design combines the depth loading efficiency of resin bonded cartridges with the greater dirt loading capacity of a filter bag creating the most cost effective method for filtering both low and high viscosity fluids.



- ▶ **NON-COMPRESSIBLE MEDIA DEPTH**
- ▶ **RIGID FIBER TECHNOLOGY**
- ▶ **GRADUATED DOUBLE LAYER**
- ▶ **HIGH DIRT LOADING CAPACITY**

\*\* note: for AA bags that will not be placed in a Strainrite-manufactured AA basket, or that will be used with a basket-insert, a non-standard length bag may be required. Contact your Strainrite distributor for assistance.

## ORDER GUIDE

BRB

BAG  
MATERIAL

1T

MICRON  
RATING

P

FINISH

1

SIZE

M

RING

-

SL

OPTIONS

BRB1TP1MSL

New: **Resinator** filter bags are now available in an **AA (added area)** configuration. This configuration provides 70% more surface area and often provides a disproportionately larger benefit. A **Resinator** filter bag in the **AA** configuration combines the benefits of a non-compressible filter medium and the extended filter life and greater throughputs of added surface area. (Requires use of an **AA basket**.)



## MAXIMUM OPERATING TEMPERATURE

180°F (80°C) with polypropylene hardware  
250°F (121°C) with polyester hardware or metal ring

## ORDER OPTIONS

MATERIAL	
BRB	Resin-Bonded Polyester Felt
MICRON RATINGS	
1T, 1, 5, 10, 25, 50, 75, 100, 200	
FINISH	
P	Plain
SIZE	
1	7" x 16"
2	7" x 30.5"
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
PER	Polyester P-Flange
MER	Polyester M-Flange
SHS	Carbon Steel Ring w/ Handle Strap*
SSHS	Stainless Steel Ring w/ Handle Strap*
PRHS	Polypropylene Ring w/ Handle Strap*
<small>*Not available for AA bags</small>	
OPTIONS	
-	Double Layer Standard Bag
SL	Single Layer Standard Bag
SLAA	Single Layer Added Area Bag

# ABSORB-RITE® BAGS

Specialty Bags

- ▶ ELECTROPLATING
- ▶ PICKLING LIQUIDS
- ▶ LIQUID FERTILIZERS

- ▶ GLYCOLS
- ▶ WASTE WATER
- ▶ CUTTING OIL REMOVAL


The **Absorb-Rite®** filter bag from The Strainrite Companies substantially reduces oil and grease from aqueous based liquids. The **Absorb-Rite®** bag offers a unique two-in-one design that forces the liquid through the entire length of the filter, therefore uniformly utilizing all the absorbant media.

Typically, this unique filter absorbs 10-15 times its weight in oil. The **Absorb-Rite®** offers in excess of 50% more absorbency than competing brands.

**Absorb-Rite®** filter bags are available to fit all bag filter housings. Anywhere oil or grease must be separated and removed from an industrial stream, Absorb-Rite® bags are designed to fill the need. Best results at low flow rates to achieve longer contact time.

- ▶ **UNIQUE THREE LAYER CONSTRUCTION RESULTS IN MAXIMUM EXPOSURE TIME AT MINIMUM FLOW RATE**
- ▶ **THE TOP DISC PRE-FILTER MATERIAL REMOVES DIRT AND OTHER PARTICULATE MATERIAL PRIOR TO THE ADSORPTION OF HYDROCARBONS**
- ▶ **DESIGNS AVAILABLE TO REMOVE PARTICLES IN THE 1-200 MICRON RANGE**
- ▶ **HIGHER HYDROCARBON REMOVAL CAPACITY THAN OTHER FILTER BAGS ON THE MARKET**
- ▶ **HIGHER CAPACITY THAN MOST OTHER BAGS ON THE MARKET**
- ▶ **STANDARD BAGS FIT SRID AND SRHD FILTER VESSELS (FIT COMPETITOR HOUSINGS AS WELL)**
- ▶ **DESIGNED TO MINIMIZE CONTAMINATION DURING CHANGEOVER**

## ORDER GUIDE

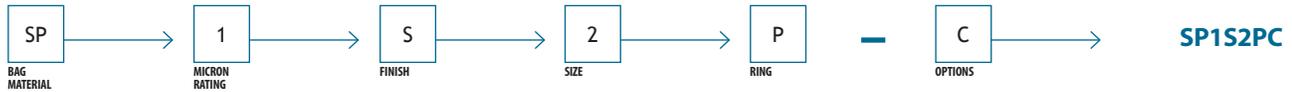**MATERIALS**

Polypropylene Felt

**FLOW RATE**

#2 Size = 5 gpm  
 #1 Size = 2½ gpm  
 Estimate flows depending upon ppm oil and viscosity

**MICRON RATINGS**

1,5,10,25,50,75,100,200

**FINISH**

Singed

**ORDER OPTIONS**

MATERIAL	
SP	Polypropylene Felt
MICRON RATINGS	
1,5,10,25,50,75,100,200	
FINISH	
S	Singed
SIZE	
1	7" x 16"
2	7" x 32"
3	4.08" x 8"
4	4.08" x 14"
25	*4" x 9"
30	*4.118" x 10"
50	*4" x 21"
65	*4.118" x 22"
<small>*Not available with Polypropylene Ring</small>	
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
SHS	Carbon Steel Ring*
SSH	Stainless Steel Ring*
PRHS	Polypropylene Ring*
Z	Polypropylene Z-Flange**
<small>*For Bags with Rings, HS is added to standard code, as Handle Straps (HS) are always standard on Absorb-Rite bags with rings</small>	
<small>**Fits Size 25, 50 bags only</small>	
OPTIONS	
C	Absorb-Rite

# MAG-BAG

Multi-magnet design for metal removal - Specialty Bags

- ▶ PLATING
- ▶ PARTS WASHERS
- ▶ MACHINING COOLANTS
- ▶ MACHINING LUBRICANTS

- ▶ AUTOMOTIVE PRE-COAT
- ▶ CUTTING, GRINDING AND BORING
- ▶ PRE-CLEANING PROCESS WATER BEFORE SENSITIVE OPERATIONS

The **MAG-BAG** incorporates a multi-purpose design that attracts microscopic ferrous impurities along the entire length of the 12" or 24" magnetic bars\*. Filter life is optimized, as the ferrous particles are largely attracted to the magnet contaminate pockets, as opposed to the exit wall of the filter.



Lacking Strainrite's proprietary multi-magnet configuration, other filter bags do not provide the same extensive sphere of influence and struggle to maintain high production flow rates.

Independent field studies demonstrate ferrous containment gain greater than two times over conventional filters.

- ▶ STANDARD THREE POCKET DESIGN ACCOMMODATES 3 MAGNETIZED RODS
- ▶ MINIMIZES DOWNTIME AND WASTE-WATER TREATMENT COSTS
- ▶ KEEPS SPRAY NOZZLES CLEAN AND ENHANCES PRODUCT APPEARANCE
- ▶ MULTI-MAGNET DESIGN FOR UNSURPASSED METAL REMOVAL
- ▶ MAXIMIZES PRODUCTION CAPACITY AND PRODUCT QUALITY
- ▶ EXTENDS LIFE OF CUTTING TOOLS, EQUIPMENT AND METAL-WORKING LIQUIDS
- ▶ TRAPS 200% MORE FERROUS FINES
- ▶ COST-EFFECTIVE REUSABLE RARE EARTH MAGNETS WITH 1" LIFTING LOOP FOR EASY REMOVAL

\*note: Magnets not included. Contact your Strainrite distributor for a magnet quote.

### ORDER GUIDE

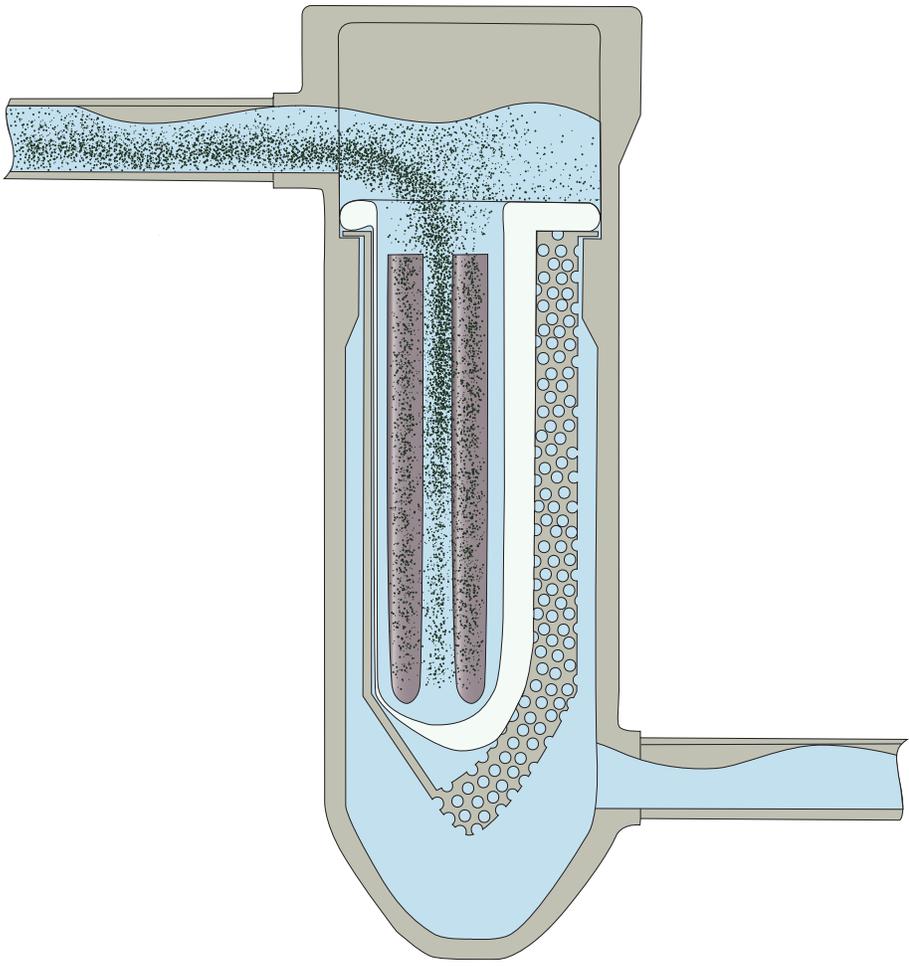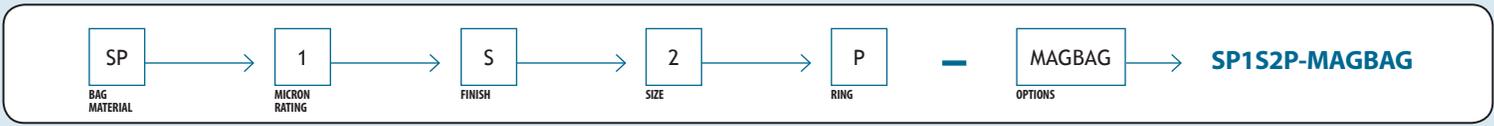

MATERIALS	
Polypropylene	Polyester
MICRON RATINGS	
1T, 1, 5, 10, 25, 50, 75, 100, 150, 200	
FINISH	
SINGED ON ONE SIDE PLAIN	
PERFORMANCE CHARACTERISTICS - MAG-BAG VS. CONVENTIONAL FILTRATION	

Elapsed Time	MAG-BAG Impurities (Grams)	Conventional Impurities (Grams)
0	0	0
50	~50	~25
100	~100	~40
150	~150	~50
200	~200	~60
250	250	~75

### ORDER OPTIONS

MATERIAL	
SP AP	Polypropylene Polyester
MICRON RATINGS	
1T, 1, 5, 10, 25, 50, 75, 100, 150, 200	
FINISH	
S P	Singed on one side Plain
SIZE	
1 2	7" x 16" 7" x 32"
RING	
P M S SS	Polypropylene P-Flange Polypropylene M-Flange Carbon Steel Ring Stainless Steel Ring
OPTIONS	
MAG-BAG	

# SPECIALTY BAGS FOR OIL

Oil Bag

Oil Absorption Log

- ▶ PLATING SOLUTIONS
- ▶ PARTS CLEANING

- ▶ AUTOMOTIVE PAINTS
- ▶ PRODUCED FLUIDS
- ▶ AUTOMOTIVE PAINTS

The Strainrite Companies [Oil Absorbing Filter Bags](#) are made from polypropylene media that absorb oil. Oil bags utilize multi-layered technology to absorb trace amount of oils form water at moderate flow rates. Typically sizes are #1 and #2 industry standards and other sizes are available upon request.

## OIL BAG FEATURES

Dual-function oil/particulate removal

Multiple efficiency's available from 1 micron to 200 micron

Can be made with steel ring, M-flange or P-flange

Recommended flow rate:

Oil Bag #1: 25 gpm

Oil Bag #2: 50 gpm


Oil capacity:

Oil Bag #1: 1,790 grams

Oil Bag #2: 2,890 grams



## ORDER GUIDE

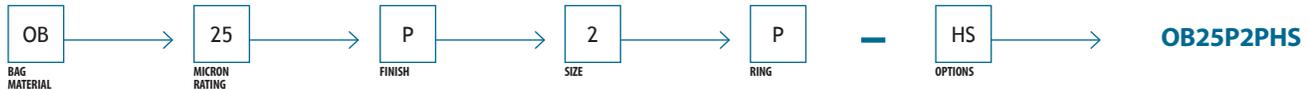

The Strainrite Companies **Oil Absorbtion Logs** are made from polypropylene melt blown microfiber and felt media. The log is surrounded with a heavy polypropylene mesh cover with a polypropylene center core for rigidity.

These logs can either be inserted inside a filter bag or can float on top of oil contaminate drums or vats. The unique design enhances the media's ability to "wick" the free oil and grease from contaminated liquid. The only Delta P restrictions you have is based on that of the filter bag itself, as the flow of liquids passes around the oil log.



## AVAILABLE SIZES &amp; OIL ABSORBING CAPACITY

	DIAMETER	LENGTH	CAPACITY
OE-LOG-1B	3"	15"	190 grams
OE-LOG-2B	3"	24"	355 grams

## OIL LOG FEATURES

Made from polypropylene melt blown microfiber and felt media
Heavy polypropylene mesh cover
Polypropylene center core for rigidity

## ORDER OPTIONS - OIL BAG

MATERIAL	
OB	Oil Bag
MICRON RATINGS	
25	
FINISH	
P	Plain
SIZE	
1	7" x 16"
2	7" x 32"
RING	
P	Polypropylene P-Flange
M	Polypropylene M-Flange
S	Carbon Steel Ring
SS	Stainless Steel Ring
OPTIONS	
HS	Handle Strap

## ORDER OPTIONS - OIL LOG

MATERIAL	
OE-LOG	Oil Absorbtion Log
DIMENSIONS	
1B	3" dia x 15" long
2B	3" dia x 24" long

# CARBON & CHEMICAL READY BAGS

Specialty Bags

- ▶ PLATING
- ▶ PARTS CLEANING
- ▶ WASTE WATER

- ▶ PRODUCED WATER
- ▶ MACHINE CUTTING FLUIDS
- ▶ GROUNDWATER REMEDIATION


The [Carbon Ready & Chemical Ready Bags](#) are a Strainrite filtration innovation designed to separate and remove undesirable substances from liquid streams. These proprietary filter bags feature an impervious inner liner that does not allow liquids to escape through the side walls. This maximizes contact time with the media and enhances effluent consistency.

Commonly used medias include: carbon, ion exchange resins, clays, alumina as well as other granular chemicals.

A zippered top disc allows for easy insertion of your media. The clean effluent passes through the bottom and exits the bag.

- ▶ ZIPPERED TOP DISC MAKES MEDIA LOADING EASY
- ▶ AVAILABLE IN EITHER POLYPROPYLENE OR CHEMICALLY RESISTANT NYLON PLASTIC
- ▶ EXCELLENT NOMINAL EFFICIENCY PERFORMANCE WHEN UTILIZED WITH A SUPPORT BASKET
- ▶ NON-FIBER RELEASING MATERIAL
- ▶ HYGIENICALLY SUPERIOR TO CARTRIDGE FILTRATION DUE TO INSIDE-OUT FLOW DYNAMIC, ALL IMPURITIES ARE CONTAINED INSIDE THE FILTER BAG
- ▶ REDUCED PRODUCT LOSS DUE TO VIRTUALLY NO MEDIA HOLD-UP VOLUME

## ORDER GUIDE

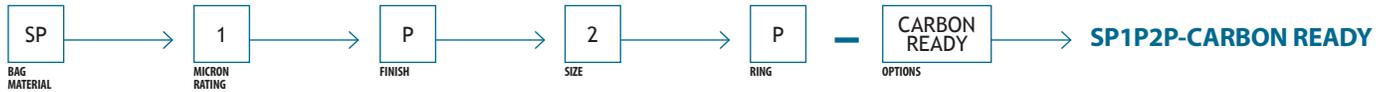

MATERIAL
Polypropylene Felt Polyester Felt
LINER OPTIONS
Carbon Ready - Polypropylene Liner Chemical Ready - Polyethylene Liner
MICRON RATINGS
1,5,10,25,50,75,100,150,200
FINISH
Singed Plain

## ORDER OPTIONS

MATERIAL	
SP AP	Polypropylene Felt Polyester Felt
MICRON RATINGS	
1,5,10,25,50,75,100,150,200	
FINISH	
S P	Singed Plain
SIZE	
1 2	7" x 16" 7" x 30.5"
RING	
P SHS SSHHS PRHS	Polypropylene P-Flange Carbon Steel Ring* Stainless Steel Ring* Polypropylene Ring*
<small>*For Bags with Rings, HS is added to standard code, as Handle Straps (HS) are always standard on Carbon/Chem bags with rings</small>	
OPTIONS	
Carbon Ready	Polypropylene Liner
Chemical Ready	Polyethylene Liner

# SRCT / SRVT

150 PSI / 100 PSI Sanitary 316L Stainless Steel Cartridge Vessels

The **SRCT** and **SRVT Sanitary Cartridge Vessels** offer the aesthetics and operational durability of stainless steel at affordable prices. The **SRCT's** innovative design ensures optimal cleanability in critical areas and can accommodate either 10", 20" or 30" cartridges in a single cartridge housing and 20", 30" or 40" filter cartridges in a multi-cartridge vessel.


**SRCT** filters are designed specifically for liquid filtration in the food and beverage industry, offering microbiological safety, corrosion resistance and durability.

**SRVT** filters offer the same innovative design with a 100 PSI maximum operating pressure at 200°F.

SRCT SINGLE CARTRIDGE																													
Maximum Operating Pressure: 150 psi (67°F)																													
Electropolished finish ensures optimal cleanability in critical areas																													
Stainless steel legs																													
Sterilization using in-line steam, autoclave or hot water																													
Fitted for code 7 filter cartridge																													
SRCT MULTI-CARTRIDGE																													
Maximum Differential Pressure: 25 PSID	Maximum Flow Rate: 25 GPM water																												
Filter Cartridge Life: 0-25 PSID	Flow Range: 1-20 GPM																												
Electropolished finish ensures optimal cleanability in critical areas																													
Stainless steel legs																													
Sterilization using in-line steam, autoclave or hot water																													
Fitted for code 7 and code 6 filter cartridges																													
SRVT SINGLE & MULTI-CARTRIDGE																													
Maximum Operating Pressure: 100 psi (200°F)																													
316 Stainless steel																													
Removable cartridge plates for cleaning																													
Bleeder valve vents and drains																													
Silicone Gaskets																													
Holds 226/Fin (C7) Cartridges																													
PERFORMANCE CHARACTERISTICS - SINGLE CARTRIDGE																													
<table border="1"> <caption>Performance Characteristics - Single Cartridge</caption> <thead> <tr> <th>Water Flow Rate (GPM)</th> <th>10" 1μ nominal (PSID)</th> <th>20" 1μ nominal (PSID)</th> <th>30" 1μ nominal (PSID)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.0</td> <td>0.0</td> <td>0.0</td> </tr> <tr> <td>2</td> <td>0.10</td> <td>0.05</td> <td>0.03</td> </tr> <tr> <td>4</td> <td>0.20</td> <td>0.10</td> <td>0.05</td> </tr> <tr> <td>6</td> <td>0.30</td> <td>0.15</td> <td>0.07</td> </tr> <tr> <td>8</td> <td>0.40</td> <td>0.20</td> <td>0.09</td> </tr> <tr> <td>10</td> <td>0.50</td> <td>0.25</td> <td>0.11</td> </tr> </tbody> </table>		Water Flow Rate (GPM)	10" 1μ nominal (PSID)	20" 1μ nominal (PSID)	30" 1μ nominal (PSID)	0	0.0	0.0	0.0	2	0.10	0.05	0.03	4	0.20	0.10	0.05	6	0.30	0.15	0.07	8	0.40	0.20	0.09	10	0.50	0.25	0.11
Water Flow Rate (GPM)	10" 1μ nominal (PSID)	20" 1μ nominal (PSID)	30" 1μ nominal (PSID)																										
0	0.0	0.0	0.0																										
2	0.10	0.05	0.03																										
4	0.20	0.10	0.05																										
6	0.30	0.15	0.07																										
8	0.40	0.20	0.09																										
10	0.50	0.25	0.11																										



**ORDER GUIDE**

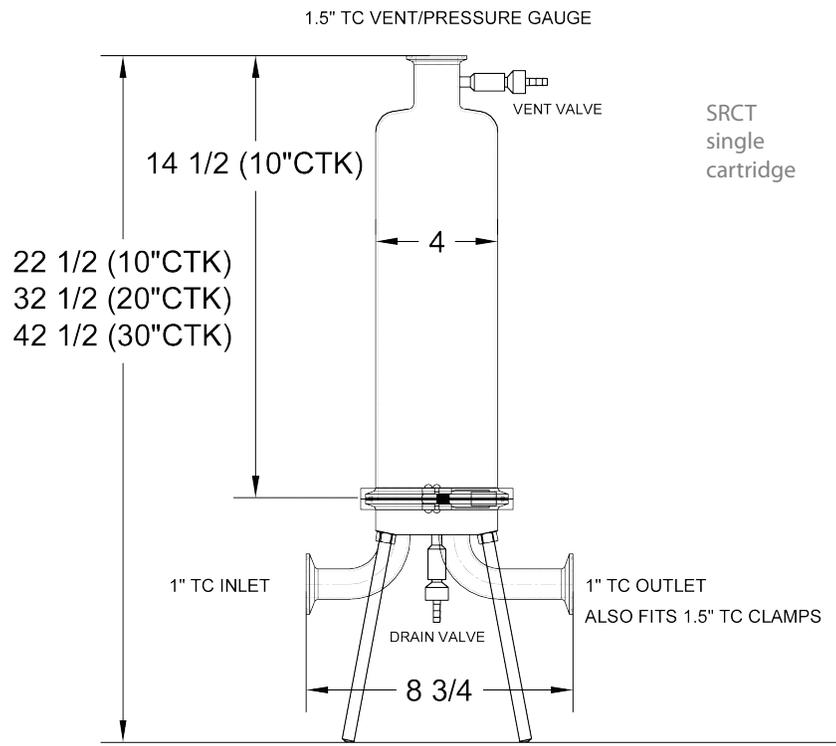


**ORDER OPTIONS - SRCT**

VESSEL	
SRCT	Strainrite Sanitary Cartridge Vessel
CARTRIDGE COUNT	
1RND	1-round cartridge
3RND	3-round cartridges
5RND	5-round cartridges
8RND	8-round cartridges
12RND	12-round cartridges
18RND	18-round cartridges
24RND	24-round cartridges
30RND	30-round cartridges
ELEMENT LENGTH	
*10, 20, 30, **40	
<small>*1-cartridge house only **Not available with 1-cartridge housing</small>	
INLET/OUTLET	
1TC	1" Tri-Clover*
2TC	2" Tri-Clover
3TC	2" Tri-Clover
<small>*1-cartridge house only</small>	
CONSTRUCTION MATERIALS	
C	316 Stainless Steel
END-CAP	
C6	Flat/226
C7	Fin/226

**ORDER OPTIONS - SRVT**


VESSEL	
SRVT	Strainrite Sanitary Cartridge Vessel - 100 psi
CARTRIDGE COUNT	
1RND	1-round cartridge
3RND	3-round cartridges
5RND	5-round cartridges
7RND	7-round cartridges
12RND	12-round cartridges
ELEMENT LENGTH	
*10, *20, 30	
<small>*1-cartridge house only</small>	
INLET/OUTLET	
1TC	*1" Tri-Clover
1.5TC	**1.5" Tri-Clover
2TC	***2" Tri-Clover
<small>*1-cartridge house only **3,5,7-cartridge house only ***12-cartridge house only</small>	
CONSTRUCTION MATERIALS	
C	316 Stainless Steel
END-CAP	
C7	Fin/226

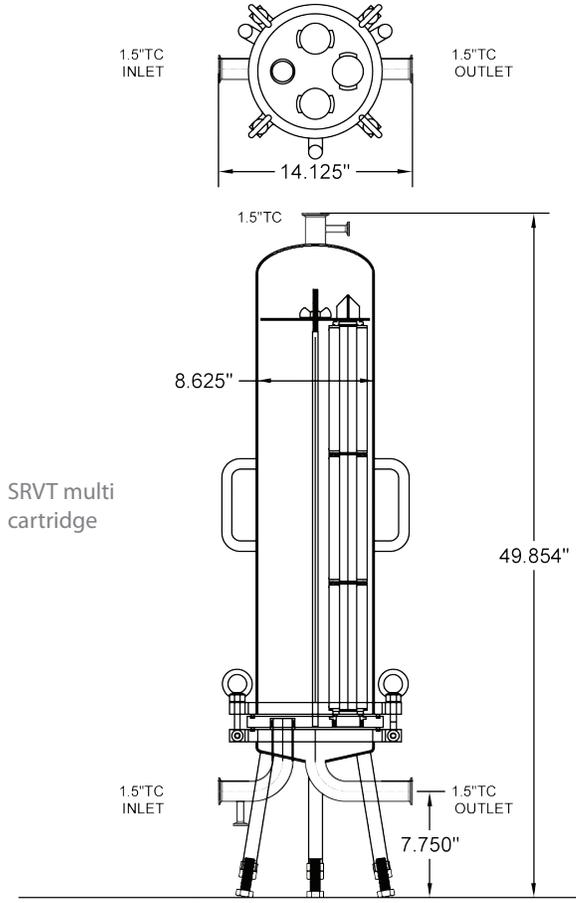

*This is not a comprehensive list. We can build your vessel to suit your specifications. Call one of our customer service representatives for pricing and availability.*

The Strainrite Companies is known for developing some of the industry's most advanced designed hybrid cartridge elements on the market. These high efficiency filter elements require a vessel that has a hermetically sealed top to fully capture all of the filters capabilities. The **SRC Industrial Duty Cartridge Vessel** is perfectly positioned to handle standard cartridges and absolute rated filters.

SRCI SERIES SINGLE CARTRIDGE		
150 psi design pressure	O-ring sealed cover	
Inlet and outlet connections: ¾" - 1" NPT		
Optional: ¼" NPT vent port in lid	Optional: Polypropylene inline in 10", 20" housing	
SRCI SERIES MULTI-CARTRIDGE		
150 psi design pressure	O-ring sealed cover	
Inlet and outlet connections: 2" NPT & RFF		
Band Clamp style, 2.5" - 2.75" Cartridge OD - available in 4, 5, 7, 12 round	Swing Bolt style, 2.5" Cartridge OD - available in 22, 36 round	
Optional: 3" NPT or RFF connections	Optional: Eye nut closure system	
SRC8 SERIES		
150 psi design pressure	O-ring sealed cover ( Buna N)	
Side in/Bottom out	Swing Bolt style	Tripod stand
4 round - 226 Style, 8" Housing Diameter		
5 round - 2.75" cartridge OD, 8" Housing Diameter		
6 round - 2.5" cartridge OD, 8" Housing Diameter		
SRC16, SRC20, SRC26 SERIES		
150 psi design pressure	O-ring sealed cover ( Buna N)	
Side in/Bottom out	Swing Bolt style	Tripod stand
19 round - 2.75" cartridge OD, 16" Housing Diameter		
31 round - 2.75" cartridge OD, 20" Housing Diameter		
54 round - 2.75" cartridge OD, 26" Housing Diameter		

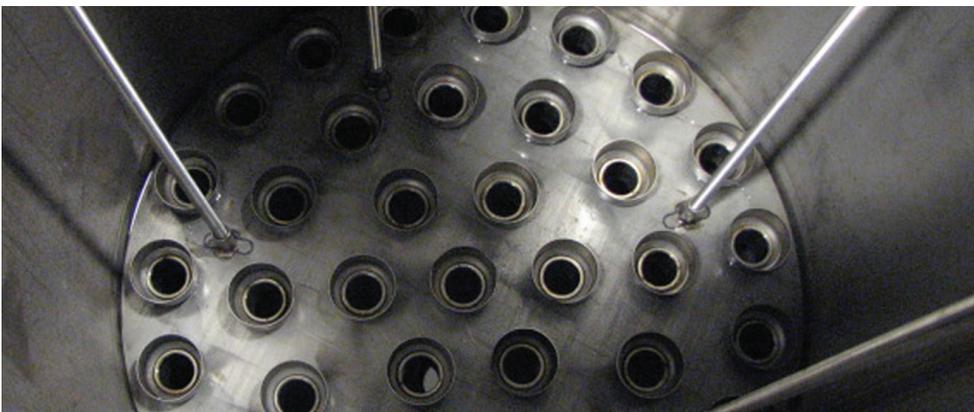

SRC  
multi-cartridge

## ORDER GUIDE



With a radial seal, the SRC has a machined surface that produces a positive seal to eliminate bypass. The SRC vessel line is raising the bar in the Original Equipment Manufacture market by delivering superior value in a cost-effective design.



SRCI  
single  
cartridge

## ORDER OPTIONS - SRCI

VESSEL	
SRCI	Strainrite Industrial Duty Cartridge Vessel SRCI Series
MATERIAL	
B PP	304 Stainless Steel *Polypropylene <small>*1-cartridge, 10 &amp; 20" housing only</small>
CARTRIDGE COUNT	
1, 4, 5, 7, 12	
ELEMENT LENGTH	
10, 20, 30, *40 <small>*Not available with 1-cartridge housing</small>	
INLET/OUTLET	
3/4 1 2 2F 3 3F 4F 6F	*3/4" NPT *1" NPT 2" NPT 2" RFF 3" NPT 3" RFF 4" RFF 6" RFF <small>*1-cartridge house only</small>
O-RING	
V B E	Fluorocarbon Buna N EPDM

## ORDER OPTIONS - SRC8

VESSEL	
SRV8	Strainrite Industrial Duty Cartridge Vessel SRC8 Series
ELEMENT LENGTH	
30, 40	
CARTRIDGE COUNT	
4, 5, 6	
INLET/OUTLET	
2 2F 3 3F	2" NPT 2" FLG 3" NPT 3" FLG
CONSTRUCTION MATERIALS	
A B C	Carbon Steel 304 Stainless Steel 316 Stainless Steel
END-CAP	
C1 C3 C6 C7 C8	Double Open Ends Flat/222 Flat/226 Fin/226 Fin/222

## ORDER OPTIONS - SRC16

VESSEL	
SRV16	Strainrite Industrial Duty Cartridge Vessel SRC16 Series
ELEMENT LENGTH	
30, 40	
CARTRIDGE COUNT	
19	
INLET/OUTLET	
3F	3" FLG
CONSTRUCTION MATERIALS	
A B C	Carbon Steel 304 Stainless Steel 316 Stainless Steel
END-CAP	
C1 C3 C6 C7 C8	Double Open Ends Flat/222 Flat/226 Fin/226 Fin/222

## ORDER OPTIONS - SRC20

VESSEL	
SRV20	Strainrite Industrial Duty Cartridge Vessel SRC20 Series
ELEMENT LENGTH	
30, 40	
CARTRIDGE COUNT	
31	
INLET/OUTLET	
4F	4" FLG
CONSTRUCTION MATERIALS	
A B C	Carbon Steel 304 Stainless Steel 316 Stainless Steel
END-CAP	
C1 C3 C6 C7 C8	Double Open Ends Flat/222 Flat/226 Fin/226 Fin/222

## ORDER OPTIONS - SRC26

VESSEL	
SRV26	Strainrite Industrial Duty Cartridge Vessel SRC26 Series
ELEMENT LENGTH	
30, 40	
CARTRIDGE COUNT	
54	
INLET/OUTLET	
6F	6" FLG
CONSTRUCTION MATERIALS	
A B C	Carbon Steel 304 Stainless Steel 316 Stainless Steel
END-CAP	
C1 C3 C6 C7 C8	Double Open Ends Flat/222 Flat/226 Fin/226 Fin/222

*This is not a comprehensive list. We can build your vessel to suit your specifications. Call one of our customer service representatives for pricing and availability.*

The SRVC Value Design Cartridge Vessels provide economical filtration of a wide variety of liquids in a lightweight, externally polished stainless steel design, with features including a swing bolt secured, quick opening cover and an internal positive pressure cartridge alignment and sealing plate.

The SRVC vessels accommodate either a single 10" or 20" long, double open end (DOE) or 222 single open end (SOE) filter cartridge. These vessels are manufactured from polished and passivated 304 stainless steel and rated for 100 psi. For added corrosion resistance, all cover bolt and leg mounting hardware is made from stainless steel as well.

SRVC SINGLE & MULTI-CARTRIDGE	
Maximum Allowable Pressure: 100 psi	Maximum Allowable Temperature: 300°F (149°C)
Convertible design allows for the use of both DOE and SOE cartridges	
Standard Seals: Fluorocarbon (other material options available)	
Single O-ring design closure assures quick, positive cover sealing	
Code Design: Non-ASME	
Vent and drain connections	
Polished exterior & pickle passivate interior /exterior for enhanced corrosion resistance	
SRVC SINGLE CARTRIDGE	
Clamped o-ring closure seal provides quick and positive seal	
In-line 1" FNPT threaded pipe connections for easy installation	
Head mounting kit included	
SRVC MULTI-CARTRIDGE	
Swing bolts for fast and easy opening and closing of cover	
Swing bolted o-ring closure seal provides quick and positive seal and easy access to the vessel interior and filter cartridges	
Standard threaded FNPT vent & drains	
Standard stainless steel cartridge support and sealing hardware	




SRVC  
multi-cartridge


**ORDER GUIDE**




SRVC-B1-101V

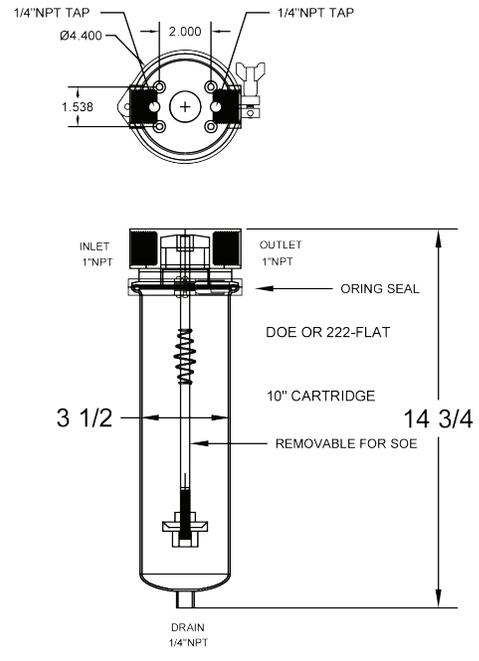

SRVC single cartridge

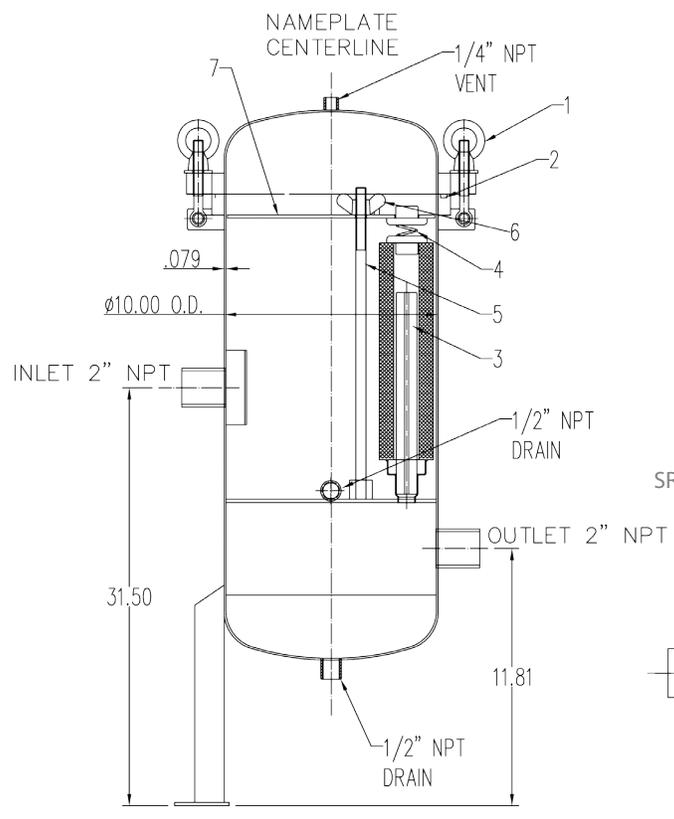

SRVC-B7-402V

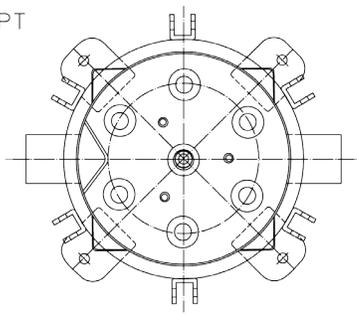

**ORDER OPTIONS**

VESSEL	
SRVC	Strainrite Value Design Cartridge Vessel Series
MATERIAL	
B	304 Stainless Steel
CARTRIDGE COUNT	
1*, 5, 7, 11, 19	
<small>*Single-round housing accepts C1 (DOE) and C3 (flat/222) cartridges only</small>	
ELEMENT LENGTH	
*10, **20, 30, ****40	
<small>*1-cartridge house only **Not available with 7, 11 or 19-cartridge housing ***Not available with 1-cartridge housing</small>	
INLET/OUTLET	
1	*1" NPT
2	**2" NPT
2F	***2" RFF
3F	****3" RFF
4F	*****4" RFF
<small>*1-cartridge house only **5-cartridge 30" / 7-cartridge 30 or 40" only ***5-cartridge 20, 30 or 40" / 7-cartridge 30" or 40" only ****11-cartridge 30 or 40" only *****19-cartridge 30 or 40" only</small>	
O-RING	
V	Fluorocarbon
B	*Buna N
E	*EPDM
<small>*Special request only</small>	

This is not a comprehensive list. We can build your vessel to suit your specifications. Call one of our customer service representatives for pricing and availability.

The SRL Low Flow Vessel is versatile in its ability to function as a strainer or add a filter bag and convert it to a liquid filtration housing unit. The SRL Series vessels come in two standard sizes, tailored to your throughput requirements. The SRL 1-25 is rated for 30 gpm, and the SRL 1-50 at 65 gpm. All sizes are available in three different closure designs for ease of cleaning/replacing and for easy removal without specific tools.

Unfiltered liquid enters the housing above the bag or basket and flows through. Because solids are contained inside the bag or basket, removal is made easy when service is required. Basket strainers and bag filters are selected to comply with specific application requirements.


SRL FEATURES																													
Inlet/Outlet Orientation: Side-in Bottom-out																													
Low Pressure Drop	Positive Cover Seal																												
Easily Cleaned	Heavy Duty Perforated Basket																												
Pipe Sizes from 0.5" to 2" NPT, RFF or quick disconnect	0.25" NPT Vent Tap																												
SRL OPTIONAL FEATURES																													
Inlet/Outlet Orientation: Side-in Side-out																													
Epoxy coating, electro-polish & fuse coating																													
Higher pressure ratings available																													
Compression devices																													
Custom designs																													
Sanitary construction																													
Mesh-lined basket for straining applications: 50 micron & higher																													
Band Clamp, Swing Bolt & Swing Away Closures available in both sizes																													
ASME Code Stamp Available on swing bolt design																													
FILTER STYLES ACCEPTED																													
Install a bag filter of indicated size	Accepts ring collar only																												
PERFORMANCE CHARACTERISTICS - SINGLE CARTRIDGE																													
<table border="1"> <caption>Performance Characteristics - Single Cartridge</caption> <thead> <tr> <th>Water Flow Rate (GPM)</th> <th>10" 1µ nominal (PSID)</th> <th>20" 1µ nominal (PSID)</th> <th>30" 1µ nominal (PSID)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.0</td> <td>0.0</td> <td>0.0</td> </tr> <tr> <td>2</td> <td>0.05</td> <td>0.03</td> <td>0.02</td> </tr> <tr> <td>4</td> <td>0.15</td> <td>0.08</td> <td>0.05</td> </tr> <tr> <td>6</td> <td>0.30</td> <td>0.15</td> <td>0.08</td> </tr> <tr> <td>8</td> <td>0.45</td> <td>0.22</td> <td>0.12</td> </tr> <tr> <td>10</td> <td>0.60</td> <td>0.30</td> <td>0.18</td> </tr> </tbody> </table>		Water Flow Rate (GPM)	10" 1µ nominal (PSID)	20" 1µ nominal (PSID)	30" 1µ nominal (PSID)	0	0.0	0.0	0.0	2	0.05	0.03	0.02	4	0.15	0.08	0.05	6	0.30	0.15	0.08	8	0.45	0.22	0.12	10	0.60	0.30	0.18
Water Flow Rate (GPM)	10" 1µ nominal (PSID)	20" 1µ nominal (PSID)	30" 1µ nominal (PSID)																										
0	0.0	0.0	0.0																										
2	0.05	0.03	0.02																										
4	0.15	0.08	0.05																										
6	0.30	0.15	0.08																										
8	0.45	0.22	0.12																										
10	0.60	0.30	0.18																										




**ORDER GUIDE**




SRL 1-25 with Swing Bolt Closure design  
(100 to 300 psi rating)

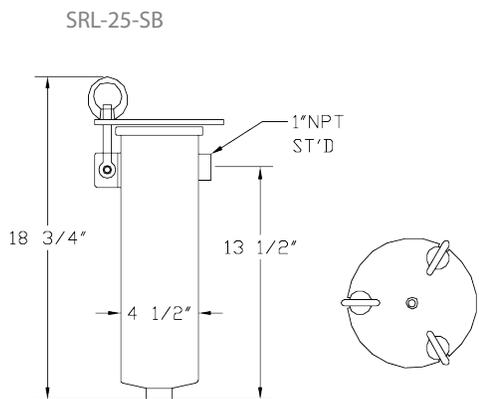

Swing Away Closure design  
(100 psi rating)

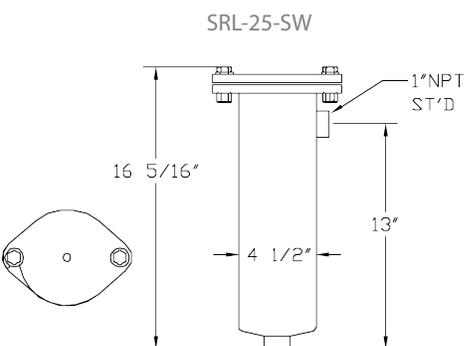

Band Clamp Closure design  
(100 psi rating)

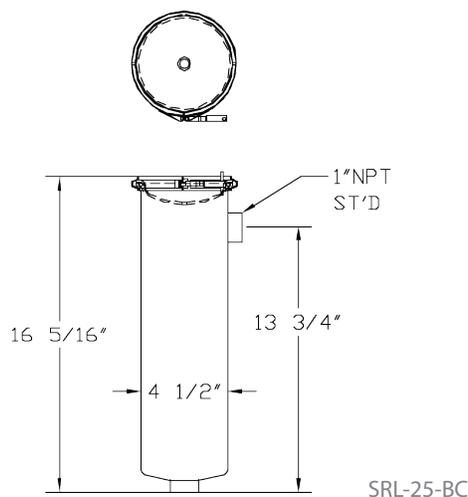

**ORDER OPTIONS**

VESSEL	
SRL	Strainrite Low Flow Series
BAG SIZE	
3	#3 size bag*
4	#4 size bag*
25	#25 size bag*
50	#50 size bag*
<small>*available in metal ring or Z-flange only</small>	
INLET/OUTLET	
1	1" NPT
1F	1" RFF
1TC	1" Triclover
1.5	1.5" NPT
1.5F	1.5" RFF
1.5TC	1.5" Triclover
2	2" NPT
2F	2" RFF
2TC	2" Triclover
MATERIAL	
A	Carbon Steel
B	304 Stainless Steel
C	316 Stainless Steel
CLOSURE	
BC	Band Clamp
SB	Swing Bolt
SW	Swing Away
OPTIONS	
SAN	Sanitary Design
SO	Side Outlet - Side Out/Same Side
EP	Electro Polish Finish
GT	Differential Pressure Gauge Ports
ML	Mesh-Lined Basket
UM	Code Stamped (SB only)

# SRX / SRMX

"X-Tra Seal" Vessels

The **SRX X-Tra Seal** vessel series was developed by our in-house engineering team for the expressed purpose of eliminating vessel-to-bag bypass, a critical element when high efficiency filtration is required. Strainrite's proprietary "Five Points of Seal" design has proven to be a major advance in filter vessel technology, performing admirably where the competition hasn't.

Featuring an effective seal on all three crucial planes of the bag, (the top, side, and bottom) as well as two additional o-rings that eliminate the likelihood of bypass along the vessel's interior wall, the **SRX** is truly your best choice for high efficiency bag filtration performance. The most efficient filter vessel deserves the most efficient filter bag! Using Strainrite's acclaimed Hi-Pro Micro Series FDA Compliant filter bags ensures the purity of your end product.



SRMX




SRX

## ORDER GUIDE




SRX AND SRMX FEATURES	
Double o-ring basket seal eliminates bypass	Built-in volume displacer in cover
Low Pressure Drop	Positive Cover Seal
Standard 150 psi design, available up to 300 psi	Stainless Steel wire mesh basket
ASME Code stamp available on all vessels	Easily cleaned
Covers are O-ring sealed	Large-area, heavy-duty baskets
Carbon steel, stainless steel (304) or (316) construction for housings	
SRX FEATURES	SRMX FEATURES
Inlet/Outlet Orientation: Side-in Bottom-out (standard) Side-in Side-out (optional)	Inlet/Outlet Orientation: Side-in Side-out (standard) Side-in Bottom-out (optional)
Adjustable height tripod stand	
OPTIONAL FEATURES	
Different outlet connections and orientation	
Higher pressure ratings	
Extra-length legs	
Heat jacketing	
Liquid displacers for easier servicing	
MADD-MAXX COMPATIBLE	
SRX and SRMX vessels are widely used in applications where high efficiency filters are required for critical applications in Pharmaceutical and Food & Beverage industries. As such, they are perfectly designed to hermetically seal Strainrite's Madd-Maxx pleated hybrid elements.	

## COMPRESSION PLUNGER

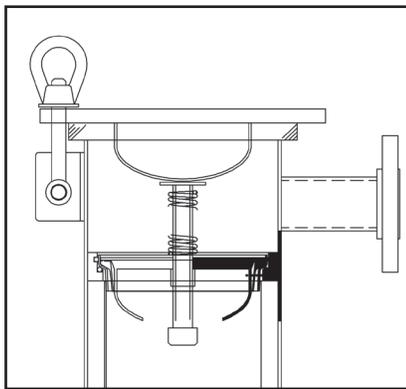

VESSEL UNDER COMPRESSION

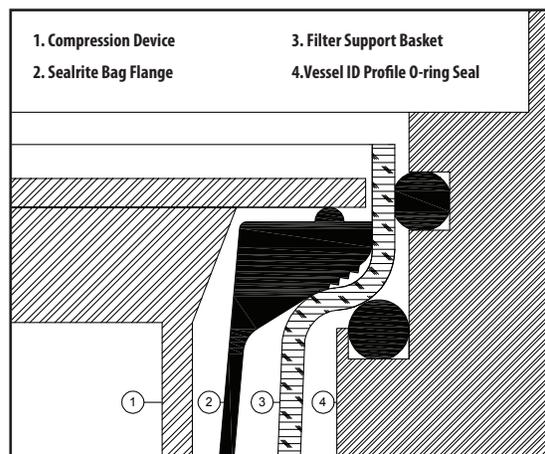

## ORDER OPTIONS - SRX

VESSEL	
SRX	Strainrite X-tra Seal Series
BAG SIZE	
1	#1 size bag
2	#2 size bag
INLET/OUTLET	
2	2" NPT
2F	2" RFF
3	3" NPT
3F	3" RFF
4	4" NPT
4F	4" RFF
MATERIALS	
A	Carbon Steel
B	304 Stainless Steel
C	316 Stainless Steel
OPTIONS	
SAN	Sanitary Design
SO	Side Outlet
EP	Electro Polish Finish
GT	Differential Pressure Gauge Ports
ML	Mesh-Lined Basket
UM	Code Stamped
U	3rd Party ASME Code Inspected
SSB	Swing Bolts/Eye Nut Stainless Steel


## ORDER OPTIONS - SRMX

VESSEL	
SRMX	Strainrite Multi-Bag X-tra Seal Series
BAG COUNT	
2, 3, 4, 5, 6, 8, 10	
INLET/OUTLET	
2	2" NPT
2F	2" RFF
3F	3" RFF
4F	4" RFF
6F	6" RFF
8F	8" RFF
10F	10" RFF
MATERIAL	
A	Carbon Steel
B	304 Stainless Steel
C	316 Stainless Steel
OPTIONS	
SAN	Sanitary Design
SIBO	Side In/Bottom Out
ML	Mesh-Lined Basket
UM	Code Stamped
U	3rd Party ASME Code Inspected
SSB	Swing Bolts/Eye Nut Stainless Steel

# SRHD


## Heavy Duty Bag Vessels

The **SRHD Heavy Duty** series is designed to handle your most difficult fluid filtration requirements. Our **SRHD** is made from heavy duty steel components and to strict quality standards, which allows our clients the ability to change from a non-stamped to an ASME UM stamped vessel at a nominal cost. The **SRHD** series incorporates our unique radial seal design that provides a hermetic seal between the basket and vessel. Utilizing a radial seal with our retainer baskets eliminates "basket rocking", which causes bypass as the basket becomes out of round. "Basket rocking" is common in low cost bag vessels that do not incorporate an O-ring seal and can cause unfiltered liquid bypass. The Strainrite Companies' **SRHD**, with a radial seal, has a machined surface that produces a positive seal to eliminate bypass. **SRHD** vessels incorporate a combination of unique qualities that places us at the top of single bag vessel design. Standard features include: a recessed basket, volume displacer welded to top cover, and a 304 stainless steel wire mesh basket to name a few. Our standard wire mesh baskets increase available filtration surface area up to 30% compared to cheaper perforated retainer baskets.

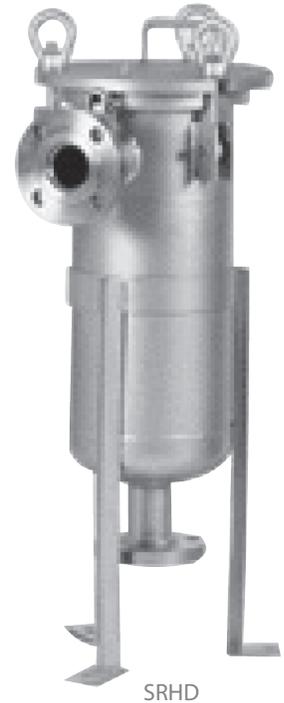

**SRHD Twin** and **SRHD Duplex** bag vessels offer economical filtration for nominally rated applications between 150 and 300 gpm.

The **SRHD Twin** filter system is comprised of two #2-size housings piped together and joined to a common header. This design divides flow equally between both housings and also reduces cost approximately 50% compared to a multi-bag housing holding 2 bags inside.

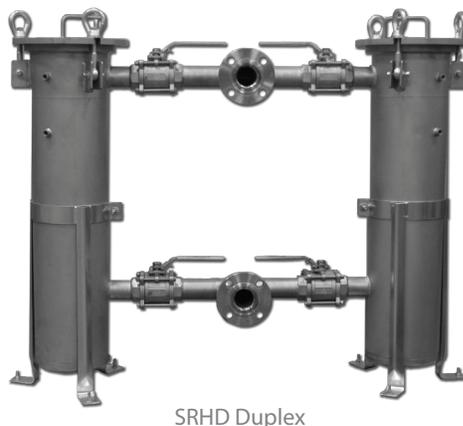

The **SRHD Duplex** filter systems offer great flexibility for continuous on-line filtration requirements. This allows for continuous operation by directing the flow from one vessel to another by opening and closing of valves. This allows one side to be serviced, while the other vessel is in use.

## ORDER GUIDE



## SRHD FEATURES

Hermetic radial o-ring sealed retainer basket: Eliminates potential for bypass and "basket rocking"	
Adjustable tri-pod stand: Offers flexibility when plumbing into an existing line	
Inlet/Outlet Orientation: Side-in Bottom-out (standard) Side-in Side-out (optional)	Pipe sizes: 0.75" to 4" NPT, RFF or quick disconnect
Standard Pressure ratings: 150 psi	Stainless Steel wire mesh basket
Swing bolt closures	0.25" NPT vent tap
Low Pressure Drop	Liquid displacers for cleaner servicing
Adjustable-height legs	Large-area, heavy-duty baskets
Built-in volume displacer in cover	O-ring seals: Buna N, EPDM, Fluorocarbon, PTFE encapsulated

## SRHD OPTIONAL FEATURES

Sanitary construction	Different outlet connections and orientations
Higher pressure ratings	Heat jacketing
ASME code stamp	Pipe or flange 1" - 4"
Custom pressure ratings: 300 psi up to 1,000 psi	Compression device
MAXX-Flow / MAXX-Trap Baskets available	

## RECOMMENDED FLOW RATES &amp; SURFACE AREA

For the following recommended flow rates, vessels need a minimum inlet/outlet size of 2" NPT. The recommended flow for basket and filter combination is for nominally rated filter bags. (High efficiency filter bags excluded)

PRODUCT	BASKET STRAINER	MESH LINED	RETAINER W/ BAG	SURFACE AREA: SQ. FT.
SRHD 1	150 gpm	100 gpm	75 gpm	2.25
SRHD 2	300 gpm	200 gpm	150 gpm	4.50

## SRHD TWIN FEATURES

Inlet/Outlet Orientation: Side-in Side-out (standard) Side-in Bottom-out (optional)	Adjustable height tripod stand
150 psi design, available to 1,000 psi	Stainless Steel wire mesh basket
Positive cover seal	Easily cleaned
Low Pressure Drop	ASME Code stamp available on all vessels

## SRHD DUPLEX FEATURES

Inlet/Outlet Orientation: Side-in Side-out (standard) Side-in Bottom-out (optional)	Adjustable height tripod stand
150 psi design, available to 1,000 psi	Stainless Steel wire mesh basket
Positive cover seal	Easily cleaned
Low Pressure Drop	ASME Code stamp available on all vessels
3-piece ball valves standard	Adjustable height tripod stand

## ORDER OPTIONS

150 PSIG standard. Contact engineering for higher pressures

VESSEL	
SRHD	Strainrite Heavy Duty Series
BAG SIZE	
1	#1 size bag*
2	#2 size bag
*Not available in Twin or Duplex	
INLET/OUTLET	
2	*2" NPT
2F	2" RFF
3	*3" NPT
3F	3" RFF
4	*4" NPT
4F	*4" RFF
*Not available in Twin or Duplex	
MATERIAL	
A	Carbon Steel
B	304 Stainless Steel
C	316 Stainless Steel
STYLE	
- Twin Duplex	Single No valves Valves
OPTIONS	
SAN	Sanitary Design
SO	*Side Outlet
SIBO	**Side In/Bottom Out
EP	Electro Polish Finish
GT	Differential Pressure Gauge Ports
ML	Mesh-Lined Basket
UM	Code Stamped
U	3rd Party ASME Code Inspected
SSB	Swing Bolts/Eye Nut Stainless Steel
MF	MAXX-Flow / MAXX-Trap Basket
*Single vessel option; side in/bottom out is standard	
**Twin / Duplex vessel option; side in/side out is standard	

# SRID

## Industrial Duty Bag Vessels


The **SRID Industrial Duty** series incorporates our unique radial seal design that provides a hermetic seal between the basket and vessel. Utilizing a radial seal with our retainer baskets eliminates “basket rocking”, which causes bypass as the basket becomes out of round. “Basket rocking” is common in low cost bag vessels that do not incorporate an O-ring seal and can cause unfiltered liquid bypass. The **SRID**, with a radial seal, has a machined surface that produces a positive seal to eliminate bypass.

The Strainrite Companies is known for developing some of the industry’s most advanced designed filter bags and hybrid cartridge elements on the market. These high efficiency filter bags and elements require a vessel that has a hermetically sealed top to fully capture all of the filters capabilities. The **SRID** is perfectly positioned to handle: standard bags, absolute rated filters and high efficiency large diameter pleated hybrid filters (Madd Maxx). The **SRID** vessel line is raising the bar in the OEM market by delivering superior value in a cost-effective design.



**SRID Twin** and **SRID Duplex** bag vessels offer economical filtration for nominally rated applications between 150 and 300 gpm.

The **SRID Twin** filter system is comprised of two #2-size housings piped together and joined to a common header. This design divides flow equally between both housings and also reduces cost approximately 50% compared to a multi-bag housing holding 2 bags inside.

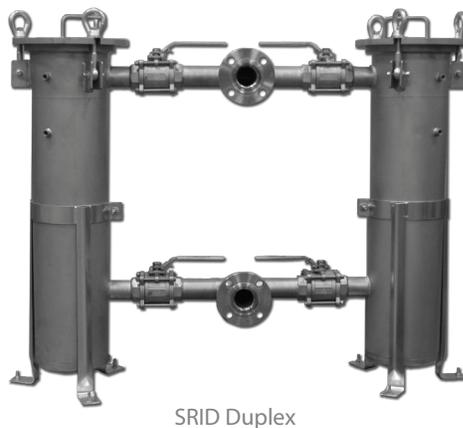

The **SRID Duplex** filter systems offer great flexibility for continuous on-line filtration requirements. This allows for continuous operation by directing the flow from one vessel to another by opening and closing of valves. This allows one side to be serviced, while the other vessel is in use.

## ORDER GUIDE



## SRID FEATURES

Hermetic radial o-ring sealed retainer basket: Eliminates potential for bypass and "basket rocking"

Adjustable tri-pod stand: Offers flexibility when plumbing into an existing line

Inlet/Outlet Orientation: Side-in Bottom-out (standard)  
Side-in Side-out (optional)

Recessed basket design: Reduces operator exposure to unfiltered liquid. Less mess when making bag changes and no spillage of unfiltered liquids

Standard Pressure ratings: 150 psi

1" Bottom Drain: Allows for full evacuation of fluids

1" NPT bottom drain port

¼" NPT vent port in lid

Perforated retainer basket

Basket is Radial o-ring sealed

Adjustable-height legs tripod stand

2" NPT & RFF inlet and outlet connections

Built-in volume displacer in cover

O-ring sealed cover

## SRID OPTIONAL FEATURES

Wire mesh basket

Mesh lined baskets for straining application from 20 to 200 mesh

Side Outlet configuration

3" NPT or RFF connections

Eye nut closure system

Filter bag compression device

MAXX-Flow / MAXX-Trap Baskets available

## SRID TWIN FEATURES

Inlet/Outlet Orientation: Side-in Side-out (standard)  
Side-in Bottom-out (optional)

150 psi design, available to 1,000 psi

1/8" Stainless Steel perforated basket (standard)

Positive cover seal

Easily cleaned

Low Pressure Drop

Adjustable height tripod stand

## SRID DUPLEX FEATURES

Inlet/Outlet Orientation: Side-in Side-out (standard)  
Side-in Bottom-out (optional)

3-piece ball valves standard

150 psi design, available to 1,000 psi

1/8" Stainless Steel perforated basket (standard)

Positive cover seal

Easily cleaned

Low Pressure Drop

Adjustable height tripod stand

## ORDER OPTIONS

## VESSEL

SRID

Strainrite Industrial Duty Series

## BAG SIZE

1  
2

#1 size bag\*  
#2 size bag

\*Not available in Twin or Duplex

## INLET/OUTLET

2  
2F  
3  
3F

\*2" NPT  
2" RFF  
\*3" NPT  
3" RFF

\*Not available in Twin or Duplex

## MATERIAL

A  
B

Carbon Steel  
304 Stainless Steel

## STYLE

-  
Twin  
Duplex

Single  
No valves  
Valves

## O-RING\*

S  
B  
V  
E  
TV

Silicone  
Buna N  
Fluorocarbon  
EPDM  
Encapsulated Fluorocarbon

\*Not applicable to Twin or Duplex

## OPTIONS

WMB  
SO/180  
EN  
EP  
MLB  
CLH  
DPG  
MF

Wire Mesh Basket  
Side Outlet 180 degrees\*  
Eye Nut  
Electro Polish Finish  
Mesh-Lined Basket  
Cover Lid Handle  
Differential Pressure Gauge Ports (2)  
MAXX-Flow / MAXX-Trap Basket


\*consult factory for other orientations

# SRVB

## Value Design Bag Vessels


The **SRVB Value Design** vessels provide economical filtration of a wide variety of liquids in a lightweight, externally polished stainless steel design, with features including a swing bolt secured, quick opening cover and an internal positive pressure bag hold-down device. The **SRVB** vessels accommodate one standard #2 bag. These vessels are manufactured from polished and passivated 304 stainless steel and rated for 150 psi (10.3 bar). For added corrosion resistance, all cover bolt and leg mounting hardware is made from stainless steel as well.

**SRVB** multi-bag vessels accommodate four or six standard #2 bags. These vessels are manufactured from polished and passivated 304 stainless steel and rated for 150 psi (10.3 bar).

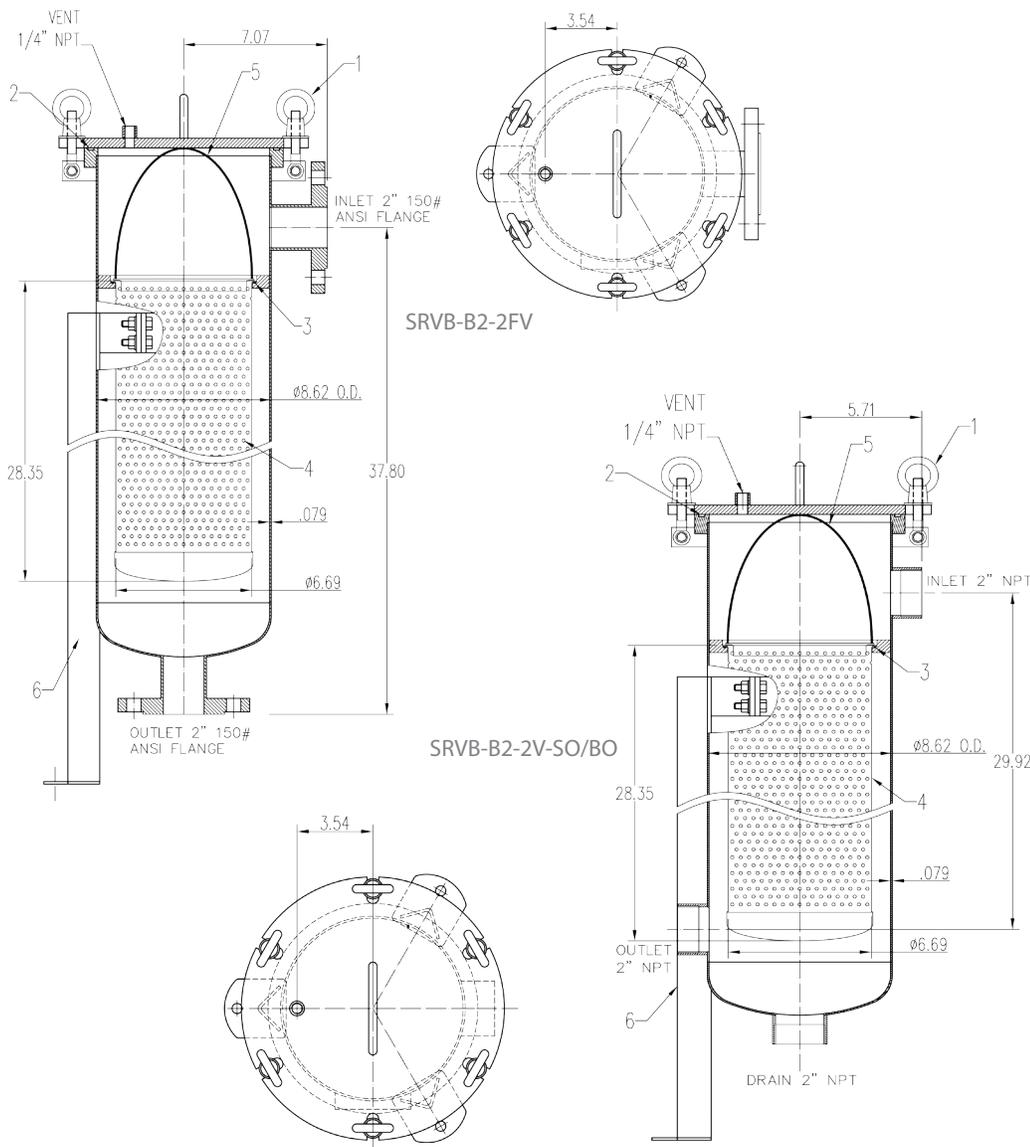



SRVB

# ORDER GUIDE

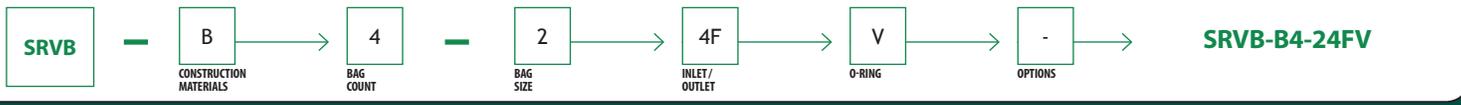


<b>SRVB SINGLE BAG</b>
NPT option offers dual 2" outlet ports on bottom and side locations
Mounting legs are adjustable, providing flexibility for installation height and orientation volumes
<b>SRVB MULTI-BAG</b>
Bottom in-line connection design
<b>SRVB SINGLE &amp; MULTI-BAG</b>
Maximum Allowable Pressure: 150 psi (10.3 bar)
Maximum Allowable Temperature: 300°F (149°C)
Swing bolted o-ring closure seal provides quick & positive seal with easy access to the vessel interior and filter bag
FNPT threaded and ANSI B16.5 flanged connections are available in specific models
Fluorocarbon seals are standard with other material options available
Standard threaded FNPT vent & drains
Standard stainless steel closure bolt hardware
Polished exterior & pickle passivate interior/exterior for enhanced corrosion resistance


ORDER OPTIONS	
VESSEL	
SRVB	Strainrite Value Design Bag Vessel
MATERIAL	
B	304 Stainless Steel
BAG COUNT	
-	One bag
4	Four bags
6	Six bags
BAG SIZE	
1	*#1 size bag
2	*#2 size bag
<i>*Single-bag units, special request only</i>	
INLET/OUTLET	
2	*2" NPT
2F	*2" RFF
4F	*4" RFF
6F	**6" RFF
<i>*Single-bag units only</i>	
<i>**Six bag count only</i>	
O-RING	
V	Fluorocarbon
B	*Buna N
E	*EPDM
<i>*Single-bag units only, Special request only Purchased and packaged separately</i>	
DUAL SIDE OUT/BOTTOM OUT	
SO/BO	This suffix only applies to SRVB-B1-2V and SRVB-B2-2V, and is always and automatically added to these 2 vessels only

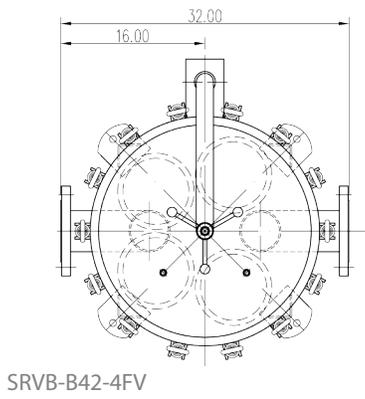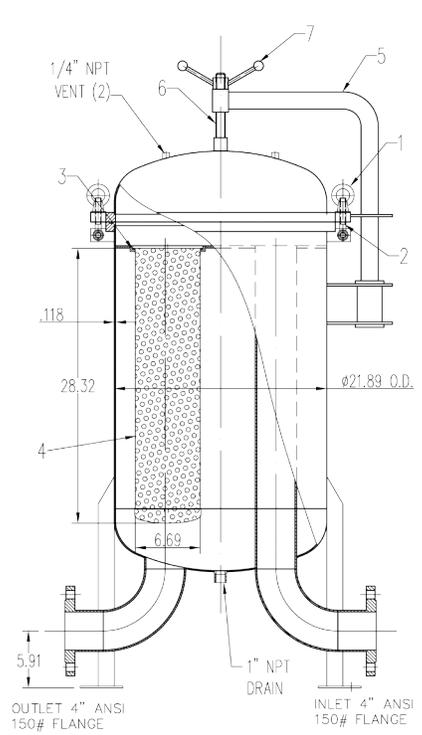

SRVB-B42-4FV

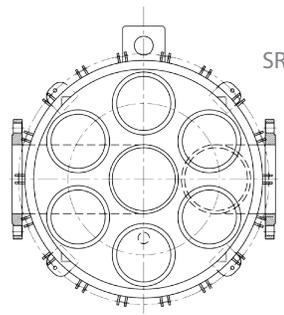

SRVB-B62-6FV

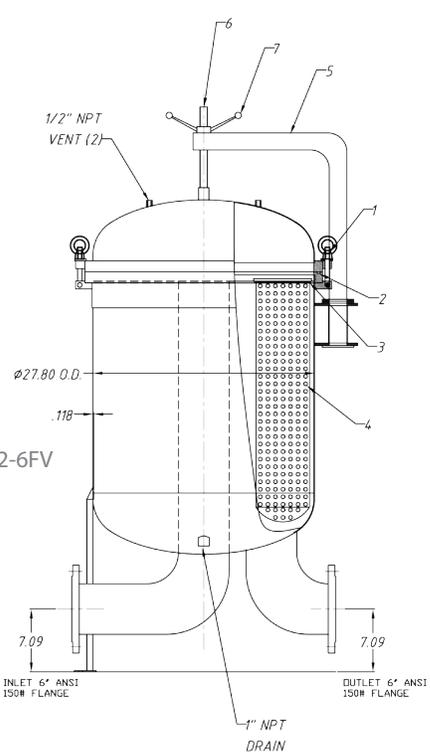

This is not a comprehensive list. We can build your vessel to suit your specifications. Call one of our customer service representatives for pricing and availability.


# SRMB

## Multi-Basket Vessels

The **SRMB Multi-Basket Filter Vessel** offers large surface areas capable of handling up to 5600 gpm in a single housing. Increasing surface area allows for longer processing time prior to filter change-out.

Containing anywhere from 2 to 28 bags/baskets in a single vessel, our standard side-inlet/side-outlet design offers the greatest inlet/outlet flexibility and doesn't require a platform to be built, in order to change-out or clean the filter elements or strainers.


SRMB  
Side In/Side Out

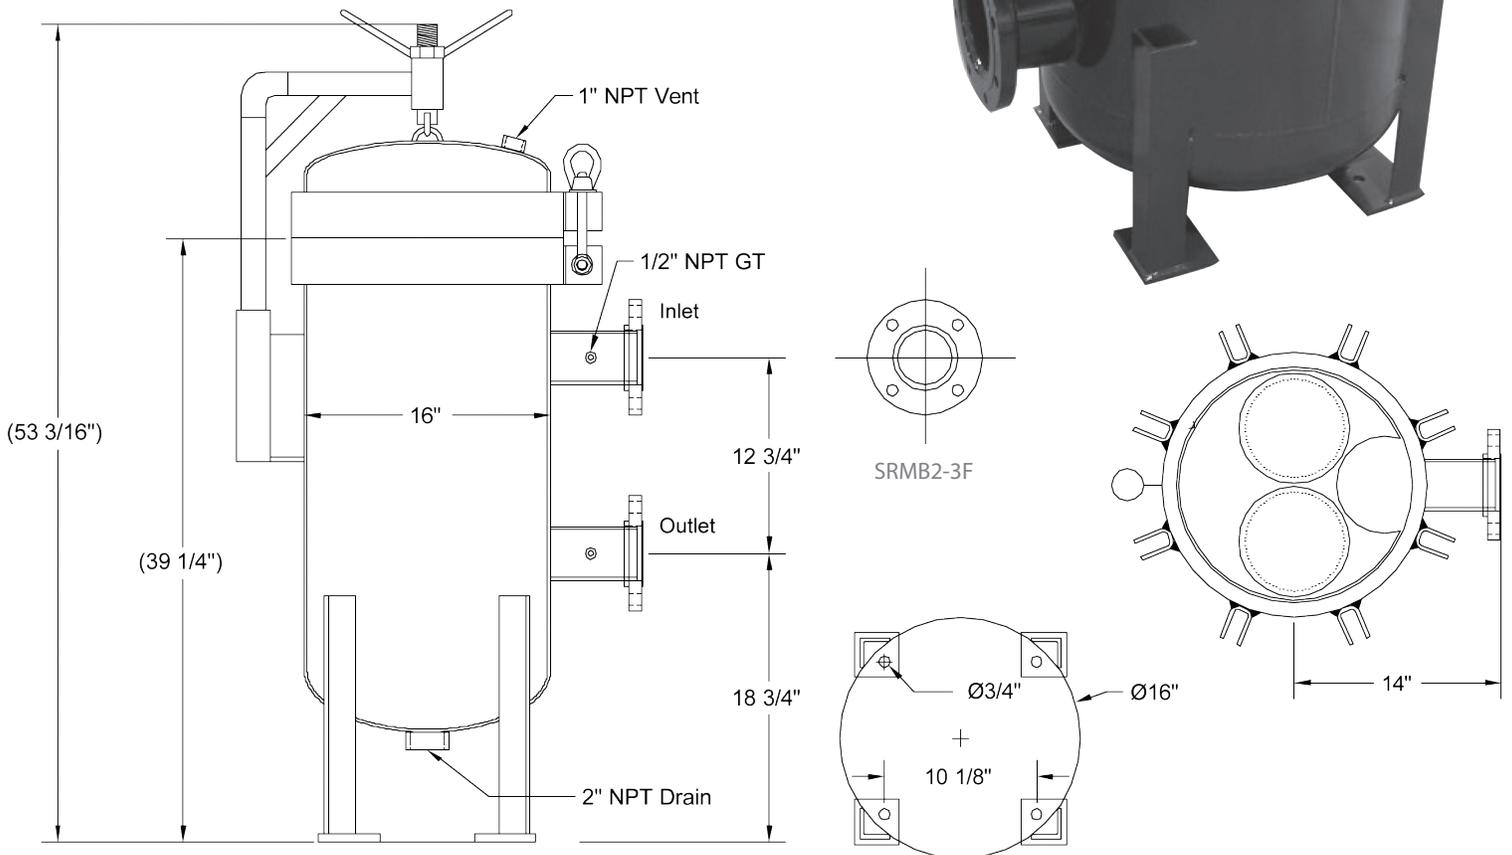

# ORDER GUIDE



SRMB STANDARD FEATURES										
Inlet/Outlet Orientation: Ergonomically superior Side-in Side-out (standard) Bottom-in Bottom-out (optional)										
Low pressure drop					Positive cover seal					
Easily cleaned					Stainless Steel perforated baskets					
1" to 2" NPT drain port on bottom					0.5" to 1" NPT pressure gauge/vent tap					
Swing bolt closures					Davit Lift					
Pipe sizes from 2" to 14" RFF connections					Filter Bag Retainer Ring					
Differential pressure gauge taps										
SRMB OPTIONAL FEATURES										
Epoxy coating and fuse coating					Pressure ratings up to 300 psi					
Easily cleaned					Stainless Steel perforated baskets					
Mesh-lined basket for straining applications: 50 micron and higher					Wire mesh support baskets					
Choice of lid-lifting devices: Hydraulic-Jack or Manual Wheel Davit					ASME code stamp					
SRMB DIMENSIONS CHART , SIDE-IN / SIDE-OUT										
UNIT TYPE	BASKET COUNT	STANDARD CONNECTION	A Overall Height	B Height to opening	C Inlet to Outlet	D Diameter	SURFACE AREA (Sq. Ft.)	MAX GPM (Strainer)	MAX GPM (Filter Bags)	MAX SHIPPING WEIGHT (Lbs)
SRMB 2	2	3" RFF	55"	40"	12 <sup>3</sup> / <sub>4</sub> "	16"	9.0	600	400	380
SRMB 3	3	3" RFF	55"	40"	12 <sup>3</sup> / <sub>4</sub> "	18"	13.5	900	600	470
SRMB 4	4	4" RFF	55"	42"	12 <sup>3</sup> / <sub>4</sub> "	24"	18.0	1200	800	660
SRMB 5	5	6" RFF	60"	42"	12 <sup>3</sup> / <sub>4</sub> "	26"	22.5	1500	1000	775
SRMB 6	6	6" RFF	60"	42"	12 <sup>3</sup> / <sub>4</sub> "	26"	27.0	1800	1200	775
SRMB 8	8	8" RFF	66"	47"	16"	30"	35.5	2400	1600	900
SRMB 10	10	8" RFF	74"	52"	16"	36"	44.5	3000	2000	1250
SRMB 12	12	8" RFF	74"	52"	16"	36"	54.0	3600	2400	1350

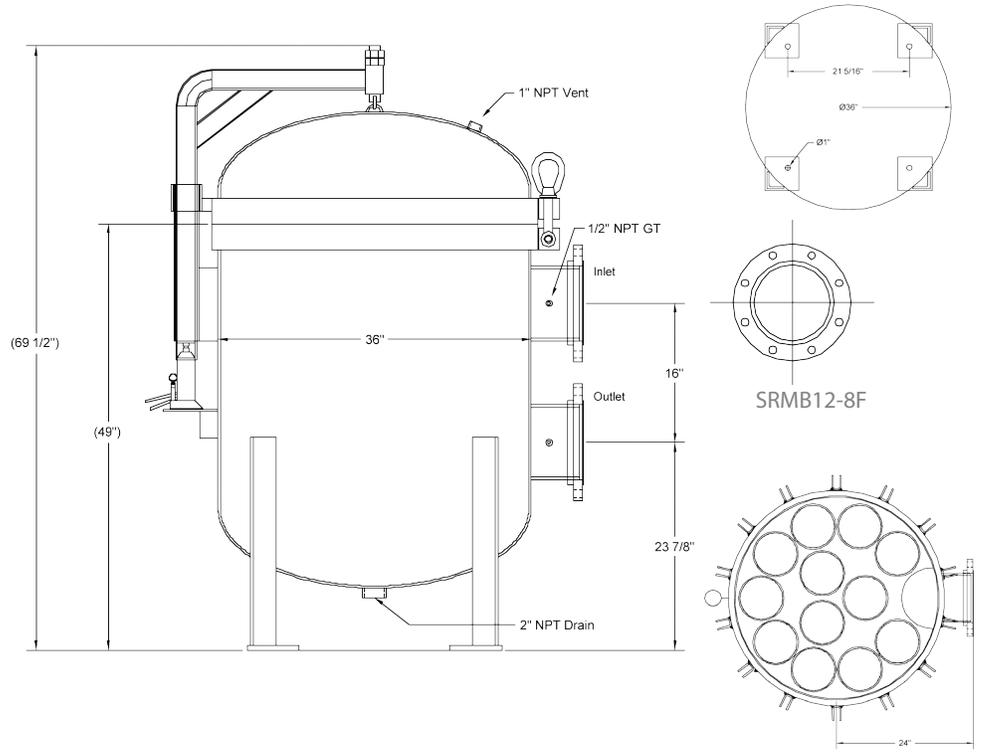

## ORDER OPTIONS

VESSEL	
SRMB	Strainrite Multi-Bag Series
BAG COUNT	
2, 3, 4, 5, 6, 8, 10, 12	
INLET/OUTLET	
2	2" NPT
2F	2" RFF
3F	3" RFF
4F	4" RFF
6F	6" RFF
8F	8" RFF
10F	10" RFF
MATERIAL	
A	Carbon Steel
B	304 Stainless Steel
C	316 Stainless Steel
OPTIONS	
BIBO	Bottom in/Bottom out
SIBO	Side In/Bottom Out
ML	Mesh-Lined Basket
U	3rd Party ASME Code Inspected
SSB	Swing Bolts/Eye Nut Stainless Steel

*This is not a comprehensive list. We can build your vessel to suit your specifications. Call one of our customer service representatives for pricing and availability.*

# SRMS

## Manifold Filtration Systems

Strainrite's **SRMS Manifold Filtration Systems** consist of two or more filter vessels piped in series or parallel. Strainrite offers countless configurations and flow designs depending on the user's specific needs. The standard design is to configure the vessels in parallel with isolation valves on each vessel.


A four-vessel system can also be configured in a box design, which allows for graduated filtration and continuous flow. Given the modular nature of manifold systems, throughput capability can be easily expanded or contracted as needed, and the footprint is adaptable to available space.

Contact our engineering personnel to configure the ideal system for your application.



SRMS -  
8 Vessels

## ORDER GUIDE

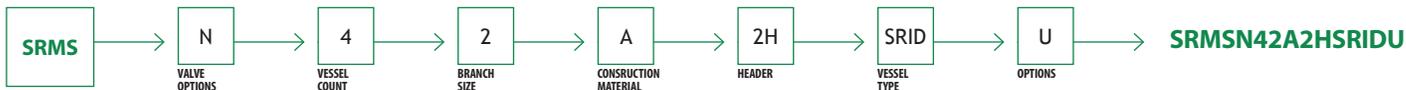

SRMS	
-in volume displacer in cover (SRHD)	150 psi design, available to 300 psi
Inlet/outlet orientation: Side-in/Bottom-out (standard)	Easily cleaned
Low pressure drop	Stainless Steel wire mesh basket
Positive cover seal	ASME Code stamp available on all SRHD-style vessels



SRMS -  
4 Vessels



## ORDER OPTIONS

VESSEL	
SRMS	Strainrite Manifold System
VALVE OPTIONS	
N V	No Valves Valves
VESSEL COUNT	
2, 3, 4, 5, 6, 8, 10	
BRANCH SIZE	
2 3	2" pipe 3" pipe
MATERIALS	
A B C	Carbon Steel 304 Stainless Steel 316 Stainless Steel
HEADER	
2H 3H 4H 6H	2" header 3" header 4" header 6" header
VESSEL TYPE	
SRHD SRID	
OPTIONS	
EP MLB UM U SSB DPG	Electro Polish Finish Mesh-Lined Basket Code Stamped 3rd Party ASME Code Inspected Swing Bolts/Eye Nut Stainless Steel Differential Manifold Pressure Gauge Ports

*This is not a comprehensive list. We can build your vessel to suit your specifications. Call one of our customer service representatives for pricing and availability.*

# AQ2

## AquaRite Vessels


Strainrite's **AquaRite Vessel** was developed by our in-house engineering team for the expressed purpose of eliminating vessel-to-bag bypass, a critical element when high efficiency filtration is required. Strainrite's proprietary "Five Points of Seal" design has proven to be a major advance in filter vessel technology, performing admirably where the competition hasn't.

Featuring an effective seal on all three crucial planes of the bag, (the top, side, and bottom) as well as two additional o-rings that eliminate the likelihood of bypass along the vessel's interior wall, the **AquaRite** is truly your best choice for potable water filtration performance.




AQ2 in a manifold system


AQ2-2F - Manifold System

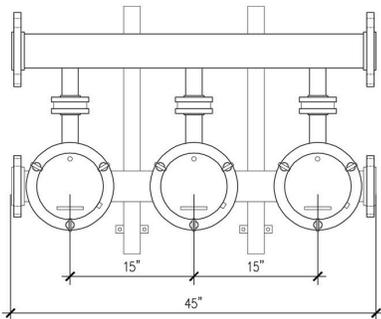

**1** TOP VIEW  
SCALE: NTS

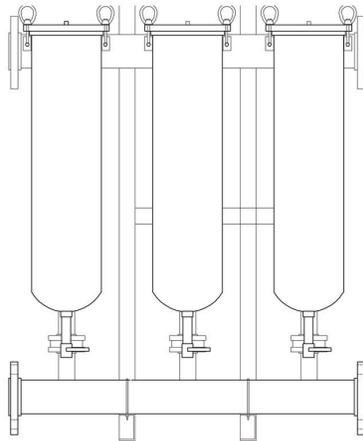


**2** FRONT VIEW  
SCALE: NTS

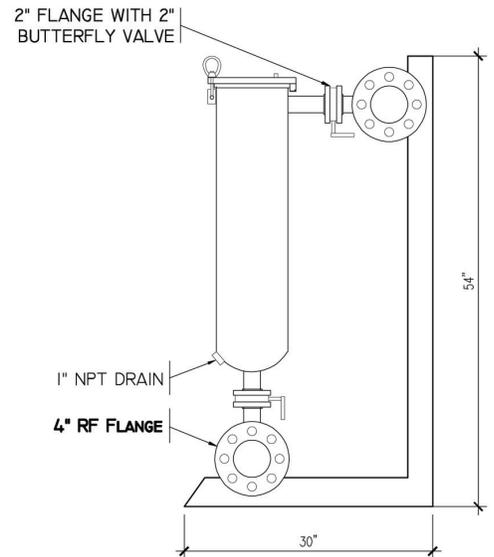

**3** SIDE VIEW  
SCALE: NTS

## ORDER GUIDE

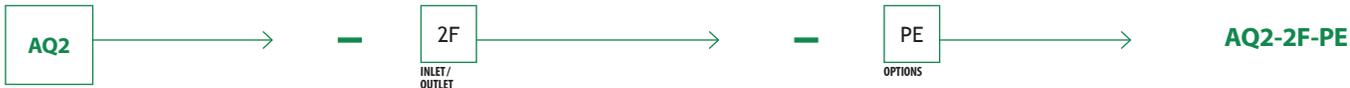

SRMB STANDARD FEATURES	
Inlet/Outlet Orientation: Side-in Bottom-out (standard)	Double o-ring basket seal, which eliminates bypass
Low pressure drop	Positive cover seal
Easily cleaned	Stainless Steel wire mesh basket
Adjustable height legs	Built-in volume displacer in cover
Standard 150 psi design	304 Stainless Steel construction
Covers are O-ring sealed	Threaded connections
DP Taps	Large area, heavy-duty baskets
1" Drain	Liquid displacer dome
SRMB OPTIONAL FEATURES	
Different outlet connections	Extra-length legs
Flange connections	Pre-fab plex units

The most efficient filter vessel deserves the most efficient filter! Using Strainrite's acclaimed, FDA-Compliant **AquaRite HiPro Micro Filter Bags** ensure the purity, and now our **Aqua-MAXX Pleated Elements** ensure the purity of your end product.

**AquaRite Vessels** have been successfully used in potable water applications across the U.S. and Canada. **AquaRite vessels** are perfectly designed to hermetically seal **AquaMAXX-PFA** & **AquaMAXX-FFA** hybrid elements and **HPM99-CC-2SR** & **HPM99-CCX-2SR** bags.



Aqua-MAXX  
pleated element



Aqua-Rite  
HPM filter bag

## ORDER OPTIONS

VESSEL	
AQ2	Strainrite AquaRite Vessel
INLET/OUTLET	
2 2F	2" NPT 2" RFF
OPTIONS	
- PE	AquaRite HPM Filter Bag Housing AquaMAXX Element Housing